



RG-N18000 Series Switches

Hardware Installation and Reference Guide V1.08

Copyright Statement

Ruijie Networks©2015

Ruijie Networks reserves all copyrights of this document. Any reproduction, excerption, backup, modification, transmission, translation or commercial use of this document or any portion of this document, in any form or by any means, without the prior written consent of Ruijie Networks is prohibited.

     ,
    ,
   are registered trademarks of Ruijie Networks.

Counterfeit is strictly prohibited.

Exemption Statement

This document is provided “as is”. The contents of this document are subject to change without any notice. Please obtain the latest information through the Ruijie Networks website. Ruijie Networks endeavors to ensure content accuracy and will not shoulder any responsibility for losses and damages caused due to content omissions, inaccuracies or errors.

Preface

Thank you for using our products. This manual will guide you through the installation of the device.

This manual describes the functional and physical features and provides the device installation steps, hardware troubleshooting, module technical specifications, and specifications and usage guidelines for cables and connectors.

Audience

It is intended for the users who have some experience in installing and maintaining network hardware. At the same time, it is assumed that the users are already familiar with the related terms and concepts.

Document Structure

- Chapter 1 "**Product Overview**" describes the main characteristics, technical specifications, and related modules of this product.
- Chapter 2 "**Preparation before Installation**" lists the safety, power supply, and site requirements that must be met before the switch can be installed.
- Chapter 3 "**Product Installation**" describes how to install the integrated switch and modules, and connect its power cables and grounding lines.
- Chapter 4 "**System Debugging**" describes the commissioning after the switch is powered on for the first time.
- Chapter 5 "**Monitoring and Maintenance**"
- Chapter 5 "**Troubleshooting**" describes possible problems met during the installation and use of the switch and solutions for such problems.
- Chapter 6 "**Replacing Modules**" describes how to perform removal and replacement procedures for the modules of the switch.
- Chapter 7 "**Cables**" describes the precautions and simple steps for cable connection and bundling.
- Appendix A "**Connector and Connection Media**"
- Appendix B "**Mini-GBIC Modules**"
- Appendix C "**Lightening Protection**"
- Appendix D "**Cabling Recommendations in Installation**"
- Appendix E "**Site Selection**"

Obtaining Technical Assistance

- Ruijie Networks website: <http://www.ruijienetworks.com/>
- Online customer services: <http://webchat.ruijie.com.cn>
- Customer service center: <http://www.ruijie.com.cn/service.aspx>
- Customer services hotline: +86-4008-111-000
- BBS: <http://support.ruijie.com.cn>
- Customer services email: Consulting@ruijienetworks.com

Related Documents

Documents	Description
Configuration Guide	Describes network protocols and related mechanisms that supported by the product, with configuration examples.
Command Reference	Describes the related configuration commands, including command modes, parameter descriptions, usage guides, and related examples.

Symbol Conventions



Note

Means reader take note. Notes contain helpful suggestions or references.



Caution

Means reader be careful. In this situation, you might do something that could result in equipment damage or loss of data.

Product Overview

Launched by Ruijie independently, RG-N18000 series next generation core switches adopt the Clos architecture and support large buffer. RG-N18000 series support dual supervisor modules and power supply redundancy, and are available in two models, namely, RG-N18014 and RG-N18010.

- The RG-N18014: designed with 14 transverse slots, supporting dual supervisor modules and providing 12 service module slots;
- The RG-N18010: designed with 10 vertical slots, supporting dual supervisor modules and providing eight service module slots

RG-N18014

Specifications

Model	RG- N18014	
Module Slot	two supervisor module slots, 12 service module slots and four switch fabric module slots	
Supervisor Module	M18014-CM M18014-CM II	
Supervisor Module Redundancy	Supported	
Switch Fabric Module	M18014-FE-D I M18014-FE-D III	M18014-FE-C I M18014-FE-C II
Service Module	M18000-24GT20SFP4XS-ED M18000-48GT-ED M18000-44SFP4XS-ED M18000-08XS-ED M18000-48XS-DB M18000-24QXS-DB M18000-12QXS-DB M18000-24XS4QXS-DB RG-WALL 1600-B-ED M18000-48GT-EF M18000-44SFP4XS-EF M18000-08XS-EF <hr/>  <p>Note RG-N18014 does not support the M18000-48GT-P-ED service module.</p> <hr/>	M18000-44SFP4XS-CB M18000-16XS-CB M18000-40XS-CB M18000-16XT-CB M18000-10QXS-CB
Hot Swapping	Supported	
Power Supply Module	RG-PA1600I: 90 to180 VAC, power: 1200W; 180 to 264V, power: 1600W RG-PA600I: 90 to180 VAC, power: 600W: 180 to 264V, power: 600W RG-PD1600I: -40 to -75 VDC, power: 1400W RG-PD600I: -40 to -75 VDC, power: 600W	
High Voltage DC Power Supply	RG-PA1600I: 192 to 216 VDC, power: 1200W; 216 to 285 VDC, power: 1600W RG-PA600I: 192 to 285 VDC, power: 600W	
Power Supply Redundancy	The power supply redundancy of the same model is supported	
Fan Module	M14-FAN	
EMC Standards	GB9254-2008 CLASS A	
Safety Standards	GB4943-2011	
Operating Temperature	0 to 50°C	

Storage Temperature	-40 to 70°C
Operating Humidity	10%-90% RH (non-condensing)
Altitude	Long term operation height: 3000m at 50°C. The temperature decreases by 1°C as the altitude ranging from 3000m to 4000m increases by each 200m.
	Operation height: 4000m max
	Storage height: 4000m max
MTBF	216,000 hours
Noise	72.9 dB at 35°C 82.7 dB at 50°C
Weight	Net weight: 107.55 kg (including the chassis and fans)
Dimensions (W x D x H)	442 mm x 776 mm x 886.2 mm (cable management brackets excluded), 20U 442 mm x 814 mm x 886.2 mm (cable management brackets included), 20U



Note

The weight only includes that of the empty chassis and fans. The whole device's weight is subject to that of the modules selected.



Note


The RG-N18014 switch is an A-class product and may cause radio disturbance to surroundings. In this case, users are advised to take proper measures against the disturbance.

Product Appearance

The hardware system of the RG-N18014 switch is composed of the chassis, the power system, modules and the cooling system.

- The power system provides eight power supply slots and supports N+M power supply redundancy. Users are recommended to configure redundancy for the power supplies.
- The RG-N18014 switch provides two supervisor module slots, 12 service module slots and four switch fabric module slots. The supervisor modules support 1+1 redundancy. Users are recommended to configure redundancy for the supervisor modules. Users may choose different service modules as needed.
- The cooling system is composed of the fan trays and air filters. Fan trays are at the back of the chassis. The air filters of the service module and the supervisor module are on a side of the chassis. The air filter of the switch fabric module is on the front of the chassis.


Figure 0-1 Appearance of the RG-N18014 Switch

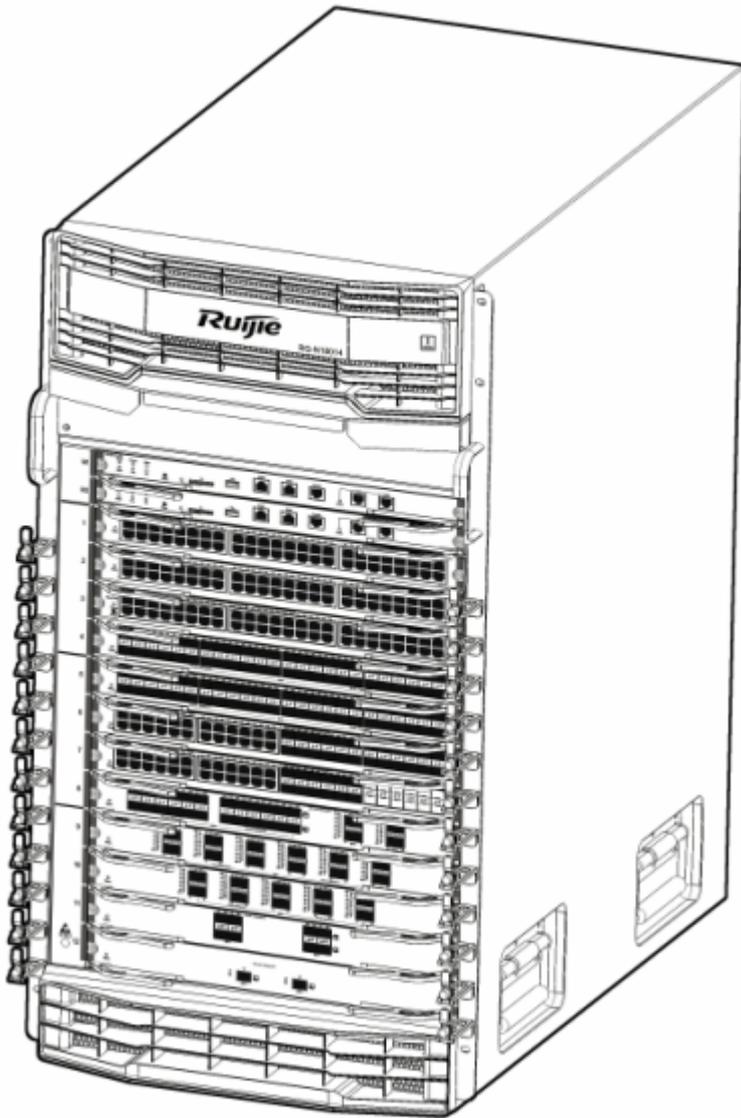

Front Panel

The front panel of the RG-N18014 switch is shown in Figure 1-2.

Figure 0-2 Front Panel of the RG-N18014 Switch

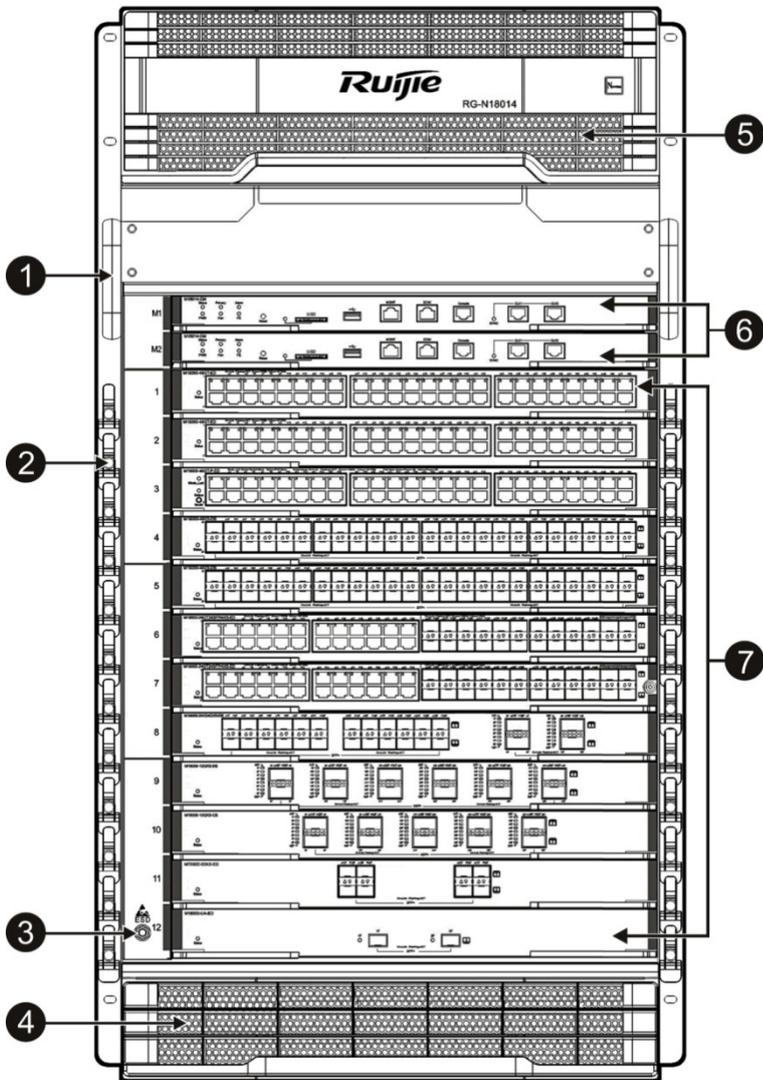

- Note:
- ① Handle
 - ② Cable management bracket
 - ③ Anti-static wrist strap socket
 - ④ Plastic cover for the air filter of the switch fabric module
 - ⑤ Plastic cover for the power module
 - ⑥ Supervisor module slot
 - ⑦ Service module slot




Caution Ensure the supervisor module, service module, switch fabric module and power supply module are removed from the chassis before you move or transport the RG-N18014 chassis.

Back Panel

The back panel of the RG-N18014 switch is shown in Figure 1-3.

Figure 0-3 Back Panel of the RG-N18014 Switch

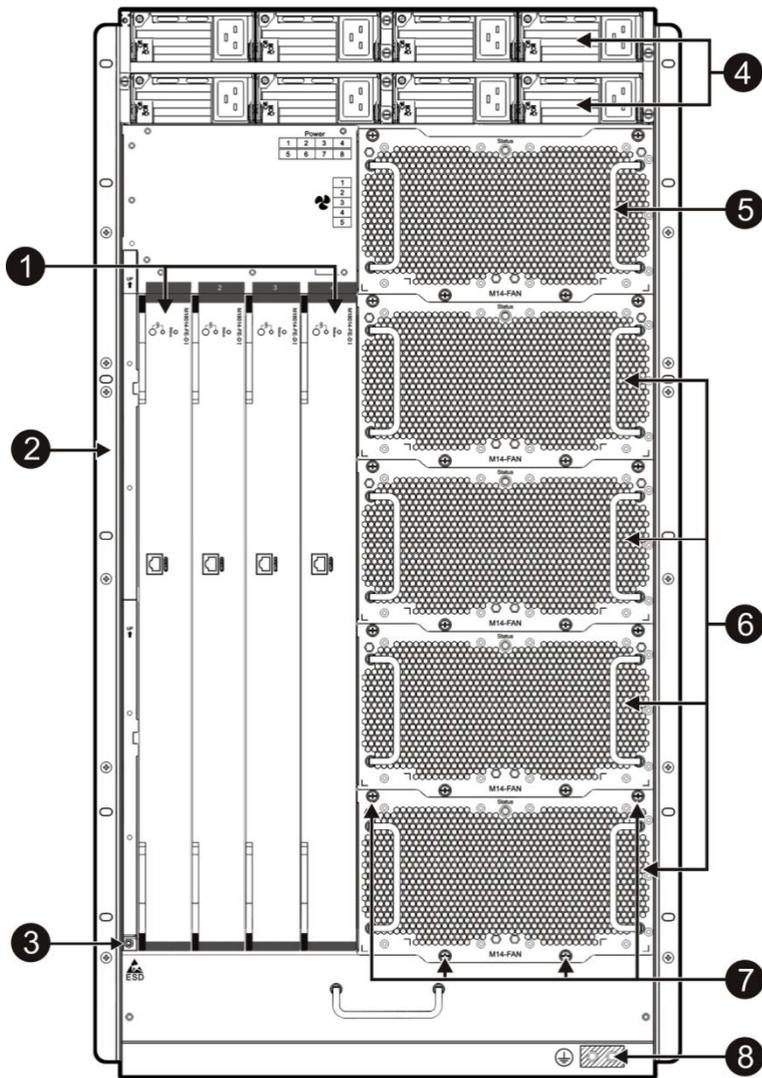

Note:

- ① Switch fabric module slots
- ② Air filter module
- ③ Anti-static wrist strap socket
- ④ System power module slots

- ⑤ Fan of the switch fabric module
- ⑥ Fan of the service and supervisor modules
- ⑦ Captive screws of the fan tray
- ⑧ Grounding point

Power supply

The RG-N18014 switch adopts both AC and DC power supply input.

- AC power supply input: The RG-PA1600I and the RG-PA600I power supply modules are supported. The two types of power supply modules support power management. The supervisor module of the RG-N18014 switch can read the power supply information and implement flexible and intelligent power management.
- DC power supply input: The RG-PD1600I and the RG-PD600I power supply modules are supported. The two types of power supply modules support power management. The supervisor module of the RG-N18014 switch can read the power supply information and implement flexible and intelligent power management.




Note

The RG-N18014 switch supports N+M power supply redundancy to improve the system stability and reliability. We recommend users to configure N+M redundancy for power supply modules.

Heat Dissipation System


The operating environment temperature of the RG-N18014 switch ranges between 0 and 50°C. The thermal design must satisfy the requirement on the device's reliability in the temperature range while ensuring the device's safety and maintainability. According to the thermal design of the RG-N18014 switch, fans are used to draw air for forced convection cooling in order to ensure that the device works properly in the specified environment.

Figure 0-4 Ventilation and Heat Dissipation System of the RG-N18014 Switch (Air Intakes)

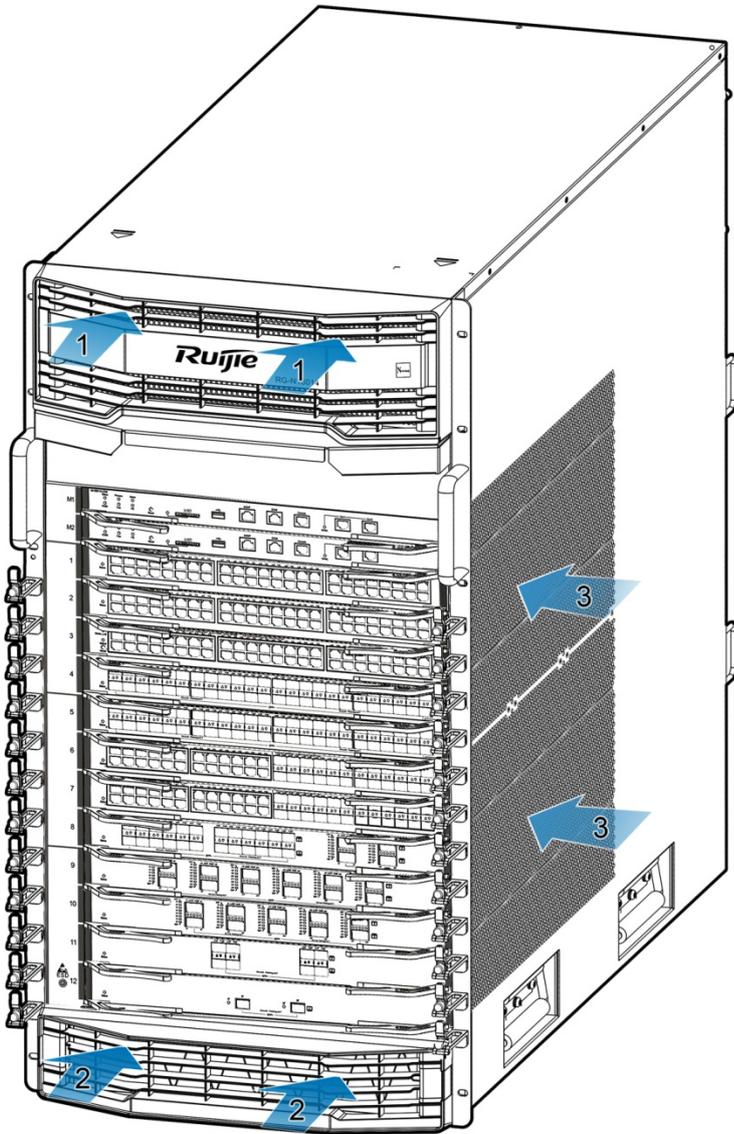

- Note:
- ① Air intakes for power modules
 - ② Air intakes for switch fabric modules
 - ③ Air intakes for service and supervisor modules

Figure 0-5 Ventilation and Heat Dissipation System of the RG-N18014 Switch (Exhaust Vents)

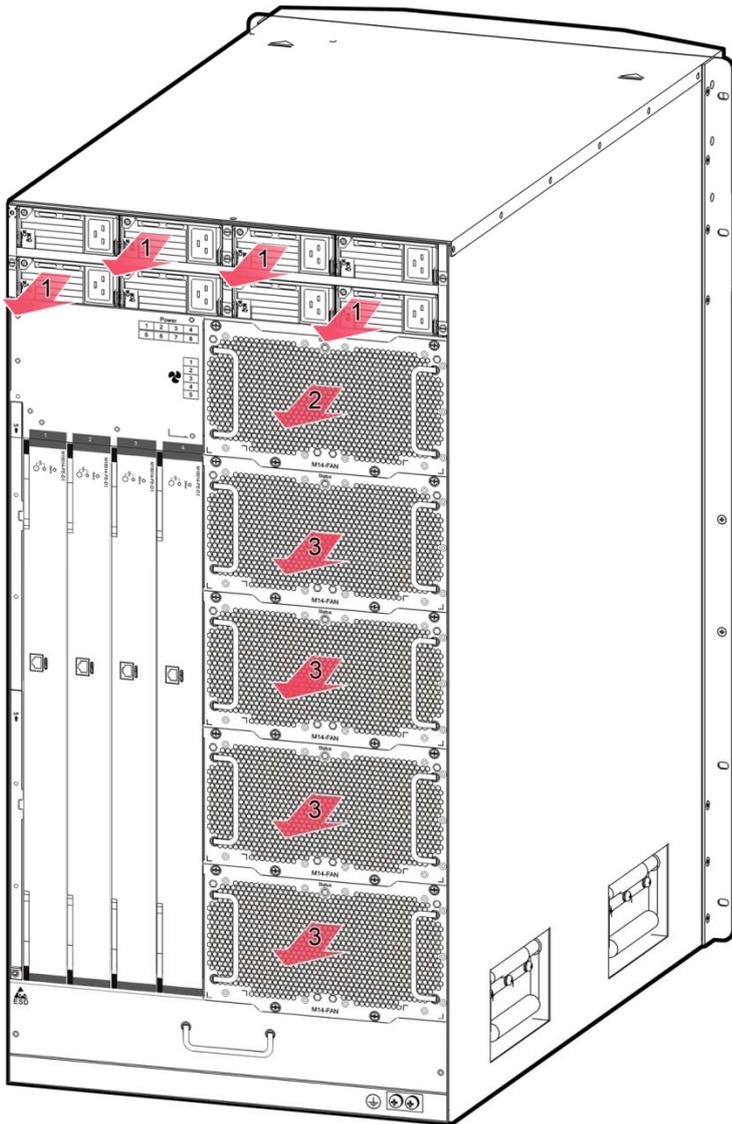

- Note:
- ① Exhaust vents for power modules
 - ② Exhaust vents for switch fabric modules
 - ③ Exhaust vents for service and supervisor modules

For the supervisor and service modules, air flows across the chassis from the right intakes to the back vents.

For the power supply modules, air flows in from the front intakes and out from the back vents.

For the switch fabric module, air flows across the chassis from the front intakes to the back vents.



Note

The chassis should be mounted in a place with sufficient space for air circulation. Sufficient space (10 cm at least) must be reserved at the air intakes and exhaust vents for ventilation.



Note

If any module slot is unoccupied, install a filler panel to enable proper airflow.

RG-N18010

Specifications

Model	RG-N18010	
Module Slot	Two supervisor module slots, eight service module slots and four switch fabric module slots	
Supervisor Module	M18010-CM M18010-CM II	
Switch Fabric Module	M18010-FE-D I M18010-FE-D III	M18010-FE-C I
Service Module	M18000-24GT20SFP4XS-ED M18000-48GT-ED M18000-48GT-P-ED M18000-44SFP4XS-ED M18000-08XS-ED M18000-48XS-DB M18000-24QXS-DB M18000-12QXS-DB M18000-24XS4QXS-DB RG-WALL 1600-B-ED M18000-48GT-EF M18000-44SFP4XS-EF M18000-08XS-EF	M18000-44SFP4XS-CB M18000-16XS-CB M18000-40XS-CB M18000-16XT-CB M18000-10QXS-CB
Hot Swapping	Supported	
Supervisor Module Redundancy	Supported	
Power Supply Module	RG-PA1600I: 90 to 180 VAC, power: 1200W; 180 to 264 VAC, power: 1600W RG-PA600I: 90 to 180 VAC, power: 600W; 180 to 264 VAC, power: 600W RG-PD1600I: -40 to -75 VDC, power: 1400W RG-PD600I: -40 to -75 VDC power: 600W RG-PA1600I-P: 90 to 175 VAC, power: 1200W; 176 to 264 VAC, power: 1600W	
High Voltage DC Power Supply	RG-PA1600I: 192 to 216 VDC, power: 1200W; 216 to 285 VDC, power: 1600W RG-PA600I: 192 to 285 VDC, power: 600W	
Power Supply Redundancy	The power supply redundancy of the same model is supported.	
Fan Module	Three M10-FAN-R modules and one M10-FAN-F module	
EMC Standards	GB9254-2008 CLASS A	
Safety Standards	GB4943-2011	
Operating Temperature	0 to 50°C	
Storage Temperature	-40 to 70°C	
Operating Humidity	10%-90% RH (non-condensing)	
Altitude	Long term operation altitude: 3000m at 50°C. The temperature decreases by 1°C as the altitude ranging from 3000m to 4000m increases by each 200m.	
	Operation altitude: 4000m max	
	Storage altitude: 4000m max	
MTBF	259,000 hours	
Noise	67.4 dB at 35°C	
	77.4 dB at 50°C	
Weight	Net weight: 103.32 kg (including chassis and fans)	
Dimensions (W x D x H)	442 mm x 776 mm x 797.3 mm (cable management brackets excluded), 18U 442 mm x 836 mm x 797.3 mm (cable management brackets included), 18U	

**Note**

The weight only includes that of the empty chassis and fans. The whole device's weight is subject to that of the modules selected.

**Note**


The RG-N18010 switch is an A-class product and may cause radio disturbance to surroundings. In this case, users are advised to take proper measures against the disturbance.

Product Appearance

The hardware system of the RG-N18010 switch is composed of the chassis, power system, system modules and cooling system.

- The power system provides eight power supply slots and supports N+M power supply redundancy. Users are recommended to configure redundancy for the power supplies.
- The power system also provides two PoE power supply slots and supports 1+1 power supply redundancy. Users are recommended to configure redundancy for the power supplies.
- The RG-N18010 provides two supervisor module slots, eight service module slots and four switch fabric module slots. The supervisor modules support 1+1 redundancy. We recommend users to configure redundancy for supervisor modules. Users may select different service modules as needs.
- The heat dissipation system is composed of fan trays and air filters. The system fan tray is at the back of the chassis, the fan tray of the switch fabric module is in the front of the chassis, and the air filter is at the bottom of the front panel.


Figure 0-6 Appearance of the RG-N18010 Switch

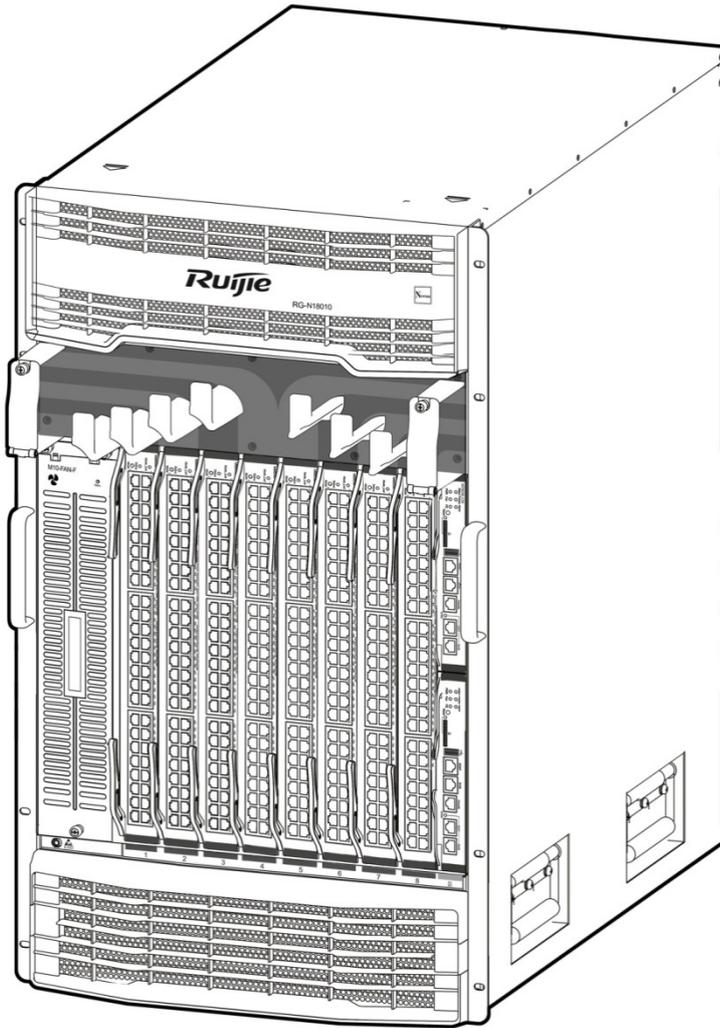

Front Panel

The front panel of the RG-N18010 switch is shown in Figure 1-7.

Figure 0-7 Front Panel of the RG-N18010 Switch

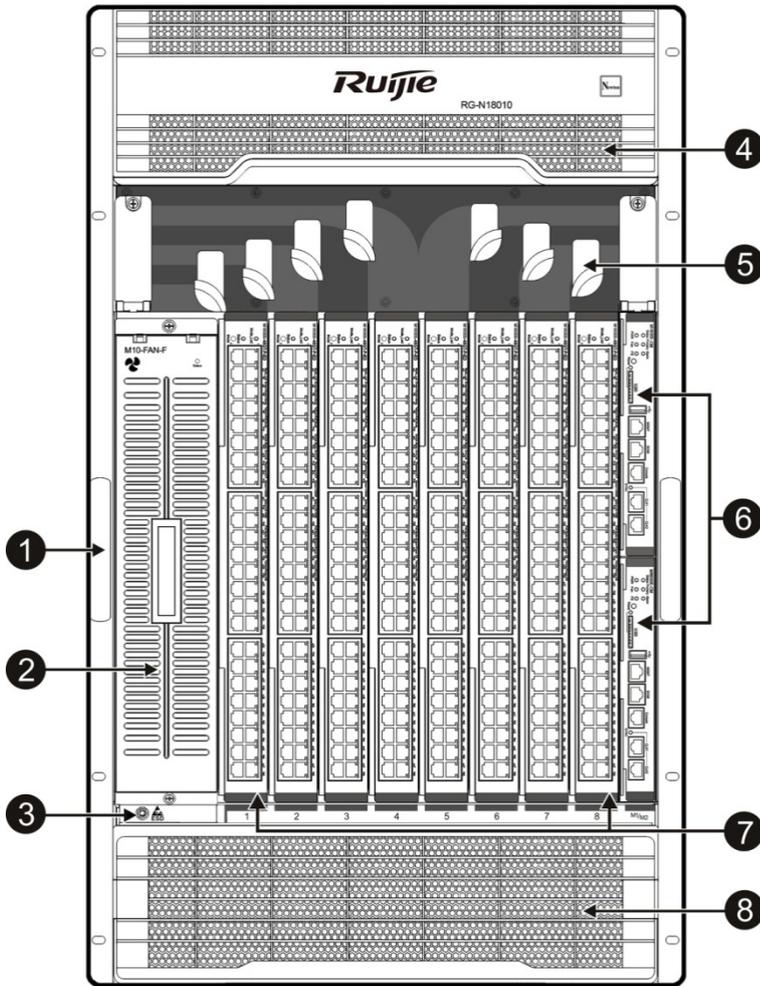

Note:

- | | |
|--|--|
| ① Handle | ⑤ Cable management bracket |
| ② Fan tray of the switch fabric module | ⑥ Supervisor module slots |
| ③ Anti-static wrist strap socket | ⑦ Service module slots |
| ④ Plastic cover for the power module | ⑧ Plastic cover for the air filter of the service module |




Caution

Ensure the supervisor module, service module, switch fabric module and power supply module are removed from the chassis before you move or transport the RG-N18010 chassis.

Back Panel

The back panel of the RG-N18010 switch is shown in the following figure.

Figure 0-8 Back Panel of the RG-N18010 Switch

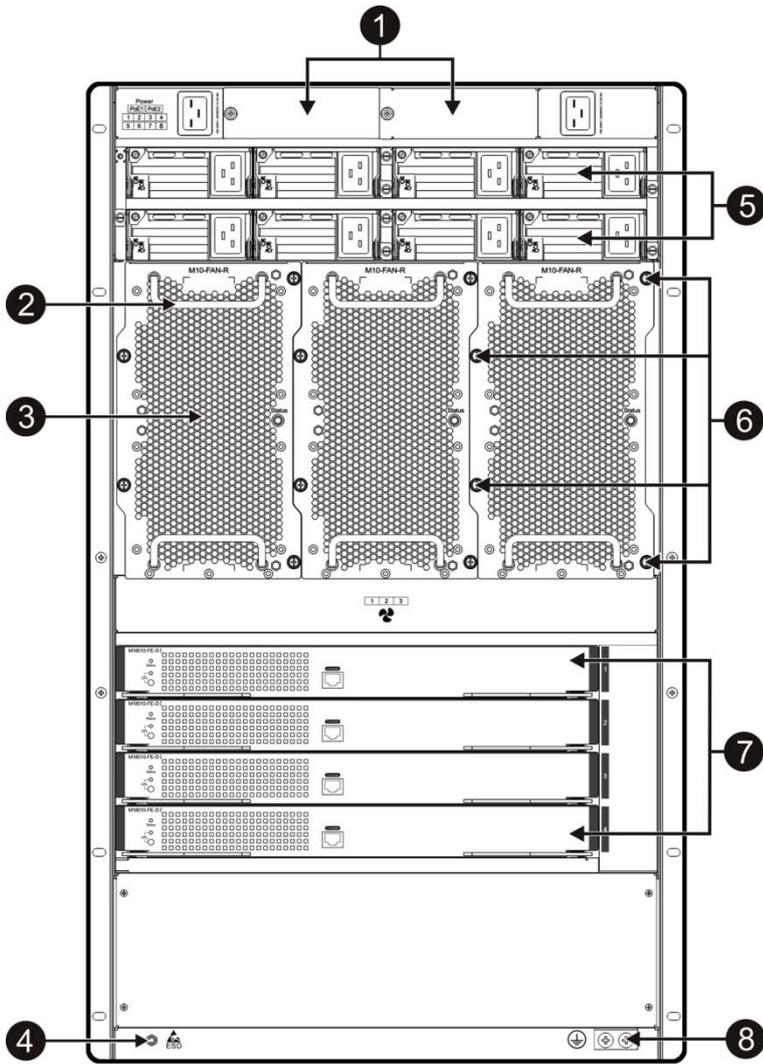

- Note:
- | | |
|--|----------------------------------|
| ① PoE power modules slots | ⑤ Power module slots |
| ② Fan tray handle | ⑥ Captive screws of the fan tray |
| ③ Fans of service module and supervisor module | ⑦ Switch fabric modules slots |
| ④ Anti-static wrist strap socket | ⑧ Grounding point |

Power Supply

- AC input: The RG-PA1600I and the RG-PA600I power supply modules are supported. The two types of power supply modules support power management. The supervisor module of the RG-N18010 switch can read the power supply information and implement flexible and intelligent power management.
- DC input: The RG-PD1600I and the RG-PD600I power supply modules are supported. The two types of power supply modules support power management. The supervisor module of the RG-N18010 switch can read the power supply information and implement flexible and intelligent power management.
- PoE input: The RG-PA1600I-P power module is supported. The power module supports power management. The supervisor module of the RG-N18010 switch can read the power supply information and implement flexible and intelligent power management.




Note

The RG-N18010 switches support N+M system power redundancy and 1+1 PoE power redundancy to improve the system stability and reliability. We recommend users to configure redundancy for power supply modules.

Heat Dissipation Solution


The operating environment temperature of RG-N18010 switches ranges between 0 and 50°C. The heat dissipation design must satisfy the requirement on the device's reliability in the temperature range while ensuring the device's safety and maintainability. The supervisor and service modules use fans to draw air and the switch fabric module uses fans to blow air for forced convection in order to ensure that the device works properly in the specified environment.

Figure 0-9 Ventilation and Heat Dissipation System of the RG-N18010 Switch (Air Intakes)

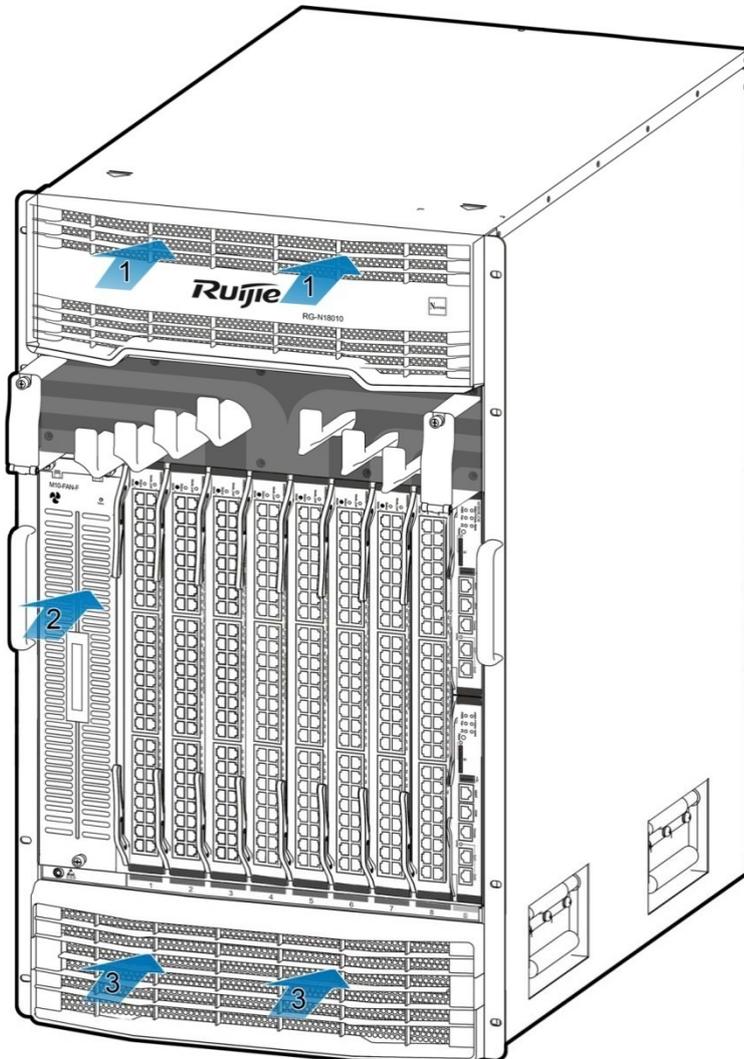

- Note:
- ① Air intakes for power modules
 - ② Air intakes for switch fabric modules
 - ③ Air intakes for service and supervisor modules

Figure 0-10 Ventilation and Heat Dissipation System of the RG-N18010 Switch (Exhaust Vents)

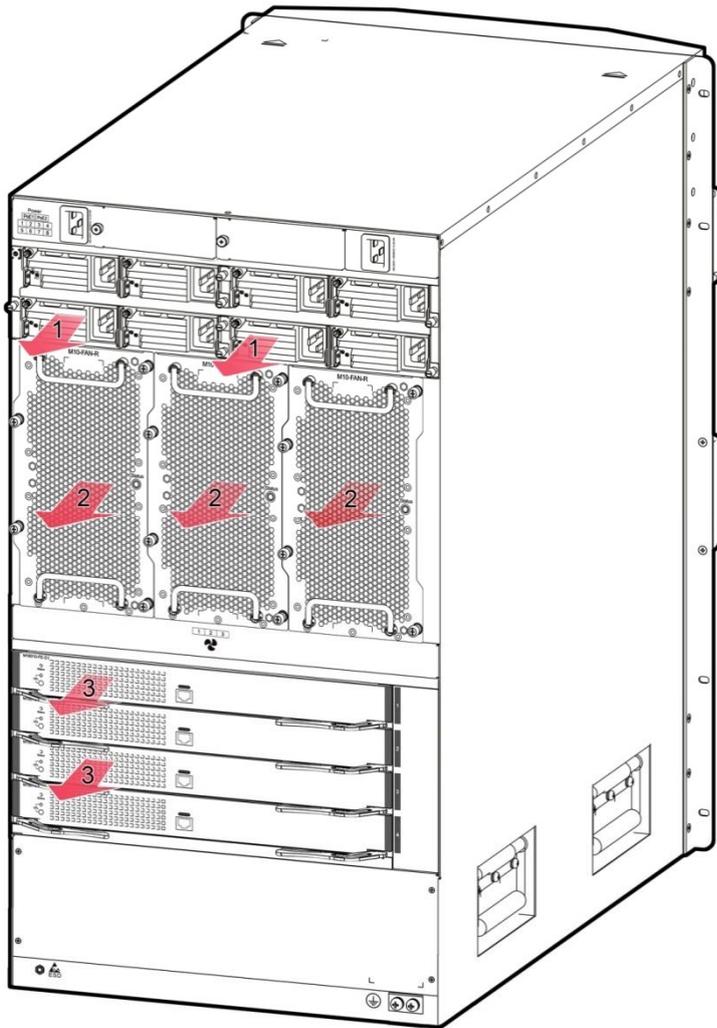

- Note:
- ① Exhaust vents for power modules
 - ② Exhaust vents for service and supervisor modules
 - ③ Exhaust vents for switch fabric modules

- For supervisor and service modules, air flows in from the front intakes and out from the upper vents.
- For the switch fabric modules, air flows in from the front intakes and out from the back vents.
- For the power supply modules, air flows in from the front intakes and out from the back vents.



Note

The chassis should be mounted in a place with sufficient space for air circulation. Sufficient space (10 cm at least) must be reserved at the air intakes and exhaust vents for ventilation.



Note

If any module slot is unoccupied, install a filler panel to enable proper airflow.

Module

The RG-N18000 switch adopts the module-based design. Compliant with industry standards, the design divides modules and integrates module interfaces to ensure the switch system's functioning and independence of various function modules.


The modules of the RG-N18000 switch provide 10/100/1000M auto-sensing Ethernet copper ports, 1000 Mbps/100 Mbps SFP (single-mode/multi-mode) optical fiber interfaces and 10G/40G optical fiber interfaces.

M18014-CM

M18014-CM is the supervisor module of the RG-N18014 series switches and is designed with management and switching functions.

Module Appearance

Figure 0-11 Appearance of the M18014-CM Module



External Port

The M18014-CM module provides five external ports:

- **Universal Serial Bus (USB) port:** By connecting to the USB port, the USB storage devices can store logs, host version, alarms and other diagnosis information, facilitating online upgrade of switch software and storage of logs.



Note

To secure data and prevent damage to the device, it is recommended to use high-quality flash disks produced by reliable manufacturers. The USB port is compatible with most USB controllers but may be unable to identify some USB disk models.



Note

The USB flash disk must be installed to the USB port before you upgrade the software.

- **Secure digital (SD) memory card slot:** By connecting to the SD card slot, SD memory cards can store logs, host version, alarms and other diagnosis information, facilitating online upgrade of switch software and storage of logs.



Note

To secure data and prevent damage to the device, it is recommended to use high-quality SD memory cards produced by reliable manufacturers. The SD card slot is compatible with most SD memory cards but may be unable to identify some SD memory cards.

- **Console port:** As a serial communications port, it uses the RS-232 interface level and standard RJ-45 connector. This port is used to connect the device to serial ports of background terminal computers to perform tasks including system commissioning, configuration, maintenance, management, and host software loading.
- **10/100/1000M MGMT port:** As the 10/100/1000BASE-T Ethernet port, it uses the RJ-45 connector. This port can be used to connect the device to the Ethernet port of the background computer to load programs. Use the standard cable to connect the device to the Ethernet port of the background computer.
- **Data Center Manageability Interface (DCMI):** DCMI implements the management for the data center devices. For example, you can check the temperature, configure the serial port, reset the device, and power on/off device. These operations cannot be achieved through the Console port or the MGMT port. Use the standard cable to connect the device to the Ethernet port of the background computer.

Button

The M18014-CM module provides a Reset button, which is used to reset the system. If the button is held for less than five seconds, it is a short press; if the button is held for five seconds or longer, it is a long press.

**Note**

In case of a short press, the Status LED flashes in green, and the device resets within five seconds after the press. In case of a long press, the Status LED flashes in green and then flashes in red; the device resets within five seconds after the press.

**Note**

Press the button, and the system starts to collect information, during which the device will not restart. After the collection is complete, the device restarts automatically. Hold the button for a while and release it, the device restarts automatically in five seconds.

LED

LED	Identification on the panel	Status	Meaning
System LED	Status	Off	The module is NOT receiving power.
		Solid red	The module is faulty.
		Blinking green	Initialization is in progress. Continuous blinking indicates errors.
		Solid green	The module is operational.
Primary/standby supervisor module LED	Primary	Off	The module acts as the standby supervisor module.
		Solid green	The module acts as the primary supervisor module.
Fault alarm LED	Alarm	Off	No fault
		Solid red	The system fails, interrupting functioning of the whole system or a module; the device may be damaged if it continues operating.
		Solid yellow	The device overheats, which will affect the system performance. The system may continue operating.
SD card slot status LED	None	Off	SD card is not installed, or the is not connected.
		Solid green	An SD card is loaded.
		Blinking green	Data is being accessed from and written into an SD card
FE module status LED	FE	Off	The module is NOT receiving power or is NOT in the position.
		Solid green	The module is operational.
		Solid red	The module is faulty.
		Blinking green	Initialization is in progress. Continuous blinking indicates errors.
Fan status LED	FAN	Solid green	The fan is operational.
		Solid yellow	The fan is NOT in the position.
		Solid red	The fan is faulty.
Power status LED	PWR	Off	The power supply module is NOT in the position.
		Solid green	The power supply module is operational.
		Solid red	The power supply module is faulty.
DCMI port status LED	None	Off	The DCMI port is NOT connected.
		Green	The DCMI port is connected at 1000Mbps.
		Yellow	The DCMI port is connected at 10/100Mbps.
		Blinking	The DCMI port is transmitting or receiving data.
MGMT port status LED	None	Off	The MGMT port is NOT connected.
		Green	The MGMT port is connected at 1000Mbps.
		Yellow	The MGMT port is connected at 10/100Mbps.
		Blinking	The MGMT port is transmitting or receiving data.

Specifications

Model	M18014-CM
-------	-----------

CPU	Quad-core CPU, each core with the clock speed of 1.0G
BOOTROM	8 MB
Flash Memory	512 MB
SDRAM	DDRIII 4 GB
External Port	One Console port; One 10/100/1000M MGMT port; One DCMI port; One SD card slot; One USB port
Button	One Reset button
Power Consumption	<40W
Hot Swapping	Supported
Management Redundancy	Supported
EMC Standards	GB9254-2008 CLASS A
Safety Standards	GB4943-2011
Operating Temperature	0 to 50°C
Storage Temperature	-40 to 70°C
Operating Humidity	10% to 90% RH (non-condensing)
MTBF	265,000 hours
Weight	Net weight: 3.1 kg
Dimensions (W x D x H)	399 mm x 440 mm x 29.98 mm




Caution The M18014-CM adopts the CR2032 lithium battery. The device may explode if a wrong battery model is used. Used batteries should be properly disposed of.

M18014-CM II

M18014-CM II is the supervisor module of the RG-N18014 series switches and is designed with management and switching functions.

Module Appearance

Figure 0-12 Appearance of the M18014-CM II Module



External Port

The M18014-CM II module provides four external ports:

- **Universal Serial Bus (USB) port:** By connecting to the USB port, USB storage devices can store logs, host version, alarms and other diagnosis information, facilitating online upgrade of switch software and storage of logs.



Note To secure data and prevent damage to the device, it is recommended to use high-quality flash disks produced by reliable manufacturers. The USB port is compatible with most USB controllers but may be unable to identify some USB disk models.

- **Secure digital (SD) memory card slot:** By connecting to the SD card slot, SD memory cards can store logs, host version, alarms and other diagnosis information, facilitating online upgrade of switch software and storage of logs.



Note

To secure data and prevent damage to the device, it is recommended to use high-quality SD memory cards produced by reliable manufacturers. The SD card slot is compatible with most SD memory cards but may be unable to identify some SD memory cards.

- Console port: As a serial communications port, it uses the RS-232 interface level and standard RJ-45 connector. This port is used to connect the device to serial ports of background terminal computers to perform tasks including system commissioning, configuration, maintenance, management, and host software loading.
- 10/100/1000M MGMT port: As the 10/100/1000BASE-T Ethernet port, it uses the RJ-45 connector. This port can be used to connect the device to the Ethernet port of the background computer to load programs. Use the standard cable to connect the device to the Ethernet port of the background computer.

Button

The M18014-CM II module provides a Reset button, which is used to reset the system. If the button is held for less than five seconds, it is a short press; if the button is held for five seconds or longer, it is a long press.



Note

In case of a short press, the Status LED flashes in green, and the device resets within five seconds after the press. In case of a long press, the Status LED flashes in green and then flashes in red; the board resets within five seconds after the press.



Note

Press the button, and the system starts to collect information, during which the device will not restart. After the collection is complete, the device restarts automatically. Hold the button for a while and release it, the device restarts automatically in five seconds.

LED

LED	Identification on the panel	Status	Meaning
System LED	Status	Off	The module is NOT receiving power.
		Solid red	The module is faulty.
		Blinking green	Initialization is in progress. Continuous blinking indicates errors.
		Solid green	The module is operational.
Primary/standby supervisor module LED	Primary	Off	The module acts as the standby supervisor module.
		Solid green	The module acts as the primary supervisor module.
Fault alarm LED	Alarm	Off	No fault
		Solid red	The system is faulty, interrupting functioning of the whole system or a module; the device may be damaged if it continues operating.
		Solid yellow	The device overheats, which will affect the system performance. The system may continue operating.
SD card slot status LED	None	Off	SD card is not installed, or is not connected.
		Solid green	An SD card is loaded.
		Blinking green	Data is being accessed from and written into an SD card.
FE module status LED	FE	Off	The module is NOT receiving power or is NOT in the position.
		Solid green	The module is operational.
		Solid red	The module is faulty.
		Blinking green	Initialization is in progress. Continuous blinking indicates errors.
Fan status LED	FAN	Solid green	The fan is operational.
		Solid yellow	The fan is NOT in the position.

		Solid red	The fan is faulty.
Power status LED	PWR	Off	The power supply module is NOT in the position.
		Solid green	The power supply module is operational.
		Solid red	The power supply module is faulty.
MGMT port status LED	None	Off	The MGMT port is NOT connected.
		Green	The MGMT port is connected at 1000Mbps.
		Yellow	The MGMT port is connected at 10/100Mbps.
		Blinking	The MGMT port is transmitting or receiving data.

Specifications

Model	M18014- CM II
CPU	32-core CPU , each core with the clock speed of 1.2G
BOOTROM	8 MB
Flash Memory	8 GB
SDRAM	DDRIII 16 GB
External Port	One Console port; One 10/100/1000M MGMT port; One SD card slot; One USB port
Button	One Reset button
Power Consumption	<102W
Hot Swapping	Supported
Management Redundancy	Supported
EMC Standards	GB9254-2008 CLASS A
Safety Standards	GB4943-2011
Operating Temperature	0 to 50°C
Storage Temperature	-40 to 70°C
Operating Humidity	10% to 90% RH (non-condensing)
MTBF	305,000 hours
Weight	Net weight: 3.58 kg
Dimensions (W x D x H)	399 mm x 440 mm x 29.98 mm




Caution The M18014-CM II adopts the CR2032 lithium battery. The device may explode if a wrong battery model is used. Used batteries should be properly disposed of.

M18010-CM

M18010-CM is the supervisor module of the RG-N18010 switches and is designed with management and switching functions.

Module Appearance

Figure 0-5 Appearance of the M18010-CM

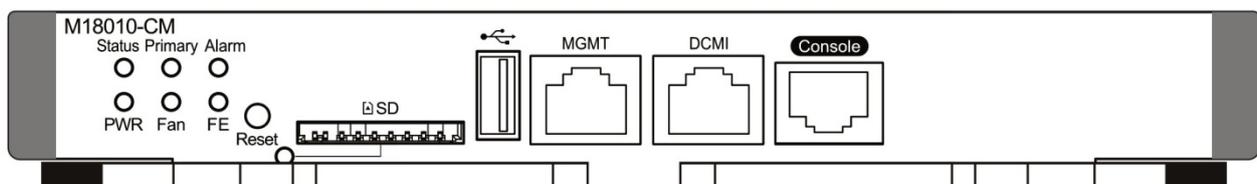

External Port

The M18010-CM module provides five external ports:

- USB port: By connecting to the USB port, USB storage devices can store logs, host version, alarms and other diagnosis information, facilitating online upgrade of switch software and storage of logs.



Note

To secure data and prevent damage to the device, it is recommended to use high-quality flash disks produced by reliable manufacturers. The USB port is compatible with most USB controllers but may be unable to identify some USB disk models.

- SD card slot: By connecting to the SD card slot, SD memory cards can store logs, host version, alarms and other diagnosis information, facilitating online upgrade of switch software and storage of logs.



Note

To secure data and prevent damage to the device, it is recommended to use high-quality SD memory cards produced by reliable manufacturers. The SD card slot is compatible with most SD memory cards but may be unable to identify some SD memory cards.



Note

The USB flash disk must be installed to the USB port before you upgrade the software.

- Console port: As a serial communications port, it uses the RS-232 interface level and standard RJ-45 connector. This port is used to connect the serial port of terminal computers running on the background for such tasks as system debugging, configuration, maintenance, management, and host software loading.
- 10/100/1000M MGMT port: As the 10/100/1000BASE-T Ethernet port, it uses the RJ-45 connector. This port can be used to connect the device to the Ethernet port of the background computer to load programs. Use the standard cable to connect the device to the Ethernet port of the background computer.
- DCMI port: As the 10/100/1000BASE-T Ethernet port, it uses the RJ-45 connector. This port can be used to connect the device to the Ethernet port of the background computer to manage the device. Use the standard cable to connect the device to the Ethernet port of the background computer.
- Data Center Manageability Interface (DCMI): DCMI implements the management for the data center devices. For example, you can check the temperature, configure the serial port, reset the device, and power on/off device. These operations cannot be achieved through the Console port or the MGMT port. Use the standard cable to connect the device to the Ethernet port of the background computer.

Button

The M18010-CM module provides a Reset button, which is used to reset the system. If the button is held for less than five seconds, it is a short press; if the button is held for five seconds or longer, it is a long press.



Note

In case of a short press of the button, the Status LED flashes in green, and the device resets within five seconds. In case of a long press, the Status LED flashes in green and then flashes in red; the device resets within five seconds.



Note

Press the button, and the system starts to collect information, during which the device will not restart. After the collection is complete, the device restarts automatically. Hold the button for a while and release it, the device restarts automatically in five seconds.

LED

LED	Identification on the panel	Status	Meaning
System LED	Status	Off	The module is NOT receiving power.
		Solid red	The module is faulty.
		Blinking green	Initialization is in progress. Continuous blinking indicates

			errors.
		Solid green	The module is operational
Primary/standby supervisor module LED	Primary	Off	The module acts as the standby supervisor module.
		Solid green	The module acts as the primary supervisor module.
Fault alarm LED	Alarm	Off	No fault
		Solid red	The system fails, interrupting functioning of the whole system or a module; the device may be damaged if it continues operating.
		Solid yellow	The device overheats, which will affect the system performance. The system may continue operating.
SD card slot status LED	None	Off	SD card is not installed, or is not connected.
		Solid green	An SD card is loaded.
		Blinking green	Data is being accessed from and written into an SD card
FE module status LED	FE	Off	The module is NOT receiving power or is NOT in the position.
		Solid red	The module is faulty.
		Blinking green	Initialization is in progress. Continuous blinking indicates errors.
Fan status LED	FAN	Solid green	The fan is operational.
		Solid yellow	The fan is NOT in the position.
		Solid red	The fan is faulty.
Power status LED	PWR	Off	The power supply module is NOT in the position.
		Solid green	The power supply module is operational.
		Solid red	The power supply module is faulty.
DCMI port status LED	None	Off	The DCMI port is NOT connected.
		Green	The DCMI port is connected at 1000Mbps.
		Yellow	The DCMI port is connected at 10/100Mbps.
		Blinking	The DCMI port is transmitting or receiving data.
MGMT port status LED	None	Off	The MGMT port is NOT connected.
		Green	The MGMT port is connected at 1000Mbps.
		Yellow	The MGMT port is connected at 10/100Mbps.
		Blinking	The MGMT port is transmitting or receiving data.

Specifications

Model	M18010-CM
CPU	Quad-core CPU, each core with the clock speed of 1.0G
BOOTROM	8 MB
Flash Memory	512 MB
SDRAM	DDRIII 4 GB
External Port	One Console port; One 10/100/1000M MGMT port; One DCMI port; One SD card slot; One USB port
Button	One Reset button
Power Consumption	<40W
Hot Swapping	Supported
Management Redundancy	Supported
EMC Standards	GB9254-2008 CLASS A
Safety Standards	GB4943-2011
Operating	0 to 50°C

Temperature	
Storage Temperature	-40 to 70°C
Operating Humidity	10% to 90% RH (non-condensing)
MTBF	329,000 hours
Weight	Net weight: 1.68 kg
Dimensions (W x D x H)	199 mm x 440 mm x 29.98 mm




Caution The M18010-CM adopts the CR2032 lithium battery. The device may explode if a wrong battery model is used. Used batteries should be properly disposed of.

M18010-CM II

M18010-CM II is the supervisor module of the RG-N18010 switches and is designed with management and switching functions.

Module Appearance

Figure 0-6 Appearance of the M18010-CM II Module

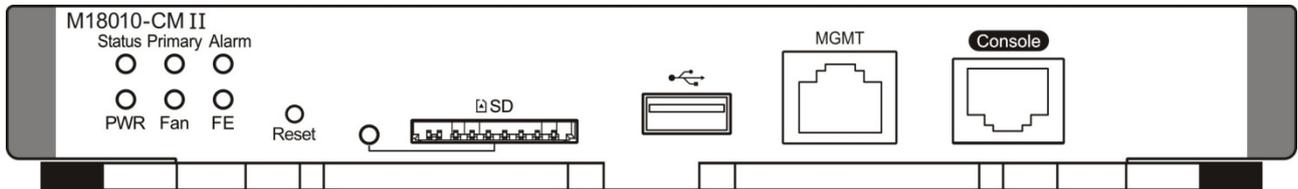

External Port

M18010-CM II module provides four external ports:

- USB port: By connecting to the USB port, USB storage devices can store logs, host version, alarms and other diagnosis information, facilitating online upgrade of switch software and storage of logs.



Note To secure data and prevent damage to the device, it is recommended to use high-quality flash disks produced by reliable manufacturers. The USB port is compatible with most USB controllers but may be unable to identify some USB disk models.

- SD card slot: By connecting to the SD card slot, SD memory cards can store logs, host version, alarms and other diagnosis information, facilitating online upgrade of switch software and storage of logs.



Note To secure data and prevent damage to the device, it is recommended to use high-quality SD memory cards produced by reliable manufacturers. The SD card slot is compatible with most SD memory cards but may be unable to identify some SD memory cards.

- Console port: As a serial communications port, it uses the RS-232 interface level and standard RJ-45 connector. This port is used to connect the serial port of terminal computers running on the background for such tasks as system debugging, configuration, maintenance, management, and host software loading.
- 10/100/1000M MGMT port: As the 10/100/1000BASE-T Ethernet port, it uses the RJ-45 connector. This port can be used to connect the device to the Ethernet port of the background computer to load programs. Use the standard cable to connect the device to the Ethernet port of the background computer.

Button

The M18010-CM II module provides a Reset button, which is used to reset the system. If the button is held for less than five seconds, it is a short press; if the button is held for five seconds or longer, it is a long press.

**Note**

In case of a short press of the button, the Status LED flashes in green, and the device resets within five seconds. In case of a long press, the Status LED flashes in green and then flashes in red; the device resets within five seconds.

**Note**

Press the button, and the system starts to collect information, during which the device will not restart. After the collection is complete, the device restarts automatically. Hold the button for a while and release it, the device restarts automatically in five seconds.

LED

LED	Identification on the panel	Status	Meaning
System LED	Status	Off	The module is NOT receiving power.
		Solid red	The module is faulty.
		Blinking green	Initialization is in progress. Continuous blinking indicates errors.
		Solid green	The module is operational
Primary/standby supervisor module LED	Primary	Off	The module acts as the standby supervisor module.
		Solid green	The module acts as the primary supervisor module.
Fault alarm LED	Alarm	Off	No fault
		Solid red	The system is faulty, interrupting functioning of the whole system or a module; the device may be damaged if it continues operating.
		Solid yellow	The device overheats, which will affect the system performance. The system may continue operating.
SD card slot status LED	None	Off	SD card is not installed, or is not connected.
		Solid green	An SD card is loaded.
		Blinking green	Data is being accessed from and written into an SD card
FE module status LED	FE	Off	The module is NOT receiving power or is NOT in the position.
		Solid red	The module is faulty.
		Blinking green	Initialization is in progress. Continuous blinking indicates errors.
Fan status LED	FAN	Solid green	The fan is operational.
		Solid yellow	The fan is NOT in the position.
		Solid red	The fan is faulty.
Power status LED	PWR	Off	The power supply module is NOT in the position.
		Solid green	The power supply module is operational.
		Solid red	The power supply module is faulty.
MGMT port status LED	None	Off	The MGMT port is NOT connected.
		Green	The MGMT port is connected at 1000Mbps.
		Yellow	The MGMT port is connected at 10/100Mbps.
		Blinking	The MGMT port is transmitting or receiving data.

Specifications

Model	M18010-CM II
CPU	32-core CPU, each core with the clock speed of 1.2G
BOOTROM	8 MB
Flash Memory	512 MB
EMMC	8 GB

SDRAM	DDRIII 16 GB
External Port	One Console port, One 10/100/1000M MGMT port; One SD card slot; One USB port
Button	One Reset button
Power Consumption	<102W
Hot Swapping	Supported
Management Redundancy	Supported
EMC Standards	GB9254-2008 CLASS A
Safety Standards	GB4943-2011
Operating Temperature	0 to 50°C
Storage Temperature	-40 to 70°C
Operating Humidity	10% to 90% RH (non-condensing)
MTBF	399,000 hours
Weight	Net weight: 2.0 kg
Dimensions (W x D x H)	199 mm x 440 mm x 29.98 mm




Caution The M18010-CM II adopts the CR2032 lithium battery. The device may explode if a wrong battery model is used. Used batteries should be properly disposed of.

M18000-24GT20SFP4XS-ED

Module Appearance

Figure 0-7 Appearance of the M18000-24GT20SFP4XS-ED Module

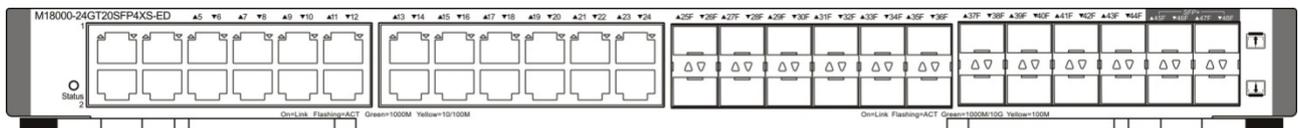

External Port

M18000-24GT20SFP4XS-ED provides 24 10/100/1000BASE-T RJ45 ports, 20 SFP ports and four SFP+ ports. The SFP ports support the rate of 100/1000M and hot swapping, the RJ45 ports support auto-negotiation at 10/100/1000 Mbps, and the SFP+ ports support 10G SFP+ modules, Gigabit SFP modules and hot swapping. Copper ports do not support half-duplex at 10/100Mbps.



Note The M18000-24GT20SFP4XS-ED supports 10G SFP+ and Gigabit SFP modules. 10G SFP+ modules cannot be used as Gigabit SFP modules.

LED

LED	Identification on the panel	Status	Meaning
System LED	Status	Off	The module is NOT receiving power.
		Solid red	The module is faulty.
		Blinking green	Initialization is in progress. Continuous blinking indicates errors.

		Solid green	The module is operational
		Solid yellow	System temperature exceeds the alarm temperature, affecting system performance. But the system continues running.
GT port LED	Link/ACT	Off	The port link is NOT connected.
		Solid green	The port is connected at 1000Mbps.
		Solid yellow	The port is connected at 10/100Mbps.
		Blinking	The port is transmitting and receiving data.
SFP port LED	Link/ACT	Off	The port link is NOT connected.
		Solid green	The port is connected at 1000Mbps.
		Solid yellow	The port is connected at 100Mbps.
		Blinking	The port is transmitting and receiving data.
SFP+ port LED	Link/ACT	Off	The port link is NOT connected.
		Solid green	The port is connected.
		Blinking	The port is transmitting and receiving data.

Specifications


Model	M18000-24GT20SFP4XS-ED	
CPU	Quad-core CPU, each core with the clock speed of 1.0G	
BOOTROM	8 MB	
Flash Memory	512 MB	
SDRAM	DDRIII 1 GB	
Port Type	24 10/100/1000BASE-T RJ-45 ports, 20 SFP ports and four SFP+ ports	
Transmission Medium	<p>10/100/1000BASE-T 100BASE-FX(1310nm)</p> <p>100BASE-FX (1550nm) supported by SFP+ ports. 1000BASE-SX (850nm) 1000BASE-LX (1310nm) 1000BASE-LH (1310nm) 1000BASE-ZX (1550nm) 10GBASE-SR (850nm) 10GBASE-LR (1310nm) 10GBASE-ER (1550nm) 10GBASE-ZR (1550nm) XG-SFP-CU1M XG-SFP-CU3M XG-SFP-CU5M</p>	<p>Cat-5 UTP Multi-mode or single-mode optical fiber, supported by SFP ports while not supported by SFP+ ports. Single-mode optical fiber, supported by SFP ports while not supported by SFP+ ports.</p> <p>Multi-mode optical fiber Single-mode optical fiber Single-mode optical fiber Single-mode optical fiber Multi-mode optical fiber Single-mode optical fiber Single-mode optical fiber Single-mode optical fiber 1m SFP+ copper cables (DAC) 3m SFP+ copper cables (DAC) 5m SFP+ copper cables (DAC)</p>
LED	Status, Link/ACT	
Hot Swapping	Supported	
Power Consumption	<100W	
EMC Standards	GB9254-2008 CLASS A	
Safety Standards	GB4943-2011	

Operating Temperature	0 to 50°C
Storage Temperature	-40 to 70°C
Operating Humidity	10%-90% RH (non-condensing)
MTBF	305,000 hours
Weight	Net weight: 3.76 kg
Dimensions (W x D x H)	399 mm x 440 mm x 40.18 mm

M18000-48GT-ED

Module Appearance

Figure 0-8 Appearance of the M18000-48GT-ED Module

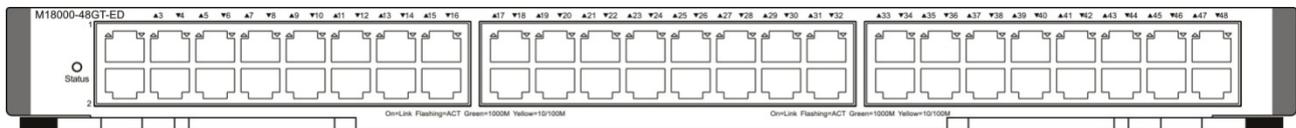

External Port

M18000-48GT-ED provides 48 copper ports. Copper ports support auto-negotiation at 10/100/1000 Mbps. Copper ports do not support half-duplex at 10/100Mbps.

LED

LED	Identification on the panel	Status	Meaning
System LED	Status	Off	The module is NOT receiving power.
		Solid red	The module is faulty.
		Solid yellow	High temperature alarm. The system keeps operating but the performance is affected.
		Blinking green	Initialization is in progress. Continuous blinking indicates errors.
		Solid green	The module is operational
RJ45 port LED	Link/ACT	Off	The port link is NOT connected.
		Solid green	The device is connected to the 1000M port.
		Solid yellow	The device is connected to the 10M or 100M port.
		Blinking	The port is sending and receiving data.

Specifications


Model	M18000-48GT-ED	
CPU	Quad-core CPU, each core with the clock speed of 1.0 G	
BOOTROM	8 MB	
Flash Memory	512 MB	
SDRAM	DDRIII 1 GB	
Port Type	48 copper ports	
Transmission Medium	10/100/1000BASE-T	Cat-5 UTP
LED	Status, Link/ACT	
Hot Swapping	Supported	

Power Consumption	<95W
EMC Standards	GB9254-2008 CLASS A
Safety Standards	GB4943-2011
Operating Temperature	0 to 50°C
Storage Temperature	-40 to 70°C
Operating Humidity	10%-90% RH (non-condensing)
MTBF	293,000 hours
Weight	Net weight: 3.70 kg
Dimensions (W x D x H)	399 mm x 440 mm x 40.18 mm

M18000-48GT-EF

Module Appearance

Figure 0-9 Appearance of the M18000-48GT-EF Module

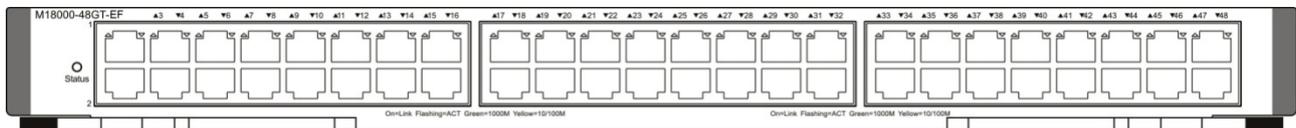

External Port

M18000-48GT-EF provides 48 copper ports. Copper ports support auto-negotiation at 10/100/1000 Mbps and do not support half-duplex at 10/100Mbps.

LED

LED	Identification on the panel	Status	Meaning
System LED	Status	Off	The module is NOT receiving power.
		Solid red	The module is faulty.
		Solid yellow	High temperature alarm. The system keeps operating but the performance is affected.
		Blinking green	Initialization is in progress. Continuous blinking indicates errors.
		Solid green	The module is operational
RJ45 port LED	Link/ACT	Off	The port link is NOT connected.
		Solid green	The device is connected to the 1000M port.
		Solid yellow	The device is connected to the 10M or 100M port.
		Blinking	The port is sending and receiving data.

Specifications


Model	M18000-48GT-EF	
CPU	Quad-core CPU, each core with the clock speed of 1.0G	
BOOTROM	8 MB	
Flash Memory	512 MB	
SDRAM	DDRIII 2 GB	
Port Type	48 copper ports	
Transmission Medium	10/100/1000BASE-T	Cat-5 UTP
LED	Status, Link/ACT	
Hot Swapping	Supported	

Power Consumption	<125W
EMC Standards	GB9254-2008 CLASS A
Safety Standards	GB4943-2011
Operating Temperature	0 to 50°C
Storage Temperature	-40 to 70°C
Operating Humidity	10%-90% RH (non-condensing)
MTBF	290,000 hours
Weight	Net weight: 3.80 kg
Dimensions (W x D x H)	399 mm x 440 mm x 40.18 mm

M18000-48GT-P-ED

Module Appearance

Figure 0-10 Appearance of the M18000-48GT-P-ED Module

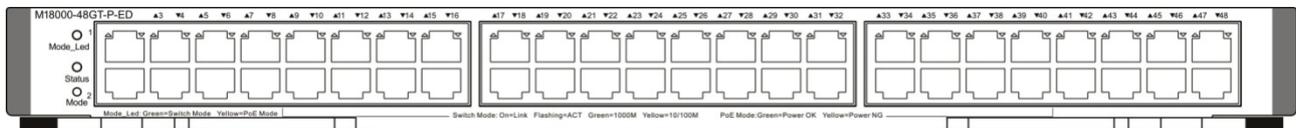

External Port

The M18000-48GT-P-ED provides 48 copper ports. The RJ45 ports support auto-negotiation at 10/100/1000 Mbps, and hot swapping. Copper ports do not support half-duplex at 10/100Mbps.

PoE Power Supply

The M18000-48GT-P-ED supports IEEE802.3af and IEEE802.3at PoE. It adopts the Alternative A mode for transmitting power over Ethernet cabling, that is, power is transmitted through cable pairs 1, 2, 3 and 6.

LED

LED	Identification on the panel	Status	Meaning
System LED	Status	Off	The module is NOT receiving power.
		Solid red	The module is faulty.
		Solid yellow	High temperature alarm. The system keeps operating but the performance is affected
		Blinking green	Initialization is in progress. Continuous blinking indicates errors.
		Solid green	The module is operational
Mode LED	Mode_Led	Solid green	Switching mode
		Solid yellow	PoE mode
RJ45 port LED (in switching mode)	Link/ACT	Off	The port link is NOT connected.
		Solid green	The port is connected at 1000Mbps.
		Solid yellow	The port is connected at 10/100Mbps.
		Blinking	The port is transmitting and receiving data.
RJ45 port LED(in PoE mode)	Link/ACT	Off	The port does NOT provide PoE power supply.
		Solid green	The port provides PoE power supply
		Solid yellow	The port is overloaded and short-circuited, Power overload causes failure to provide PoE power supply.

Button

The Mode button has the following functions:

- Press the “Mode” button to change the mode between switching and PoE. The green LED indicates switching mode and the yellow LED indicates PoE mode.
- In PoE mode, hold down the “Mode” button for three seconds to disable PoE power supply and switch to switching mode. The LED turns green to indicate switching mode. After power on, the system is powered by PoE power supply by default.


Specifications

Model	M18000-48GT-P-ED
CPU	Quad-core CPU, each core with the clock speed of 1.0G
BOOTROM	8 MB
Flash Memory	512 MB
SDRAM	DDRIII 1 GB
Port Type	48 copper ports, supporting PoE+ and PoE
Transmission Medium	10/100/1000BASE-T Cat-5 UTP
LED	Status, Link/ACT, Mode_Led
Button	Changing switching/PoE mode,, and enabling PoE power supply
Hot Swapping	Supported
Power Consumption	No PoE or PoE+ supply: <95W; PoE supply: <95W+15.4W x N (N stands for the number of PoE ports in use, no greater than 48); PoE+ supply: <95W+30W x N (N stands for the number of PoE+ ports in use, no greater than 48)
EMC Standards	GB9254-2008 CLASS A
Safety Standards	GB4943-2011
Operating Temperature	0 to 50°C
Storage Temperature	-40 to 70°C
Operating Humidity	10%-90% RH (non-condensing)
MTBF	293,000 hours
Weight	Net weight: 4.04 kg
Dimensions (W x D x H)	399 mm x 440 mm x 40.18 mm

M18000-44SFP4XS-ED

Module Appearance

Figure 0-11 Appearance of the M18000-44SFP4XS-ED Module

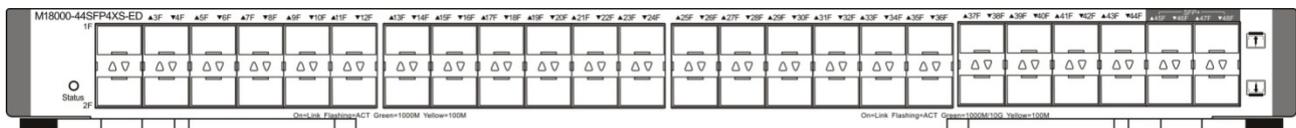

External Port

It provides 44 SFP ports and four SFP+ ports. The SFP ports support the rate of 100/1000 Mbps, the SFP+ ports support 10G SFP+ modules and Gigabit SFP modules. Hot swapping of the M18000-44SFP4XS-ED, SFP and SFP+ modules is supported.



Note The M18000-44SFP4XS-ED supports 10G SFP+ and Gigabit SFP modules. 10G SFP+ modules cannot be used as Gigabit SFP modules.

LED

LED	Identification on the panel	Status	Meaning
-----	-----------------------------	--------	---------

System LED	Status	Off	The module is NOT receiving power.
		Solid red	The module is faulty.
		Solid yellow	High temperature alarm. The system keeps operating but the performance is affected.
		Blinking green	Initialization is in progress. Continuous blinking indicates errors.
		Solid green	The module is operational
SFP port LED	Link/ACT	Off	The port link is NOT connected.
		Solid green	The port is connected at 1000Mbps.
		Solid yellow	The port is connected at 100Mbps.
		Blinking	The port is transmitting and receiving data.
SFP+ port LED	Link/ACT	Off	The port link is NOT connected.
		Solid green	The port is connected.
		Blinking	The port is transmitting and receiving data.


Specifications

Model	M18000-44SFP4XS-ED	
CPU	Quad-core CPU, each core with the clock speed of 1.0G	
BOOTROM	8 MB	
Flash Memory	512 MB	
SDRAM	DDRIII 1 GB	
Port Type	44 SFP ports and four SFP+ ports	
Transmission Medium	100BASE-FX (1310nm) 100BASE-FX (1550nm) by SFP+ ports. 1000BASE-SX (850nm) 1000BASE-LX (1310nm) 1000BASE-LH (1310nm) 1000BASE-ZX (1550nm) 10GBASE-SR (850nm) 10GBASE-LR (1310nm) 10GBASE-ER (1550nm) 10GBASE-ZR (1550nm) XG-SFP-CU1M XG-SFP-CU3M XG-SFP-CU5M	Multi-mode or single-mode optical fiber, supported by SFP ports while not supported by SFP+ ports. Single-mode optical fiber, supported by SFP ports while not supported by SFP+ ports. Multi-mode optical fiber Single-mode optical fiber Single-mode optical fiber Single-mode optical fiber Multi-mode optical fiber Single-mode optical fiber Single-mode optical fiber Single-mode optical fiber Single-mode optical fiber 1m SFP+ copper cables (DAC) 3m SFP+ copper cables (DAC) 5m SFP+ copper cables (DAC)
LED	Status, Link/ACT	
Hot Swapping	Supported	
Power Consumption	<135W	
EMC Standards	GB9254-2008 CLASS A	
Safety Standards	GB4943-2011	
Operating Temperature	0 to 50°C	
Storage Temperature	-40 to 70°C	
Operating Humidity	10%-90% RH (non-condensing)	
MTBF	305,000 hours	
Weight	Net weight: 3.76 kg	
Dimensions (W x D x H)	399 mm x 440 mm x 40.18 mm	

M18000-44SFP4XS-EF

Module Appearance

Figure 0-20 Appearance of the M18000-44SFP4XS-EF Module

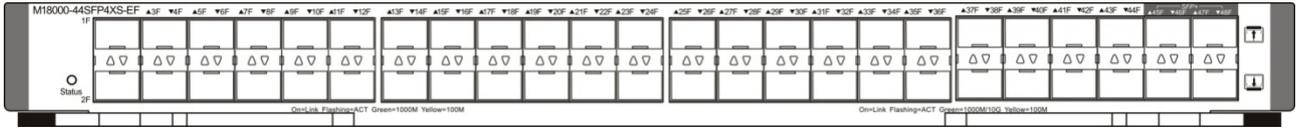

External Port

It provides 44 SFP ports and four SFP+ ports. The SFP ports support the rate of 100/1000 Mbps, the SFP+ ports support 10G SFP+ modules and Gigabit SFP modules. Hot swapping of the M18000-44SFP4XS-EF, SFP and SFP+ modules is supported.



Note The M18000-44SFP4XS-EF supports 10G SFP+ and Gigabit SFP modules. 10G SFP+ modules cannot be used as Gigabit SFP modules.

LED

LED	Identification on the panel	Status	Meaning
System LED	Status	Off	The module is NOT receiving power.
		Solid red	The module is faulty.
		Solid yellow	High temperature alarm. The system keeps operating but the performance is affected.
		Blinking green	Initialization is in progress. Continuous blinking indicates errors.
		Solid green	The module is operational
SFP port LED	Link/ACT	Off	The port link is NOT connected.
		Solid green	The port is connected at 1000Mbps.
		Solid yellow	The port is connected at 100Mbps.
		Blinking	The port is transmitting and receiving data.
SFP+ port LED	Link/ACT	Off	The port link is NOT connected.
		Solid green	The port is connected.
		Blinking	The port is transmitting and receiving data.

Specifications

Model	M18000-44SFP4XS-EF	
CPU	Quad-core CPU, each core with the clock speed of 1.0G	
BOOTROM	8 MB	
Flash Memory	512 MB	
SDRAM	DDRIII 2 GB	
Port Type	44 SFP ports and four SFP+ ports	
Transmission Medium	100BASE-FX (1310nm) 100BASE-FX (1550nm) 1000BASE-SX (850nm) 1000BASE-LX (1310nm) 1000BASE-LH (1310nm) 1000BASE-ZX (1550nm) 10GBASE-SR (850nm) 10GBASE-LR (1310nm) 10GBASE-ER (1550nm) 10GBASE-ZR (1550nm) XG-SFP-CU1M XG-SFP-CU3M	Multi-mode or single-mode optical fiber, supported by SFP ports while not supported by SFP+ ports. Single-mode optical fiber, supported by SFP ports while not supported by SFP+ ports. Multi-mode optical fiber Single-mode optical fiber Single-mode optical fiber Single-mode optical fiber Single-mode optical fiber Multi-mode optical fiber Single-mode optical fiber Single-mode optical fiber Single-mode optical fiber 1m SFP+ copper cables (DAC) 3m SFP+ copper cables (DAC)

	XG-SFP-CU5M	5m SFP+ copper cables (DAC)
LED	Status, Link/ACT	
Hot Swapping	Supported	
Power Consumption	<175W	
EMC Standards	GB9254-2008 CLASS A	
Safety Standards	GB4943-2011	
Operating Temperature	0 to 50°C	
Storage Temperature	-40 to 70°C	
Operating Humidity	10%-90% RH (non-condensing)	
MTBF	299,000 hours	
Weight	Net weight: 3.86 kg	
Dimensions (W x D x H)	399 mm x 440 mm x 40.18 mm	

M18000-08XS-ED

Module Appearance

Figure 0-21 Appearance of the M18000-08XS-ED Module



External Port

It provides eight SFP+ ports. The SFP+ ports support 10G SFP+ modules and Gigabit SFP modules. Hot swapping of the M18000-08XS-ED, SFP and SFP+ modules is supported.



Note

The M18000-08XS-ED supports 10G SFP+ modules and Gigabit SFP modules. 10G SFP+ modules cannot be used as Gigabit SFP modules.

LED

LED	Identification on the panel	Status	Meaning
System LED	Status	Off	The module is NOT receiving power.
		Solid red	The module is faulty.
		Solid yellow	High temperature alarm. The system keeps operating but the performance is affected.
		Blinking green	Initialization is in progress. Continuous blinking indicates errors.
		Solid green	The module is operational.
SFP+ port LED	Link/ACT	Off	The port link is NOT connected.
		Solid green	The port is connected.
		Blinking	The port is transmitting and receiving data.

Specifications

Model	M18000-08XS-ED
CPU	Quad-core CPU, each core with the clock speed of 1.0G

BOOTROM	8 MB																						
Flash Memory	512 MB																						
SDRAM	DDRIII 1GB																						
Port Type	Eight SFP+ ports supporting 10G SFP+ modules and 1G SFP modules																						
Transmission Medium	<table border="0"> <tr> <td>1000BASE-SX (850nm)</td> <td>Multi-mode optical fiber</td> </tr> <tr> <td>1000BASE-LX (1310nm)</td> <td>Single-mode optical fiber</td> </tr> <tr> <td>1000BASE-LH (1310nm)</td> <td>Single-mode optical fiber</td> </tr> <tr> <td>1000BASE-ZX(1550nm)</td> <td>Single-mode optical fiber</td> </tr> <tr> <td>10GBASE-SR (850nm)</td> <td>Multi-mode optical fiber</td> </tr> <tr> <td>10GBASE-LR (1310nm)</td> <td>Single-mode optical fiber</td> </tr> <tr> <td>10GBASE-ER (1550nm)</td> <td>Single-mode optical fiber</td> </tr> <tr> <td>10GBASE-ZR (1550nm)</td> <td>Single-mode optical fiber</td> </tr> <tr> <td>XG-SFP-CU1M</td> <td>1m SFP+ copper cables (DAC)</td> </tr> <tr> <td>XG-SFP-CU3M</td> <td>3m SFP+ copper cables (DAC)</td> </tr> <tr> <td>XG-SFP-CU5M</td> <td>5m SFP+ copper cables (DAC)</td> </tr> </table>	1000BASE-SX (850nm)	Multi-mode optical fiber	1000BASE-LX (1310nm)	Single-mode optical fiber	1000BASE-LH (1310nm)	Single-mode optical fiber	1000BASE-ZX(1550nm)	Single-mode optical fiber	10GBASE-SR (850nm)	Multi-mode optical fiber	10GBASE-LR (1310nm)	Single-mode optical fiber	10GBASE-ER (1550nm)	Single-mode optical fiber	10GBASE-ZR (1550nm)	Single-mode optical fiber	XG-SFP-CU1M	1m SFP+ copper cables (DAC)	XG-SFP-CU3M	3m SFP+ copper cables (DAC)	XG-SFP-CU5M	5m SFP+ copper cables (DAC)
1000BASE-SX (850nm)	Multi-mode optical fiber																						
1000BASE-LX (1310nm)	Single-mode optical fiber																						
1000BASE-LH (1310nm)	Single-mode optical fiber																						
1000BASE-ZX(1550nm)	Single-mode optical fiber																						
10GBASE-SR (850nm)	Multi-mode optical fiber																						
10GBASE-LR (1310nm)	Single-mode optical fiber																						
10GBASE-ER (1550nm)	Single-mode optical fiber																						
10GBASE-ZR (1550nm)	Single-mode optical fiber																						
XG-SFP-CU1M	1m SFP+ copper cables (DAC)																						
XG-SFP-CU3M	3m SFP+ copper cables (DAC)																						
XG-SFP-CU5M	5m SFP+ copper cables (DAC)																						
LED	Status, Link/ACT																						
Hot Swapping	Supported																						
Power Consumption	<85W																						
EMC Standards	GB9254-2008 CLASS A																						
Safety Standards	GB4943-2011																						
Operating Temperature	0 to 50°C																						
Storage Temperature	-40 to 70°C																						
Operating Humidity	10%-90% RH (non-condensing)																						
MTBF	433,000 hours																						
Weight	Net weight: 3.42 kg																						
Dimensions (W x D x H)	399 mm x 440 mm x 40.18 mm																						

M18000-08XS-EF

Module Appearance

Figure 0-22 Appearance of the M18000-08XS-EF Module



External Port

It provides eight SFP+ ports. The SFP+ ports support 10G SFP+ modules and Gigabit SFP modules, Hot swapping of the M18000-08XS-EF, SFP and SFP+ modules is supported.



Note

The M18000-08XS-EF supports 10G SFP+ modules and Gigabit SFP modules. 10G SFP+ modules cannot be used as Gigabit SFP modules.

LED

LED	Identification on the panel	Status	Meaning
System LED	Status	Off	The module is NOT receiving power.
		Solid red	The module is faulty.
		Solid yellow	High temperature alarm. The system keeps operating but the performance is affected.

		Blinking green	Initialization is in progress. Continuous blinking indicates errors.
		Solid green	The module is operational
SFP+ port LED	Link/ACT	Off	The port link is NOT connected.
		Solid green	The port is connected.
		Blinking	The port is transmitting and receiving data.


Specifications

Model	M18000-08XS-EF	
CPU	Quad-core CPU, each core with the clock speed of 1.0G	
BOOTROM	8 MB	
Flash Memory	512 MB	
SDRAM	DDRIII 2 GB	
Port Type	Eight SFP+ ports supporting 10G SFP+ modules and 1G SFP modules	
Transmission Medium	1000BASE-SX (850nm) 1000BASE-LX (1310nm) 1000BASE-LH (1310nm) 1000BASE-ZX (1550nm) 10GBASE-SR (850nm) 10GBASE-LR (1310nm) 10GBASE-ER (1550nm) 10GBASE-ZR (1550nm) XG-SFP-CU1M XG-SFP-CU3M XG-SFP-CU5M	Multi-mode optical fiber Single-mode optical fiber Single-mode optical fiber Single-mode optical fiber Multi-mode optical fiber Single-mode optical fiber Single-mode optical fiber Single-mode optical fiber 1m SFP+ copper cables (DAC) 3m SFP+ copper cables (DAC) 5m SFP+ copper cables (DAC)
LED	Status, Link/ACT	
Hot Swapping	Supported	
Power Consumption	<120W	
EMC Standards	GB9254-2008 CLASS A	
Safety Standards	GB4943-2011	
Operating Temperature	0 to 50°C	
Storage Temperature	-40 to 70°C	
Operating Humidity	10%-90% RH (non-condensing)	
MTBF	421,000 hours	
Weight	Net weight: 3.52 kg	
Dimensions (W x D x H)	399 mm x 440 mm x 40.18 mm	

M18000-48XS-DB

Module Appearance

Figure 0-23 Appearance of the M18000-48XS-DB Module

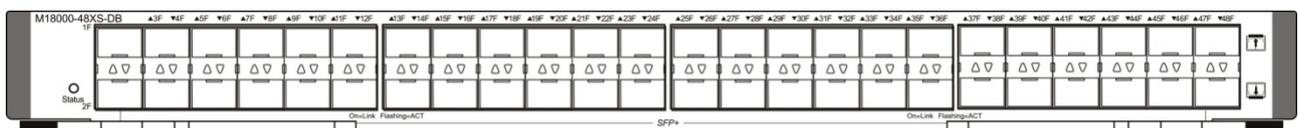

External Port

The M18000-48XS-DB provides 48 SFP+ ports supporting 10G SFP+ modules and Gigabit SFP modules. Hot swapping of the M18000-48XS-DB, SFP and SFP+ modules is supported.



Note The M18000-48XS-DB supports 10G SFP+ and Gigabit SFP modules. 10G SFP+ modules cannot be used as Gigabit SFP modules.

LED

LED	Identification on the panel	Status	Meaning
System LED	Status	Off	The module is NOT receiving power.
		Solid red	The module is faulty.
		Blinking green	Initialization is in progress. Continuous blinking indicates errors.
		Solid green	The module is operational
		Solid yellow	System temperature exceeds the alarm temperature. The system keeps operating but the performance is affected.
SFP+ port LED	Link/ACT	Off	The port link is NOT connected.
		Solid green	The port is connected.
		Blinking	The port is transmitting and receiving data.


Specifications

Model	M18000-48XS-DB																						
CPU	Quad-core CPU, each core with the clock speed of 1.0G																						
BOOTROM	8 MB																						
Flash Memory	512 MB																						
SDRAM	DDRIII 1 GB																						
Port Type	48 SFP+ ports supporting 10G SFP+ and Gigabit SFP modules																						
Transmission Medium	<table border="0"> <tr> <td>1000BASE-SX (850nm)</td> <td>Multi-mode optical fiber</td> </tr> <tr> <td>1000BASE-LX (1310nm)</td> <td>Single-mode optical fiber</td> </tr> <tr> <td>1000BASE-LH (1310nm)</td> <td>Single-mode optical fiber</td> </tr> <tr> <td>1000BASE-ZX (1550nm)</td> <td>Single-mode optical fiber</td> </tr> <tr> <td>10GBASE-SR (850nm)</td> <td>Multi-mode optical fiber</td> </tr> <tr> <td>10GBASE-LR (1310nm)</td> <td>Single-mode optical fiber</td> </tr> <tr> <td>10GBASE-ER (1550nm)</td> <td>Single-mode optical fiber</td> </tr> <tr> <td>10GBASE-ZR (1550nm)</td> <td>Single-mode optical fiber</td> </tr> <tr> <td>XG-SFP-CU1M</td> <td>1m SFP+ copper cables (DAC)</td> </tr> <tr> <td>XG-SFP-CU3M</td> <td>3m SFP+ copper cables (DAC)</td> </tr> <tr> <td>XG-SFP-CU5M</td> <td>5m SFP+ copper cables (DAC)</td> </tr> </table>	1000BASE-SX (850nm)	Multi-mode optical fiber	1000BASE-LX (1310nm)	Single-mode optical fiber	1000BASE-LH (1310nm)	Single-mode optical fiber	1000BASE-ZX (1550nm)	Single-mode optical fiber	10GBASE-SR (850nm)	Multi-mode optical fiber	10GBASE-LR (1310nm)	Single-mode optical fiber	10GBASE-ER (1550nm)	Single-mode optical fiber	10GBASE-ZR (1550nm)	Single-mode optical fiber	XG-SFP-CU1M	1m SFP+ copper cables (DAC)	XG-SFP-CU3M	3m SFP+ copper cables (DAC)	XG-SFP-CU5M	5m SFP+ copper cables (DAC)
1000BASE-SX (850nm)	Multi-mode optical fiber																						
1000BASE-LX (1310nm)	Single-mode optical fiber																						
1000BASE-LH (1310nm)	Single-mode optical fiber																						
1000BASE-ZX (1550nm)	Single-mode optical fiber																						
10GBASE-SR (850nm)	Multi-mode optical fiber																						
10GBASE-LR (1310nm)	Single-mode optical fiber																						
10GBASE-ER (1550nm)	Single-mode optical fiber																						
10GBASE-ZR (1550nm)	Single-mode optical fiber																						
XG-SFP-CU1M	1m SFP+ copper cables (DAC)																						
XG-SFP-CU3M	3m SFP+ copper cables (DAC)																						
XG-SFP-CU5M	5m SFP+ copper cables (DAC)																						
LED	Status, Link/ACT																						
Hot Swapping	Supported																						
Power Consumption	<232W																						
EMC	GB9254-2008 CLASS A																						
Safety specification	GB4943-2011																						
Operating Temperature	0 to 50°C																						
Storage Temperature	-40 to 70°C																						
Operating Humidity	10%-90% RH (non-condensing)																						
MTBF	261,000 hours																						
Weight	Net weight: 4.25 kg																						
Dimensions (W x D x H)	399 mm x 440 mm x 40.18 mm																						

M18000-24QXS-DB

Module Appearance

Figure 0-25 Appearance of the M18000-24QXS-DB Module

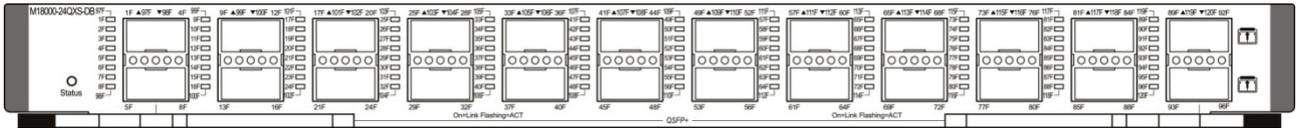

External Port

It provides 24 QSFP+ ports supporting 40-Gigabit QSFP+ modules. Hot swapping of the 18000-24QXS-DB and QSPF+ modules is supported.

LED

LED	Identification on the panel	Status	Meaning
System LED	Status	Off	The module is NOT receiving power.
		Solid red	The module is faulty.
		Blinking green	Initialization is in progress. Continuous blinking indicates errors.
		Solid green	The module is operational
		Solid yellow	System temperature exceeds the alarm temperature. The system keeps operating but the performance is affected..
QSFP+ port LED	Link/ACT	Off	The port link is NOT connected.
		Solid green	The port is connected.
		Blinking	The port is transmitting and receiving data.


Specifications

Model	M18000-24QXS-DB
CPU	Quad-core CPU, each core with the clock speed of 1.0G
BOOTROM	8 MB
Flash Memory	512 MB
SDRAM	DDRIII 1 GB
Port Type	24 QSFP+ ports
Transmission Medium	40GBASE-SR4 Multi-mode optical fiber 40GBASE-LR4 Single-mode optical fiber 40G-QSFP-STACK3M 3m QSFP+ copper cables (DAC)
LED	Status, Link/ACT
Hot Swapping	Supported
Power Consumption	<374W
EMC Standards	GB9254-2008 CLASS A
Safety Standards	GB4943-2011
Operating Temperature	0 to 50°C
Storage Temperature	-40 to 70°C
Operating Humidity	10%-90% RH (non-condensing)
MTBF	295,000 hours
Weight	Net weight: 4.95 kg
Dimensions (W x D x H)	399 mm x 440 mm x 40.18 mm

M18000-12QXS-DB

Module Appearance

Figure 0-26 Appearance of the M18000-12QXS-DB Module

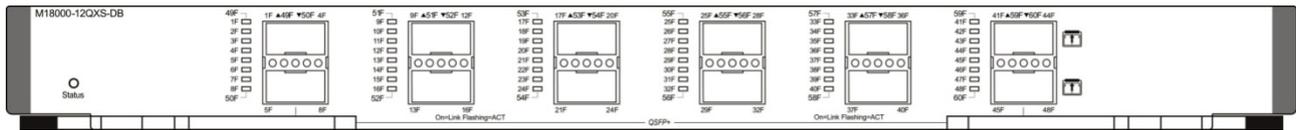

External Port

The M18000-12QXS-DB provides 12 QSFP+ ports. The QSFP+ ports support 40-Gigabit QSFP+ modules. Hot swapping of the M18000-12QXS-DB and QSFP+ modules is supported.

LED

LED	Identification on the panel	Status	Meaning
System LED	Status	Off	The module is NOT receiving power.
		Solid red	The module is faulty.
		Blinking green	Initialization is in progress. Continuous blinking indicates errors.
		Solid green	The module is operational
		Solid yellow	System temperature exceeds the alarm temperature. The system keeps operating but the performance is affected.
QSFP+ port LED	Link/ACT	Off	The port link is NOT connected.
		Solid green	The port is connected.
		Blinking	The port is transmitting and receiving data.


Specifications

Model	M18000-12QXS-DB	
CPU	Quad-core CPU, each core with the clock speed of 1.0G	
BOOTROM	8 MB	
Flash Memory	512 MB	
SDRAM	DDRIII 1 GB	
Port Type	12 QSFP+ ports	
Transmission Medium	40GBASE-SR4(850nm) 40GBASE-LR4 40G-QSFP-STACK3M	Multi-mode optical fiber Single-mode optical fiber 3m QSFP+ copper cables (DAC)
LED	Status, Link/ACT	
Hot Swapping	Supported	
Power Consumption	<200W	
EMC Standards	GB9254-2008 CLASS A	
Safety Standards	GB4943-2011	
Operating Temperature	0 to 50°C	
Storage Temperature	-40 to 70°C	
Operating Humidity	10%-90% RH (non-condensing)	
MTBF	382,000 hours	
Weight	Net weight: 3.92 kg	
Dimensions (W x D x H)	399 mm x 440 mm x 40.18 mm	

M18000-24XS4QXS-DB

Module Appearance

Figure 1-27 Appearance of M18000-24XS4QXS-DB Module

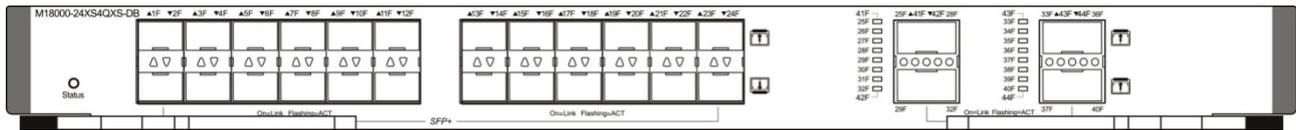

External Port

The M18000-24XS4QXS-DB provides 24 SFP+ ports and four QSFP+ ports. The SFP+ ports support 10G SFP+ modules and Gigabit SFP modules. QSFP+ ports support 40-Gigabit QSFP+ modules. Hot swapping of the M18000-24XS4QXS-DB, SFP, SFP+ and QSFP+ modules is supported.



Note

The M18000-24XS4QXS-DB supports 10G SFP+ and Gigabit SFP modules. 10G SFP+ modules cannot be used as Gigabit SFP modules.

LED

LED	Identification on the panel	Status	Meaning
System LED	Status	Off	The module is NOT receiving power.
		Solid red	The module is faulty.
		Blinking green	Initialization is in progress. Continuous blinking indicates errors.
		Solid green	The module is operational
		Solid yellow	System temperature exceeds the alarm temperature. The system keeps operating but the performance is affected.
QSFP+ port LED	Link/ACT	Off	The port link is NOT connected.
		Solid green	The port link is connected.
		Blinking	The port is transmitting and receiving data.
SFP+ port LED	Link/ACT	Off	The port link is NOT connected.
		Solid green	The port is connected.
		Blinking	The port is transmitting and receiving data.

Specifications


Model	M18000-24XS4QXS-DB	
CPU	Quad-core CPU, each core with the clock speed of 1.0G	
BOOTROM	8 MB	
Flash Memory	512 MB	
SDRAM	DDRIII 1 GB	
Port Type	24 SFP+ ports supporting 10G SFP+ modules and Gigabit SFP modules; Four QSFP+ ports	
Transmission Medium	1000BASE-SX (850nm) 1000BASE-LX (1310nm) 1000BASE-LH (1310nm) 1000BASE-ZX (1550nm) 10GBASE-SR (850nm) 10GBASE-LR (1310nm) 10GBASE-ER (1550nm) 10GBASE-ZR (1550nm) XG-SFP-CU1M XG-SFP-CU3M XG-SFP-CU5M 40GBASE-SR4 40GBASE-LR4 40G-QSFP-STACK3M	Multi-mode optical fiber Single-mode optical fiber Single-mode optical fiber Single-mode optical fiber Multi-mode optical fiber Single-mode optical fiber Single-mode optical fiber Single-mode optical fiber Single-mode optical fiber 1m SFP+ copper cables (DAC) 3m SFP+ copper cables (DAC) 5m SFP+ copper cables (DAC) Multi-mode optical fiber Single-mode optical fiber 3m QSFP+ copper cables (DAC)
LED	Status, Link/ACT	
Hot Swapping	Supported	

Power Consumption	<208W
EMC Standards	GB9254-2008 CLASS A
Safety Standards	GB4943-2011
Operating Temperature	0 to 50°C
Storage Temperature	-40 to 70°C
Operating Humidity	10%-90% RH (non-condensing)
MTBF	316,000 hours
Weight	Net weight: 4.0 kg
Dimensions (W x D x H)	399 mm x 440 mm x 40.18 mm

M18000-44SFP4XS-CB

Module Appearance

Figure 0-29 Appearance of the M18000-44SFP4XS-CB Module

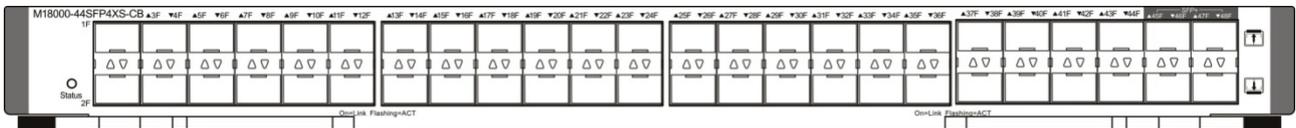

External Port

It provides 44 SFP ports and four SFP+ ports. The SFP ports support the rate of 1000 Mbps, the SFP+ ports support 10G SFP+ modules and Gigabit SFP modules. Hot swapping of the M18000-44SFP4XS-CB, SFP and SFP+ modules is supported.

LED

LED	Identification on the panel	Status	Meaning
System LED	Status	Off	The module is NOT receiving power.
		Solid red	The module is faulty.
		Solid yellow	High temperature alarm. The system keeps operating but the performance is affected.
		Blinking green	Initialization is in progress. Continuous blinking indicates errors.
		Solid green	The module is operational
SFP port LED	Link/ACT	Off	The port link is NOT connected.
		Solid green	The port is connected at 1000Mbps.
		Blinking	The port is transmitting and receiving data.
SFP+ port LED	Link/ACT	Off	The port link is NOT connected.
		Solid green	The port is connected.
		Blinking	The port is transmitting and receiving data.

Specifications

Model	M18000-44SFP4XS-CB	
CPU	Quad-core CPU, each core with the clock speed of 1.0G	
BOOTROM	8 MB	
Flash Memory	512 MB	
SDRAM	DDRIII 2 GB	
Port Type	44 SFP ports and four SFP+ ports	
Transmission Medium	1000BASE-SX (850nm) 1000BASE-LX (1310nm) 1000BASE-LH (1310nm)	Multi-mode optical fiber Single-mode optical fiber Single-mode optical fiber

	1000BASE-ZX (1550nm) 10GBASE-SR (850nm) 10GBASE-LR (1310nm) 10GBASE-ER (1550nm) 10GBASE-ZR (1550nm) XG-SFP-CU1M XG-SFP-CU3M XG-SFP-CU5M 100BASE-FX is not supported	Single-mode optical fiber Multi-mode optical fiber Single-mode optical fiber Single-mode optical fiber Single-mode optical fiber 1m SFP+ copper cables (DAC) 3m SFP+ copper cables (DAC) 5m SFP+ copper cables (DAC)
LED	Status, Link/ACT	
Hot Swapping	Supported	
Power Consumption	<267W	
EMC Standards	GB9254-2008 CLASS A	
Safety Standards	GB4943-2011	
Operating Temperature	0 to 50°C	
Storage Temperature	-40 to 70°C	
Operating Humidity	10%-90% RH (non-condensing)	
MTBF	200,000 hours	
Weight	Net weight: 5.06 kg	
Dimensions (W x D x H)	399 mm x 440 mm x 40.18 mm	




Note M18000-44SFP4XS-CB supports 1000BASE-X mode.

M18000-16XS-CB

Module Appearance

Figure 0-30 Appearance of the M18000-16XS-CB Module

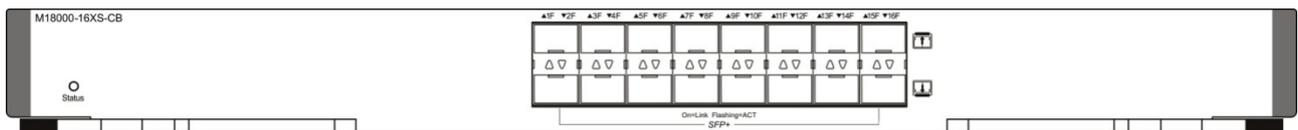

External Port

It provides 16 SFP+ ports. The SFP+ ports support 10G SFP+ modules and Gigabit SFP modules. Hot swapping of the M18000-16XS-CB, SFP and SFP+ modules is supported.



Note The M18000-16XS-CB supports 10G SFP+ and Gigabit SFP modules. 10G SFP+ modules cannot be used as Gigabit SFP modules.

LED

LED	Identification on the panel	Status	Meaning
System LED	Status	Off	The module is NOT receiving power.
		Solid red	The module is faulty.
		Solid yellow	High temperature alarm. The system keeps operating but the performance is affected.
		Blinking	Initialization is in progress. Continuous blinking

		green	indicates errors.
		Solid green	The module is operational
SFP+ port LED	Link/ACT	Off	The port link is NOT connected.
		Solid green	The port is connected.
		Blinking	The port is transmitting and receiving data.


Specifications

Model	M18000-16XS-CB	
CPU	Quad-core CPU, each core with the clock speed of 1.0G	
BOOTROM	8MB	
Flash Memory	512MB	
SDRAM	DDRIII 2GB	
Port Type	16 SFP+ ports, supporting 10G SFP+ modules and Gigabit SFP modules	
Transmission Medium	1000BASE-SX (850nm) 1000BASE-LX (1310nm) 1000BASE-LH (1310nm) 1000BASE-ZX (1550nm) 10GBASE-SR (850nm) 10GBASE-LR (1310nm) 10GBASE-ER (1550nm) 10GBASE-ZR (1550nm) XG-SFP-CU1M XG-SFP-CU3M XG-SFP-CU5M	Multi-mode optical fiber Single-mode optical fiber Single-mode optical fiber Single-mode optical fiber Multi-mode optical fiber Single-mode optical fiber Single-mode optical fiber Single-mode optical fiber Single-mode optical fiber 1m SFP+ copper cables (DAC) 3m SFP+ copper cables (DAC) 5m SFP+ copper cables (DAC)
LED	Status, Link/ACT	
Hot Swapping	Supported	
Power Consumption	<156W	
EMC Standards	GB9254-2008 CLASS A	
Safety Standards	GB4943-2011	
Operating Temperature	0 to 50°C	
Storage Temperature	-40 to 70°C	
Operating Humidity	10%-90% RH (non-condensing)	
MTBF	313,000 hours	
Weight	Net weight: 4.20 kg	
Dimensions (W x D x H)	399 mm x 440 mm x 40.18 mm	

M18000-40XS-CB

Module Appearance

Figure 0-31 Appearance of the M18000-40XS-CB

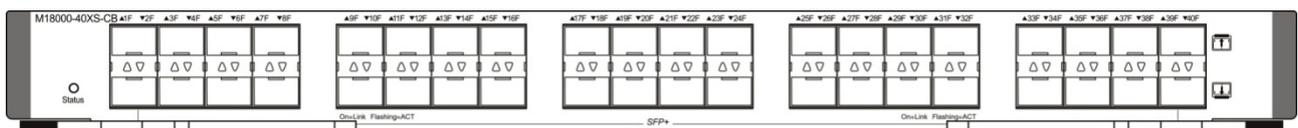

External Port

It provides 40 SFP+ ports. The SFP+ ports support 10G SFP+ modules and Gigabit SFP modules. Hot swapping of the M18000-40XS-CB, SFP and SFP+ modules is supported.

**Note**

The M18000-40XS-CB supports 10G SFP+ and Gigabit SFP modules. 10G SFP+ modules cannot be used as Gigabit SFP modules.

LED

LED	Identification on the panel	Status	Meaning
System LED	Status	Off	The module is NOT receiving power.
		Solid red	The module is faulty.
		Solid yellow	High temperature alarm. The system keeps operating but the performance is affected.
		Blinking green	Initialization is in progress. Continuous blinking indicates errors.
		Solid green	The module is operational
SFP+ port LED	Link/ACT	Off	The port link is NOT connected.
		Solid green	The port is connected.
		Blinking	The port is transmitting and receiving data.


Specifications

Model	M18000-40XS-CB
CPU	Quad-core CPU, each core with the clock speed of 1.0G
BOOTROM	8 MB
Flash Memory	512 MB
SDRAM	DDRIII 2 GB
Port Type	40 SFP+ ports, supporting 10G SFP+ modules and Gigabit SFP modules
Transmission Medium	1000BASE-SX (850nm) Multi-mode optical fiber 1000BASE-LX (1310nm) Single-mode optical fiber 1000BASE-LH (1310nm) Single-mode optical fiber 1000BASE-ZX (1550nm) Single-mode optical fiber 10GBASE-SR (850nm) Multi-mode optical fiber 10GBASE-LR (1310nm) Single-mode optical fiber 10GBASE-ER (1550nm) Single-mode optical fiber 10GBASE-ZR (1550nm) Single-mode optical fiber XG-SFP-CU1M 1m SFP+ copper cables (DAC) XG-SFP-CU3M 3m SFP+ copper cables (DAC) XG-SFP-CU5M 5m SFP+ copper cables (DAC)
LED	Status, Link/ACT
Hot Swapping	Supported
Power Consumption	<296W
EMC Standards	GB9254-2008 CLASS A
Safety Standards	GB4943-2011
Operating Temperature	0 to 50°C
Storage Temperature	-40 to 70°C
Operating Humidity	10%-90% RH (non-condensing)
MTBF	203,000 hours
Weight	Net weight: 5.20 kg
Dimensions (W x D x H)	399 mm x 440 mm x 40.18 mm

M18000-16XT-CB

Module Appearance

Figure 0-32 Appearance of the M18000-16XT-CB Module

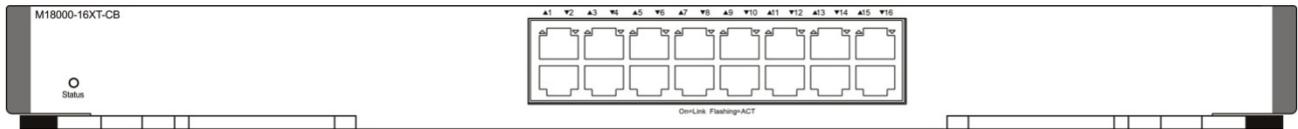

External Port

It provides 16 10G RJ45 ports. The RJ45 ports support 100M/1G/10G auto-negotiation, and full duplex only.

LED

LED	Identification on the panel	Status	Meaning
System LED	Status	Off	The module is NOT receiving power.
		Solid red	The module is faulty.
		Solid yellow	High temperature alarm. The system keeps operating but the performance is affected.
		Blinking green	Initialization is in progress. Continuous blinking indicates errors.
		Solid green	The module is operational
RJ45 port LED	Link/ACT	Off	The port link is NOT connected.
		Solid green	The port is connected.
		Blinking	The port is transmitting and receiving data.


Specifications

Model	M18000-16XT-CB	
CPU	Quad-core CPU, each core with the clock speed of 1.0G	
BOOTROM	8 MB	
Flash Memory	512 MB	
SDRAM	DDRIII 2 GB	
Port Type	16 ports of RJ45 copper supporting 100M/1G/10G auto-negotiation	
Transmission Medium	100/1000BASE-T 10G BAST-T	Cat-5 UTP Cat-6
LED	Status, Link/ACT	
Hot Swapping	Supported	
Power Consumption	<250W	
EMC Standards	GB9254-2008 FCC CLASS A	
Safety Standards	GB4943-2011	
Operating Temperature	0 to 50°C	
Storage Temperature	-40 to 70°C	
Operating Humidity	10%-90% RH (non-condensing)	
MTBF	312,000 hours	
Weight	Net weight: 4.50 kg	
Dimensions (W x D x H)	399 mm x 440 mm x 40.18 mm	

M18000-10QXS-CB

Module Appearance

Figure 0-33 Appearance of the M18000-10QXS-CB Module

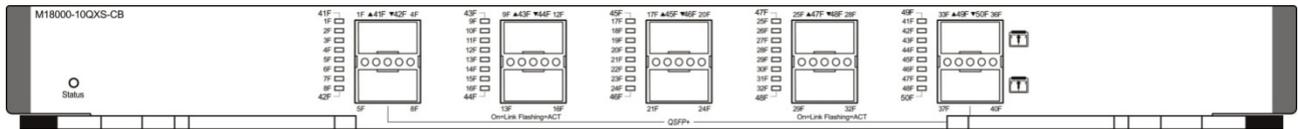

External Port

It provides 10 QSFP+ ports. The QSFP+ ports support 40G QSFP+ modules working in 40G mode. Hot swapping of the M18000-10QXS-CB, and QSFP+ modules is supported

LED

LED	Identification on the panel	Status	Meaning
System LED	Status	Off	The module is NOT receiving power.
		Solid red	The module is faulty.
		Solid yellow	High temperature alarm. The system keeps operating but the performance is affected.
		Blinking green	Initialization is in progress. Continuous blinking indicates errors.
		Solid green	The module is operational
QSFP+ port LED	Link/ACT	Off	The port link is NOT connected.
		Solid green	The port is connected.
		Blinking	The port is transmitting and receiving data.


Specifications

Model	M18000-10QXS-CB	
CPU	Quad-core CPU, each core with the clock speed of 1.0G	
BOOTROM	8 MB	
Flash Memory	512 MB	
SDRAM	DDRIII 2 GB	
Port Type	10 QSFP+ ports	
Transmission Medium	40GBASE-SR4 40GBASE-LR4 40G-QSFP-STACK3M	Multi-mode optical fiber single-mode optical fiber 3m QSFP+ copper cables (DAC)
LED	Status, Link/ACT	
Hot Swapping	Supported	
Power Consumption	<257W	
EMC Standards	GB9254-2008 CLASS A	
Safety Standards	GB4943-2011	
Operating Temperature	0 to 50°C	
Storage Temperature	-40 to 70°C	
Operating Humidity	10%-90% RH (non-condensing)	
MTBF	234,000 hours	
Weight	Net weight: 4.82 kg	
Dimensions (W x D x H)	399 mm x 440 mm x 40.18 mm	

RG-WALL 1600-B-ED

Module Appearance

Figure 0-34 Appearance of the RG-WALL1600-B-ED Module

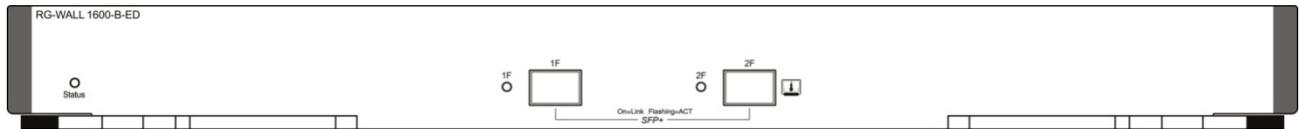

External Port

It provides two SFP+ ports. The SFP+ ports support 10G SFP+ modules and Gigabit SFP modules. Hot swapping of the RG-WALL1600-B-ED, SFP and SFP+ modules is supported.



Note

The RG-WALL1600-B-ED supports 10G SFP+ and Gigabit SFP modules. 10G SFP+ modules cannot be used as Gigabit SFP modules.

LED

LED	Identification on the panel	Status	Meaning
System LED	Status	Off	The module is NOT receiving power.
		Solid red	The module is faulty.
		Solid yellow	High temperature alarm. The system keeps operating but the performance is affected.
		Blinking green	Initialization is in progress. Continuous blinking indicates errors.
		Solid green	The module is operational
SFP+ port LED in switching mode	Link/ACT	Off	The port link is NOT connected.
		Solid green	The port is connected.
		Blinking	The port is transmitting and receiving data.

Specifications

Model	RG-WALL1600-B-ED	
Management CPU	CPU: Quad-core CPU, each core with the clock speed of 1.0G	
	BOOTROM: 8 MB	
	Flash Memory : 512 MB	
	SDRAM : DDRIII 1 GB	
Service CPU	CPU: 32-core CPU, each core with the clock speed of 1.2G	
	BOOTROM: 8 MB	
	Flash Memory : 512 MB	
	SDRAM : DDRIII 8 GB	
Port Type	Two SFP+ ports, supporting 10G SFP+ modules and gigabit SFP modules	
Transmission Medium	1000BASE-SX (850nm)	Multi-mode optical fiber
	1000BASE-LX (1310nm)	Single-mode optical fiber
	1000BASE-LH (1310nm)	Single-mode optical fiber
	1000BASE-ZX (1550nm)	Single-mode optical fiber
	10GBASE-SR (850nm)	Multi-mode optical fiber
	10GBASE-LR (1310nm)	Single-mode optical fiber
	10GBASE-ER (1550nm)	Single-mode optical fiber
	10GBASE-ZR (1550nm)	Single-mode optical fiber
	XG-SFP-CU1M	1m SFP+ copper cables (DAC)
	XG-SFP-CU3M	3m SFP+ copper cables (DAC)
	XG-SFP-CU5M	5m SFP+ copper cables (DAC)
LED	Status, Link/ACT	

Hot Swapping	Supported
Power Consumption	<190W
EMC Standards	GB9254-2008 CLASS A
Safety Standards	GB4943-2011
Operating Temperature	0 to 50°C
Storage Temperature	-40 to 70°C
Operating Humidity	10%-90% RH (non-condensing)
MTBF	248,000 hours
Weight	Net weight: 4.58 kg
Dimensions (W x D x H)	399 mm x 440 mm x 40.18 mm

M18014-FE-C I

Module Appearance

Figure 0-35 Appearance of the M18014-FE-C I Module



External Port

The M18014-FE-C I module provides one external ports:

- Console port: As a serial communications port, it uses the RS-232 interface level and standard RJ-45 connector.

Button

Hold the button down for five seconds and release it, the LED turning green suggests that the FE module has stopped operation and can be removed. If the FE module is removed before the LED turns green, packet loss may occur.

LED

LED	Identification on the panel	Status	Meaning
System LED	Status	Off	The module is NOT receiving power.
		Solid red	The module is faulty.
		Blinking green	Initialization is in progress. Continuous blinking indicates errors.
		Solid green	The module is operational
		Solid yellow	High temperature alarm. The system keeps operating but the performance is affected.
Offline LED	Offline	Off	The module is in operation and cannot be removed.
		Green	The system has been offline. The user can release the button and remove the module in two seconds.

Specifications

Model	M18014-FE-C I
CPU	Dual-core CPU , each core with the clock speed of 1.0G
BOOTROM	8 MB
Flash Memory	512 MB
SDRAM	DDRIII 1 GB
External port	One Console port
LED	Status, Offline
Power Consumption	<90W
Hot Swapping	Supported

EMC Standards	GB9254-2008 CLASS A
Safety Standards	GB4943-2011
Operating Temperature	0 to 50°C
Storage Temperature	-40 to 70°C
Operating Humidity	10% to 90% RH (non-condensing)
MTBF	471,000 hours
Weight	Net weight: 3.54 kg
Dimensions (W x D x H)	541 mm x 270 mm x 42.68 mm

M18014-FE-C II

Module Appearance

Figure 0-36 Appearance of the M18014-FE-C II Module



External Port

The M18014-FE-C II module provides one external ports:

- Console port: As a serial communications port, it uses the RS-232 interface level and standard RJ-45 connector.

Button

Hold the button down for five seconds and release it, the LED turning green suggests that the FE module has stopped operation and can be removed. If the FE module is removed before the LED turns green, packet loss may occur.

LED

LED	Identification on the panel	Status	Meaning
System LED	Status	Off	The module is NOT receiving power.
		Solid red	The module is faulty.
		Blinking green	Initialization is in progress. Continuous blinking indicates errors.
		Solid green	The module is operational
		Solid yellow	High temperature alarm. The system keeps operating but the performance is affected.
Offline LED	Offline	Off	The module is in operation and cannot be removed.
		Green	The system has been offline. The user can release the button and remove the module in two seconds.

Specifications

Model	M18014-FE-C II
CPU	Dual-core CPU , each core with the clock speed of 1.0G
BOOTROM	8 MB
Flash Memory	512 MB
SDRAM	DDRIII 1 GB
External port	One Console port
LED	Status, Offline
Power Consumption	<150W
Hot Swapping	Supported
EMC Standards	GB9254-2008 CLASS A
Safety Standards	GB4943-2011

Operating Temperature	0 to 50°C
Storage Temperature	-40 to 70°C
Operating Humidity	10% to 90% RH (non-condensing)
MTBF	422,000 hours
Weight	Net weight: 4.22 kg
Dimensions (W x D x H)	541 mm x 270 mm x 42.68 mm

M18014-FE-D I

Module Appearance

Figure 0-37 Appearance of the M18014-FE-D I Module



External Port

The M18014-FE-D I module provides one external ports:

- Console port: As a serial communications port, it uses the RS-232 interface level and standard RJ-45 connector.

Button

Hold the button down for five seconds and release it, the LED turning green suggests that the FE module has stopped operation and can be removed. If the FE module is removed before the LED turns green, packet loss may occur.

LED

LED	Identification on the panel	Status	Meaning
System LED	Status	Off	The module is NOT receiving power.
		Solid red	The module is faulty.
		Blinking green	Initialization is in progress. Continuous blinking indicates errors.
		Solid green	The module is operational
Offline LED	Offline	Solid yellow	High temperature alarm. The system keeps operating but the performance is affected.
		Off	The module is in operation and cannot be removed.
		Green	The system has been offline. The user can release the button and remove the module in two seconds.

Specifications

Model	M18014-FE-D I
CPU	Dual-core CPU , each core with the clock speed of 1.0G
BOOTROM	8 MB
Flash Memory	512 MB
SDRAM	DDRIII 1 GB
External port	One Console port
LED	Status, Offline
Power Consumption	<160W
Hot Swapping	Supported
EMC Standards	GB9254-2008 CLASS A
Safety Standards	GB4943-2011
Operating Temperature	0 to 50°C
Storage	-40 to 70°C

Temperature	
Operating Humidity	10% to 90% RH (non-condensing)
MTBF	421,000 hours
Weight	Net weight: 3.76 kg
Dimensions (W x D x H)	541 mm x 270 mm x 42.68 mm

M18014-FE-D III

Module Appearance

Figure 0-38 Appearance of M18014-FE-D III Module



External Port

The M18014-FE-D III provides one external port:

- Console port: As a serial port for communication, it uses the RS-232 interface level and standard RJ45 connector.

Button

Hold the button down for five seconds and release it, the LED turning green suggests that the FE module has stopped operation and can be removed. If the FE module is removed before the LED turns green, packet loss may occur.

LED

LED	Identification on the panel	Status	Meaning
System LED	Status	Off	The module is NOT receiving power.
		Solid red	The module is faulty.
		Blinking green	Initialization is in progress. Continuous blinking indicates errors.
		Solid green	The module is operational
		Solid yellow	High temperature alarm. The system keeps operating but the performance is affected.
Offline LED	Offline	Off	The module is in operation and cannot be removed.
		Green	The system has been offline. The user can release the button and remove the module in two seconds.

Specifications


Model	M18014-FE-D III
CPU	Quad-core CPU, each core with the clock speed of 1.0G
BOOTROM	8 MB
Flash Memory	512 MB
SDRAM	DDRIII 1 GB
External port	One Console port
LED	Status, Offline
Power Consumption	<500W
Hot Swapping	Supported
EMC Standards	GB9254-2008 CLASS A
Safety Standards	GB4943-2011
Operating Temperature	0 to 50°C
Storage	-40 to 70°C

Temperature	
Operating Humidity	10% to 90% RH (non-condensing)
MTBF	319,000 hours
Weight	Net weight: 4.56 kg
Dimensions (W x D x H)	541 mm x 270 mm x 42.68 mm

M18010-FE-C I

Module Appearance

Figure 0-39 Appearance of the M18010-FE-C I Module

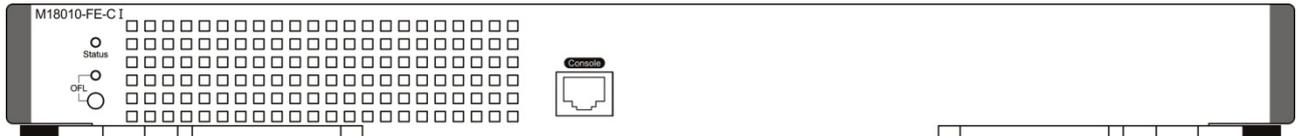

External Port

The M18010-FE-C I module provides one external port:

- Console port: As a serial communication port, it uses the RS-232 interface level and standard RJ-45 connector.

LED

LED	Identification on the panel	Status	Meaning
System LED	Status	Off	The module is NOT receiving power.
		Solid red	The module is faulty.
		Blinking green	Initialization is in progress. Continuous blinking indicates errors.
		Solid green	The module is operational
		Solid yellow	High temperature alarm. The system keeps operating but the performance is affected.
Offline LED	Offline	Off	The module is in operation and cannot be removed.
		Green	The system has been offline. The user can release the button and remove the module in two seconds.

Specifications


Model	M18010-FE-C I
CPU	Dual-core CPU, each core with the clock speed of 1.0G
BOOTROM	8 MB
Flash Memory	512 MB
SDRAM	DDRIII 1 GB
External Port	One console port
LED	Status, Offline
Power Consumption	<90W
Hot Swapping	Supported
EMC Standards	GB9254-2008CLASS A
Safety Specification	GB4943-2011
Operating Temperature	0 to 50°C
Storage	-40 to 70°C

Temperature	
Operating Humidity	10% to 90% RH (non-condensing)
Weight	Net weight: 2.72 kg
Dimensions (W x D x H)	391 mm x 270 mm x 42.68 mm

M18010-FE-D III

Module Appearance

Figure 0-40 Appearance of the M18010-FE-D III Module

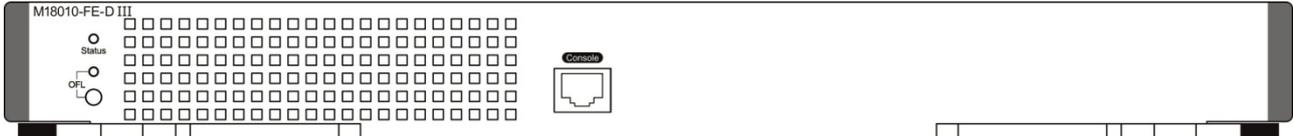

External Port

The M18010-FE-D III module provides one external port:

- Console port: As a serial communication port, it uses the RS-232 interface level and standard RJ-45 connector.

Button

Hold the button down for five seconds and release it, the LED turning green suggests that the FE module has stopped operation and can be removed. If the FE module is removed before the LED turns green, packet loss may occur.

LED

LED	Identification on the panel	Status	Meaning
System LED	Status	Off	The module is NOT receiving power.
		Solid red	The module is faulty.
		Blinking green	Initialization is in progress. Continuous blinking indicates errors.
		Solid green	The module is operational
		Solid yellow	High temperature alarm. The system keeps operating but the performance is affected..
Offline LED	Offline	Off	The module is in operation and cannot be removed.
		Green	The system has been offline. The user can release the button and remove the module in two seconds.

Specifications


Model	M18010-FE-D III
CPU	Quad-core CPU, each core with the clock speed of 1.0G
BOOTROM	8 MB
Flash Memory	512 MB
SDRAM	DDRIII 1 GB
External port	One Console port
LED	Status, Offline
Power Consumption	<314W
Hot Swapping	Supported
EMC Standards	GB9254-2008 CLASS A
Safety Standards	GB4943-2011
Operating Temperature	0 to 50°C

Storage Temperature	-40 to 70°C
Operating Humidity	10% to 90% RH (non-condensing)
MTBF	390,000 hours
Weight	Net weight: 3.36 kg
Dimensions (W x D x H)	391 mm x 270 mm x 42.68 mm

M18010-FE-D I

Module Appearance

Figure 0-41 Appearance of the M18010-FE-D I Module

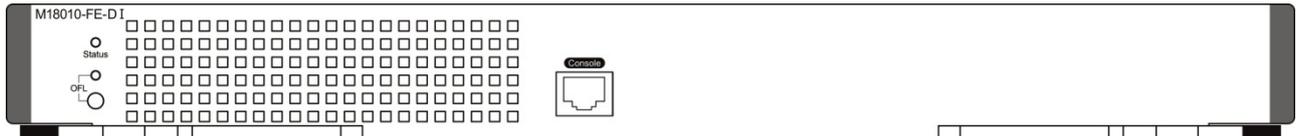

External Port

The M18010-FE-D I module provides one external port:

- Console port: As a serial communication port, it uses the RS-232 interface level and standard RJ-45 connector

Button

Hold the button down for five seconds and release it, the LED turning green suggests that the FE module has stopped operation and can be removed. If the FE module is removed before the LED turns green, packet loss may occur.

LED

LED	Identification on the panel	Status	Meaning
System LED	Status	Off	The module is NOT receiving power.
		Solid red	The module is faulty.
		Blinking green	Initialization is in progress. Continuous blinking indicates errors.
		Solid green	The module is operational
		Solid yellow	High temperature alarm. The system keeps operating but the performance is affected.
Offline LED	Offline	Off	The module is in operation and cannot be removed.
		green	The system has been offline. The user can release the button and remove the module in two seconds.

Specifications


Model	M18010-FE-D I
CPU	Quad-core CPU, each core with the clock speed of 1.0G
BOOTROM	8 MB
Flash Memory	512 MB
SDRAM	DDRIII 1 GB
External port	One Console port
LED	Status, Offline
Power Consumption	<107W
Hot Swapping	Supported
EMC Standards	GB9254-2008 CLASS A
Safety Standards	GB4943-2011
Operating Temperature	0 to 50°C
Storage Temperature	-40 to 70°C

Operating Humidity	10% to 90% RH (non-condensing)
MTBF	460,000 hours
Weight	Net weight: 2.8 kg
Dimensions (W x D x H)	391 mm x 270 mm x 42.68 mm

RG-PA1600I

Module Appearance

Figure 0-42 Appearance of the RG-PA1600I Module

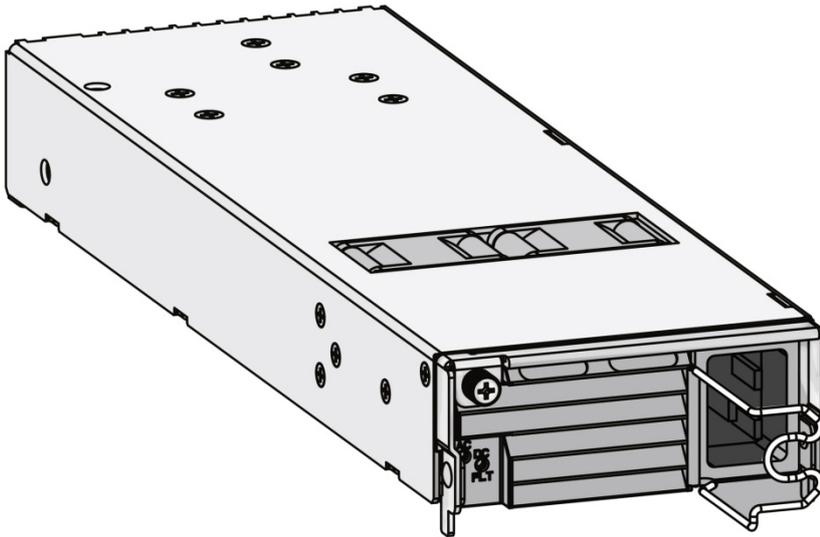

External port

The RG-PA1600I module provides 12 VAC input to the overall system of the RG-N18014/N18010 switch. The front panel of the power supply module provides a 3-pin power port, which can be connected to standard 16A power cord.

LED

LED		Meaning
AC	DC/FLT	
Solid green	Solid green	The module is operational
Off	Solid red	The is no power input or input undervoltage.
Solid green	Solid red	Overvoltage.
Solid green	Solid red	Overcurrent.
Solid green	Solid orange	Temperature alarm
Solid green	Solid red	Over-temperature fault
Solid green	Solid red	PSR on/off

Specifications

Module Model	RG-PA1600I	
Rated Voltage Range	100 to 120 VAC, 200 to 240 VAC; 50/60 Hz	
Max Voltage Range	90 to 264 VAC; 47 to 63 Hz	
Max Power Output	90 to 180 VAC 180 to 264 VAC	Power: 1200 W Power: 1600 W

High Current DC Parameter	192 to 288VDC Power: 1600 W
Weight	Net weight: 2.04 kg
Power Cord Requirement	16A power cord




Note When you plug in the power cord, please fasten the anti-loose buckle to the power cord to prevent loosening.

RG-PA600I

Module Appearance

Figure 0-43 Appearance of the RG-PA600I Module

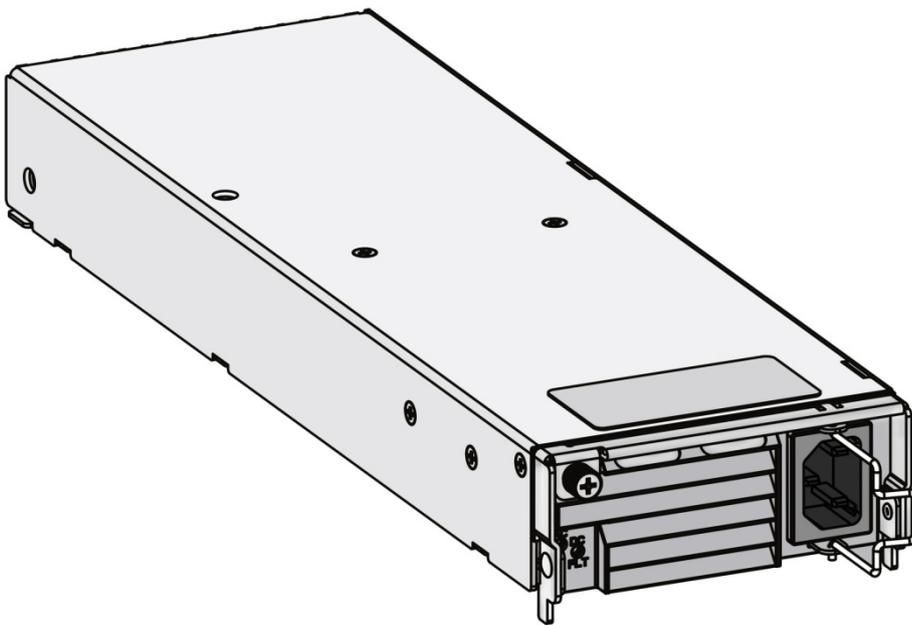

External Port

The RG-PA600I module provides 12 VAC input to the overall system of the RG-N18014/N18010 switch. The front panel of the power supply module provides a 3-pin power port, which can be connected to standard 10A power cord.

LED

LED		Meaning
AC	DC/FLT	
Solid green	Solid green	The module is operational
Off	Solid red	There is no power input or input undervoltage.
Solid green	Solid red	Overvoltage
Solid green	Solid red	Overcurrent
Solid green	Solid orange	Temperature alarm
Solid green	Solid red	Over-temperature fault
Solid green	Solid red	PSR on/off

Specifications

Module Model	RG-PA600I
Rated Voltage Range	100 to 120 VAC, 200 to 240 VAC; 50/60 Hz
Max Voltage Range	90 to 264 VAC; 47 to 63 Hz

Max Power Output	90 to 180 VAC Power: 600 W 180 to 264 VAC Power: 600 W
High Current DC Parameter	192 to 288VDC Power: 600 W
Weight	Net weight: 1.64 kg
Power Cord Requirement	10A power cord




Note When you plug in the power cord, please fasten the anti-loose buckle to the power cord to prevent loosening.

RG-PA1600I-P

Module Appearance

Figure 0-44 Appearance of the RG-PA1600I-P Module

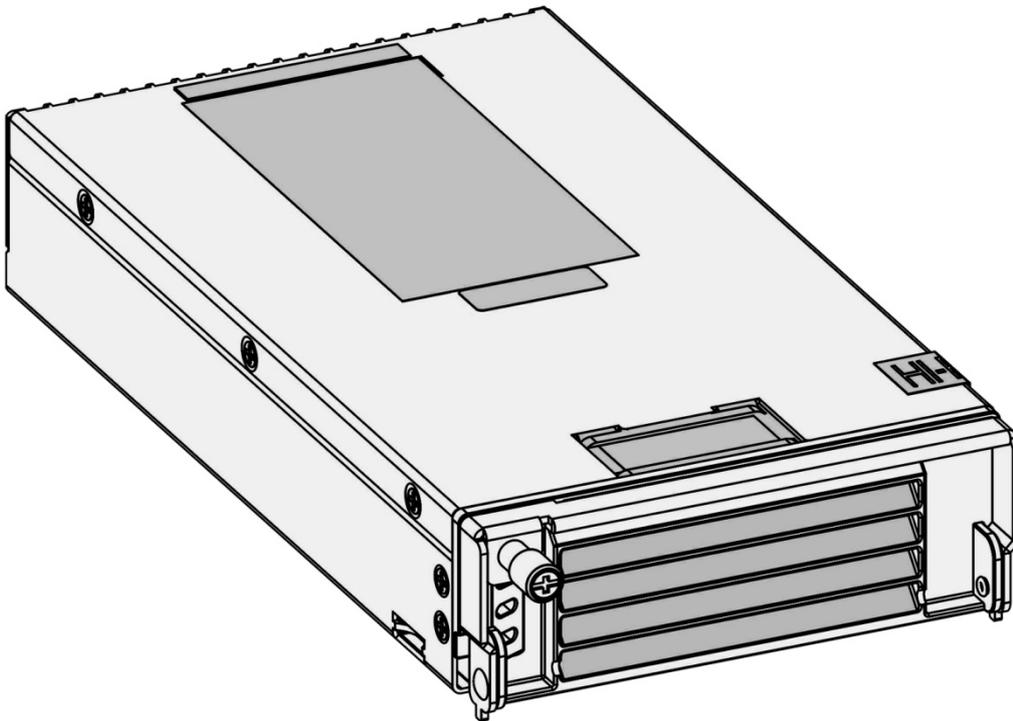


As an AC power module, the RG-PA1600I-P module provides PoE power input to the overall system of the RG-N18010 switch.

External Port

The 3-pin power port for the PoE module is on the switch. This port can be connected to standard 16 A power cord.

Figure 0-45 PoE Power Module Slot and 3-pin Power Port

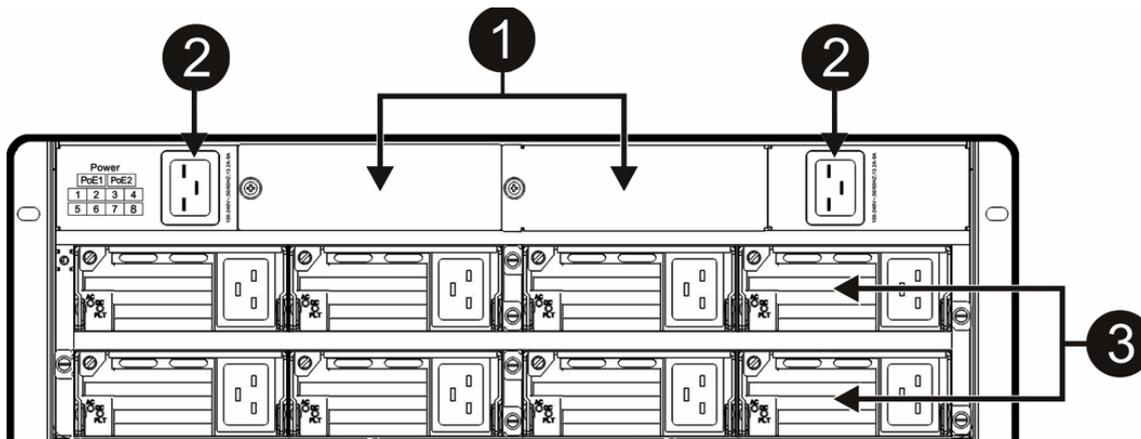

- Note:
- ① PoE power module slot
 - ② PoE 3-pin power port
 - ③ System power module slot



Caution RG-PA1600I-P applies to the host installed with an earlier version than 1.20.



Caution Do not insert the PoE power supply into the system power module slot.



Caution Do not connect the PoE power cord to the system power supply. The 3-pin power port for the PoE module is on the switch.



Caution RG-N18010 switch provides two PoE power module slots (PoE1 and PoE2) and two 3-pin power ports (port for PoE1 is the left one of ② marked on Figure 1-45; port for PoE2 is the right one of ② marked on Figure 1-45).

LED

LED			Meaning
Run	Alarm	Fault	
Solid green	Off	Off	The module is operational
Off	Off	Off	There is no power input
Blinking green	Off	Off	The module is in standby mode
Solid green	Solid yellow	Off	Persistent overcurrent.
Solid green	Solid yellow	Off	Temperature alarm
Off	Off	Solid red	Over-temperature causes power-off
Off	Off	Solid red	AC is powered off.
Off	Off	Solid red	Short circuit.
Off	Off	Solid red	Output undervoltage
Off	Off	Solid red	Output overvoltage
Solid green	Off	Blinking red	Communication fails

Specifications

Module Model	RG-PA1600I-P
Rated Voltage Range	100 to 120 VAC, 200 to 240 VAC; 50/60 Hz
Max Voltage Range	90 to 264 VAC; 47 to 63 Hz
Max Power Output	90 to 175 VAC Power: 1000 W 176 to 264 VAC Power: 1600 W
Weight	Net weight: 1.60 kg
Power Cord Requirement	16A power cord




Note When you plug in the power cord, please fasten the anti-loose buckle to the power cord to prevent loosening.

RG-PA1600I-PL

Module Appearance

Figure 0-46 Appearance of the RG-PA1600I-PL Module

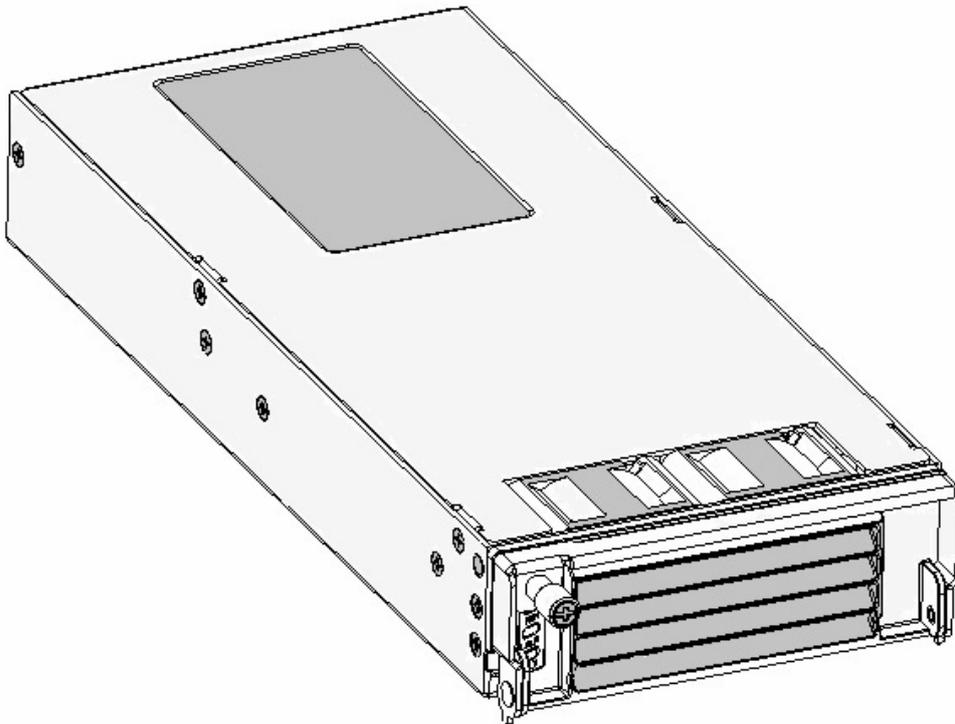


As an AC power module, the RG-PA1600I-PL module provides PoE power input to the overall system of the RG-N18010 switch. Dimension: 116.5mm*272.5mm*40.5mm (W x D x H).

External Port

The 3-pin power port for the PoE module is on the switch. This port can be connected to standard 16 A power cord.

Figure 0-47 PoE Power Module Slot and 3-pin Power Port

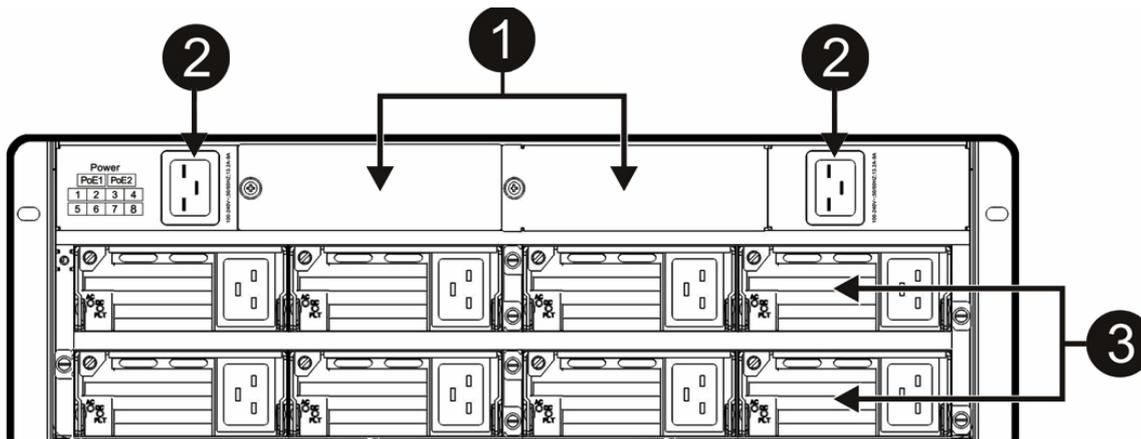

- Note:
- ① PoE power module slot
 - ② PoE 3-pin power port
 - ③ System power module slot



Caution RG-PA1600I-PL applies to the host installed with version 1.20 and later.



Caution Do not insert the PoE power supply into the system power module slot.



Caution Do not connect the PoE power cord to the system power supply. The 3-pin power port for the PoE module is on the switch.



Caution RG-N18010 switch provides two PoE power module slots (PoE1 and PoE2) and two 3-pin power ports (port for PoE1 is the left one of ② marked on Figure 1-47; port for PoE2 is the right one of ② marked on Figure 1-47).

LED

LED			Meaning
Run	Alarm	Fault	
Solid green	Off	Off	The module is operational
Off	Off	Off	There is no power input
Blinking green	Off	Off	The module is in standby mode
Solid green	Solid yellow	Off	Persistent overcurrent.
Solid green	Solid yellow	Off	Temperature alarm
Off	Off	Solid red	Over-temperature causes power-off
Off	Off	Solid red	AC is powered off.
Off	Off	Solid red	Short circuit.
Off	Off	Solid red	Output undervoltage
Off	Off	Solid red	Output overvoltage
Solid green	Off	Blinking red	Communication fails

Specifications

Module Model	RG-PA1600I-PL
Rated Voltage Range	100 to 120 VAC, 200 to 240 VAC; 50/60 Hz
Max Voltage Range	90 to 264 VAC; 47 to 63 Hz
Max Power Output	90 to 175 VAC Power: 1000 W 176 to 264 VAC Power: 1600 W
Weight	Net weight: 1.60 kg
Power Cord Requirement	16A power cord




Note When you plug in the power cord, please fasten the anti-loose buckle to the power cord to prevent loosening.

RG-PA3000I-PL

Module Appearance

Figure 0-48 Appearance of the RG-PA3000I-PL Module

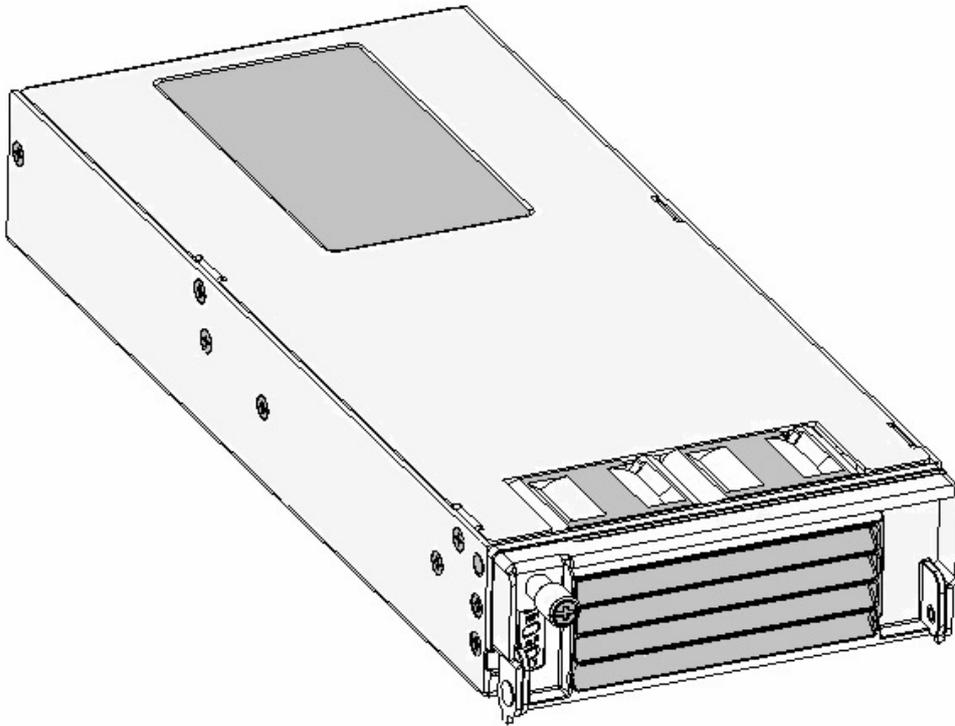


As an AC power module, the RG-PA 3000I-PL module provides PoE power input to the overall system of the RG-N18010 switch. Dimension: 116.5mm*272.5mm*40.5mm (W x D x H).

External Port

The 3-pin power port for the PoE module is on the switch. This port can be connected to standard 16 A power cord.

Figure 0-49 PoE Power Module Slot and 3-pin Power Port

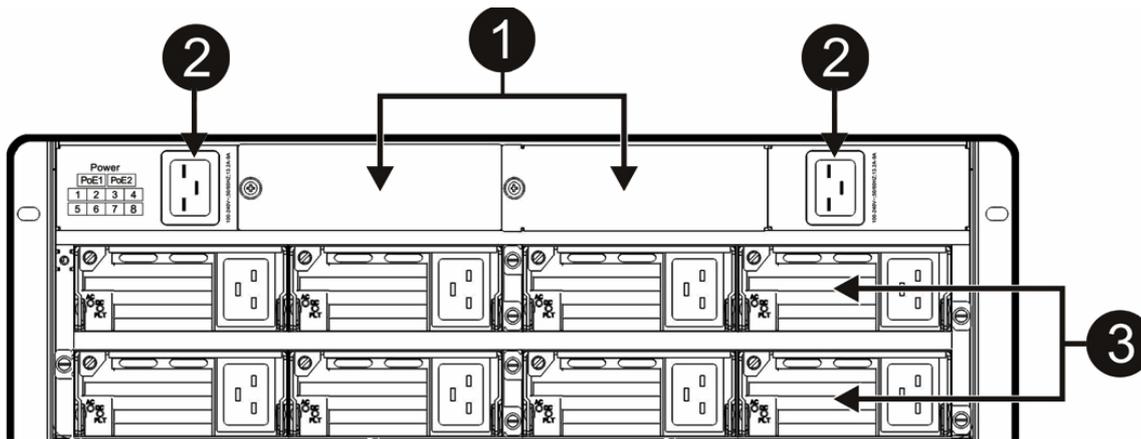

- Note:
- ① PoE power module slot
 - ② PoE 3-pin power port
 - ③ System power module slot



Caution RG-PA3000I-PL applies to the host installed with version 1.20 and later.



Caution Do not insert the PoE power supply into the system power module slot.



Caution Do not connect the PoE power cord to the system power supply. The 3-pin power port for the PoE module is on the switch.



Caution RG-N18010 switch provides two PoE power module slots (PoE1 and PoE2) and two 3-pin power ports (port for PoE1 is the left one of ② marked on Figure 1-47; port for PoE2 is the right one of ② marked on Figure 1-49).

LED

LED			Meaning
Run	Alarm	Fault	
Solid green	Off	Off	The module is operational
Off	Off	Off	There is no power input
Blinking green	Off	Off	The module is in standby mode
Solid green	Solid yellow	Off	Persistent overcurrent.
Solid green	Solid yellow	Off	Temperature alarm
Off	Off	Solid red	Over-temperature causes power-off
Off	Off	Solid red	AC is powered off.
Off	Off	Solid red	Short circuit.
Off	Off	Solid red	Output undervoltage
Off	Off	Solid red	Output overvoltage
Solid green	Off	Blinking red	Communication fails

Specifications

Module Model	RG-PA3000I-PL
Rated Voltage Range	100 to 120 VAC, 200 to 240 VAC; 50/60 Hz
Max Voltage Range	90 to 264 VAC; 47 to 63 Hz
Max Power Output	90 to 175 VAC Power: 1000 W 176 to 264 VAC Power: 1600 W
Weight	Net weight: 1.60 kg
Power Cord Requirement	16A power cord




Note When you plug in the power cord, please fasten the anti-loose buckle to the power cord to prevent loosening.

RG-PD1600I

Module Appearance

Figure 0-50 Appearance of the RG-PD1600I Module

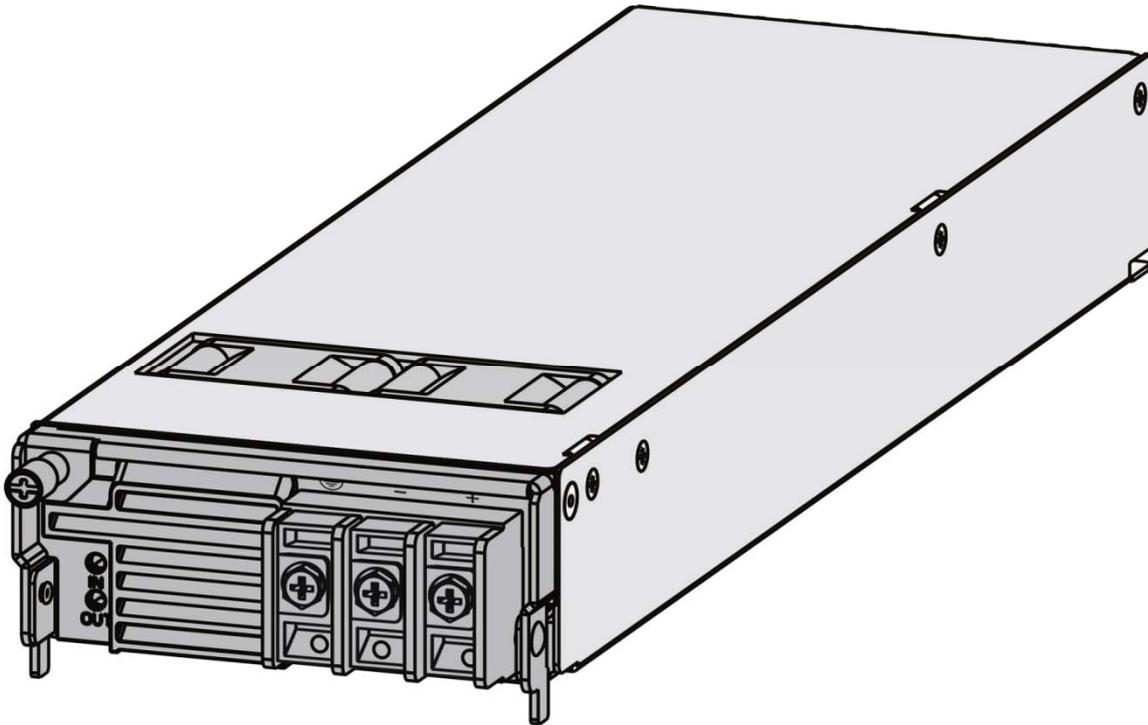

External port

The RG-PD1600I module provides one DC (-48 V) power port.

LED

LED		Meaning
IN	OUT	
Solid green	Solid green	The module is operational
Solid green	Solid red	There is external power supply. The power module is not in use.
Off	Solid red	There is no external power supply. The power module is in use.
Off	Solid red	Overcurrent

Solid green	Solid red	Output overcurrent protection
Solid green	Solid orange	Temperature alarm
Solid green	Solid red	Over-temperature protection
Solid green	Solid red	PSR on/off
Solid green	Solid red	Phase loss protection
Solid green	Solid red	Fan failure

Specifications

Module Model	RG-PD1600I
Rated Voltage Range	-48 VDC
Max Voltage Range	-40 to -75 VDC
Max Power Output	1400 W
Weight	Net weight: 1.60 kg
Power Cord Requirement	50A power cord




Caution Please connect the power cord to the corresponding terminal according to the color and then tighten the screws.

RG-PD600I

Module Appearance

Figure 0-51 Appearance of the RG-PD600I Module

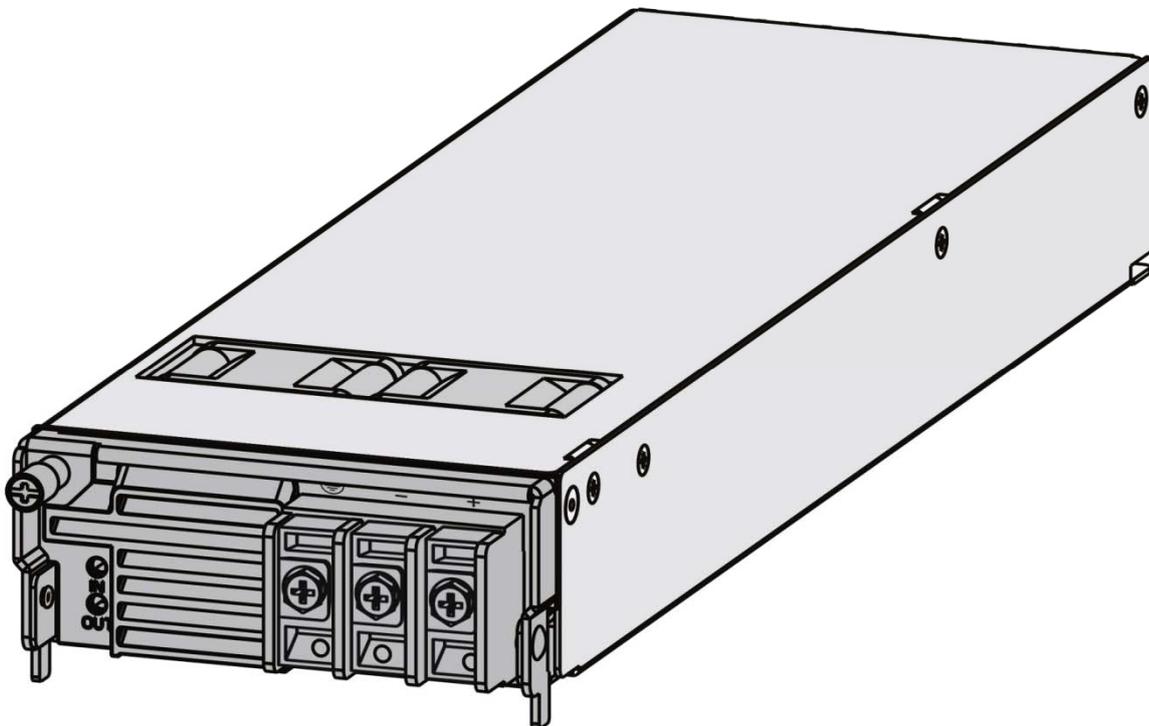

External port

The RG-PD600I module provides one DC (-48V) power port.

LED

LED		Meaning
IN	OUT	
Solid green	Solid green	The module is operational
Solid green	Solid red	There is external power supply. The power module is not in use.
Off	Solid red	There is no external power supply. The power module is in use.
Off	Solid red	Overcurrent
Solid green	Solid red	Output overcurrent protection
Solid green	Solid orange	Temperature alarm
Solid green	Solid red	Over-temperature protection
Solid green	Solid red	PSR on/off
Solid green	Solid red	Phase loss protection
Solid green	Solid red	Fan failure

Specifications

Module Model	RG-PD600I
Rated Voltage Range	-48 VDC
Max Voltage Range	-40 to -75 VDC
Max Power Output	600 W
Weight	Net weight: 1.30 kg
Power Cord Requirement	20A power cord




Caution

Please connect the power cord to the corresponding terminal according to the color and then tighten the screws.

M14-FAN

Module Appearance

Figure 0-52 Appearance of the M14-FAN Module

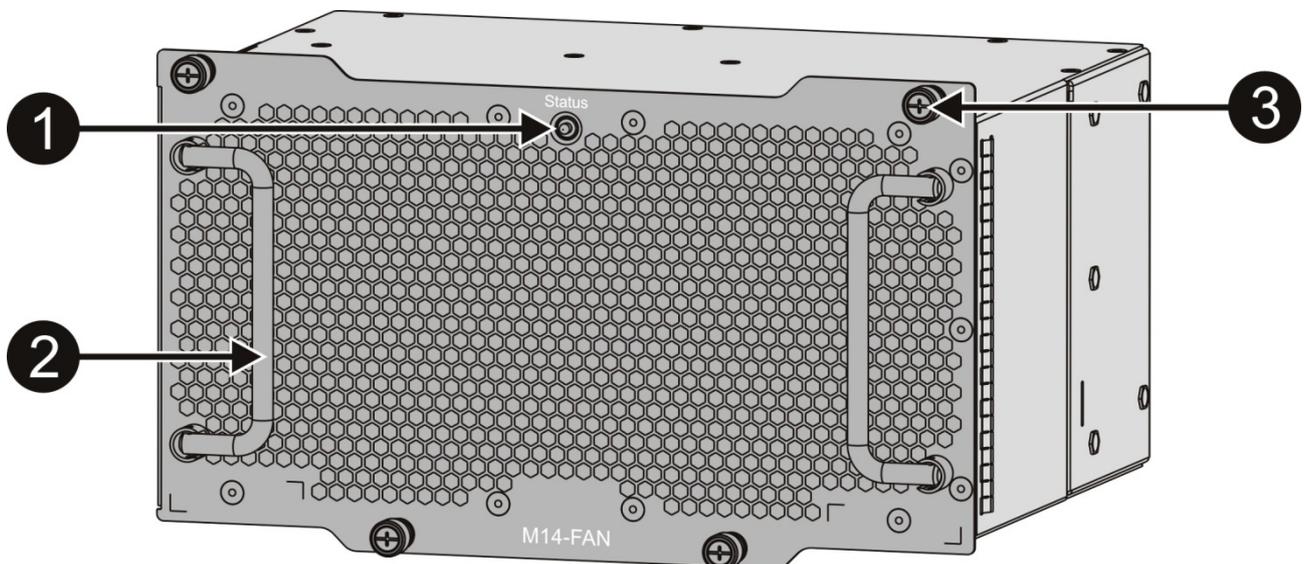

- Note:
- ① Fan status LED
 - ② Fan handle
 - ③ Captive screws of the fan tray

Composition

The M14-FAN is the fan for service modules, supervisor modules and switch fabric modules on the RG-N18014. There are five M14-FAN trays, each with four 120 mm x 120 mm x 38 mm fans and one fan control board. The M14-FAN draws air out to form convection for heat dissipation.

Specifications

Fan Model	M14-FAN
Dimension (W x D x H)	245.8 mm x 177 mm x 144.2 mm

LED

LED	Status	Meaning
Status	Off	The fan is NOT receiving power or fails.
	Solid green	The fan is operational.

Features

Function	Meaning
Status Monitoring	Rotational speed monitoring, failure alarm
Automatic Speed-adjustment	Speed-adjustment controlled by temperature
Hot Swapping	Hot swapping is supported by the fan tray.




Caution The fan trays of RG-N18014 and RG-N18010 are different and cannot replace each other.

M10-FAN-R

Module Appearance

Figure 0-53 Appearance of the M10-FAN-R Module

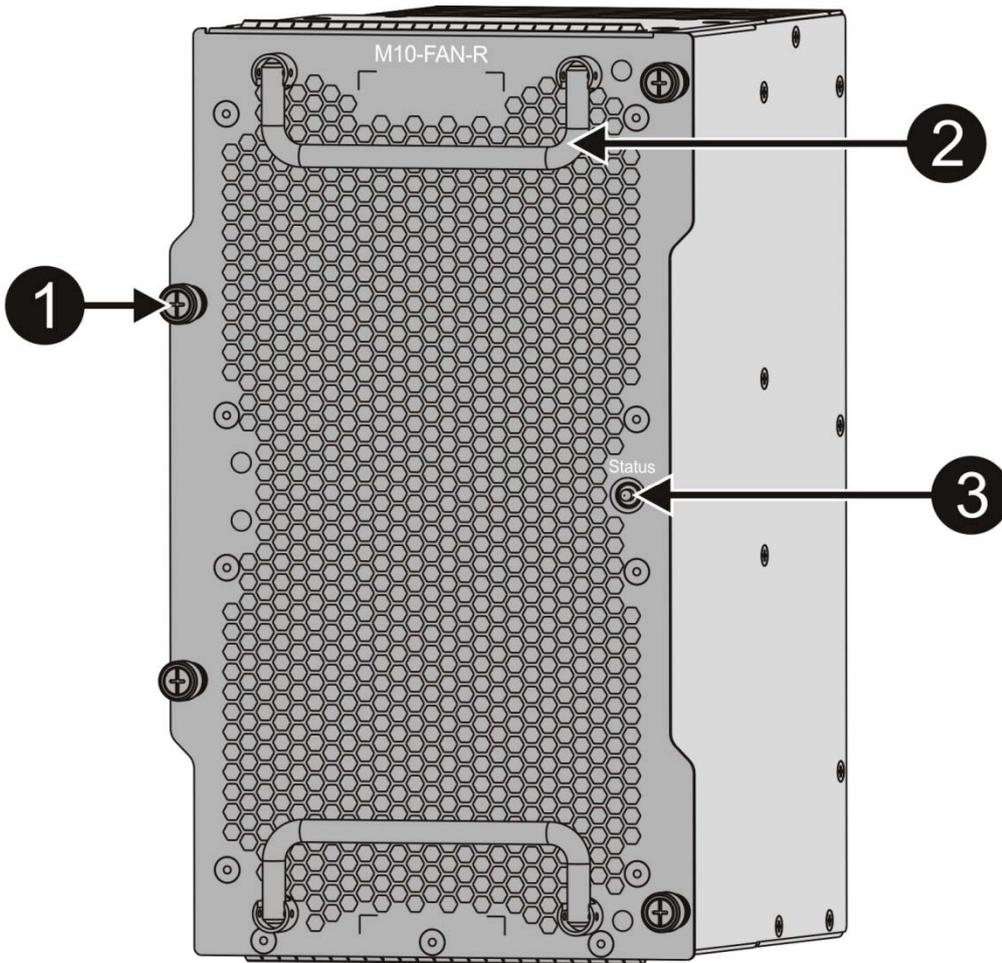

- Note:
- ① Captive screws of the fan tray
 - ② Fan handle
 - ③ Fan status LED

Composition

The M10-FAN-R is the fan for service modules and supervisor modules on the RG-N18010. There are three M10-FAN-R trays, each with four 120 mm x 120 mm x 38 mm fans and one fan control board. The M10-FAN-R draws air out to form convection for heat dissipation.

Specifications

Fan Model	M10-FAN-R
Dimension (W x D x H)	245.8 mm x 177 mm x 144.2 mm

LED

LED	Status	Meaning
Status	Off	The fan is NOT receiving power or fails.
	Solid green	The fan is operational.


Features

Function	Meaning
Status monitoring	Rotational speed monitoring, failure alarm
Automatic Speed-adjustment	Speed-adjustment controlled by temperature
Hot Swapping	Hot swapping is supported by the fan tray.

M10-FAN-F

Module Appearance

Figure 0-54 Appearance of the M10-FAN-F Module

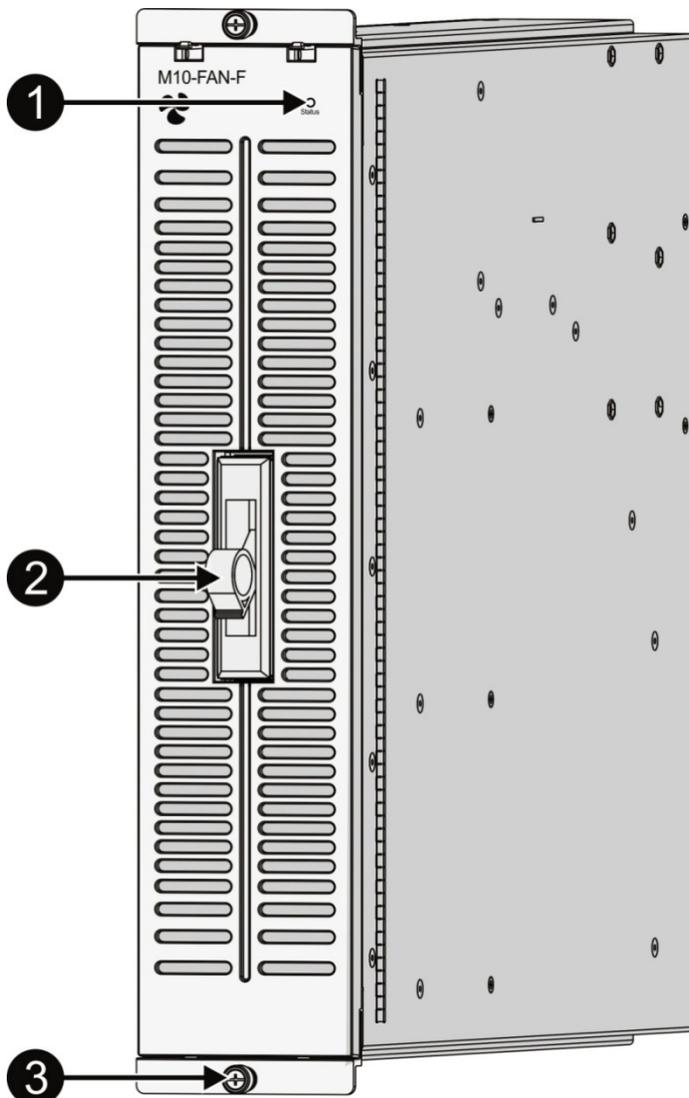

Note:

- ① Fan status LED
- ② Fan handle
- ③ Captive screws of the fan tray

Composition

The M10-FAN-F is the fan for switch fabric modules on the RG-N18010. There are one M10-FAN-R trays with six 80 mm x 80 mm x 38 mm fans and one fan control board. The M10-FAN-F draws air out to form convection for heat dissipation.

Specifications

Fan Model	M10-FAN-F
Dimension (W x D x H)	83 mm x 431.5 mm x 399 mm

LED

LED	Status	Meaning
Status	Off	The fan is NOT receiving power or fails.
	Solid green	The fan is operational.

Features

Function	Meaning
Status Monitoring	Rotational speed monitoring, failure alarm
Automatic Speed-adjustment	Speed-adjustment controlled by temperature
Hot Swapping	Hot swapping is supported by the fan tray.

Preparation before Installation

Safety Suggestions



Note To avoid body injury and equipment damage, please carefully read the safety suggestions before you install RG-N18000.



Note The following safety suggestions do not cover all possible dangers.

General Suggestions

- Take security measures (such as wearing an anti-static wrist strap) to ensure safety.
- Keep the chassis clean, free from any dust. Please do not place the switch at a damp place to prevent the moisture from entering the switch.
- Make sure the installation site is dry and flat. Take skid-proof measures.
- Do not place the equipment in a walking area.
- Do not wear loose clothes or any other things that may be caught by the chassis during installation and maintenance.
- Moving or lifting the switch and its components requires team work. Be careful not to get hurt.

Safety Precautions for Removal

RG-N18000 is large and heavy. When you handle them, please pay attention to the following requirements:

- Avoid moving the equipment frequently.
 - Turn off all power supplies and unplug all power cables before you remove the equipment.
 - At least four people are needed to move the equipment. Do not attempt to move the equipment by one person only.
 - Keep balance when moving the equipment, and avoid injuring your leg and feet or spraining your waist.
-



Caution Do not move the equipment by grasping the panel, power supply handle, ventilation holes of the chassis, as they are not designed to bear the weight of the entire equipment. This may cause damage or even injure you.



Caution Remove all supervisor modules, service modules and power modules before you move the device, to reduce the chassis weight.



Caution The device must be installed and used in the restricted access location.

Electrical Safety

- Please observe local regulations and specifications when performing electrical operations. Relevant operators must be qualified.
- Please carefully check for any potential danger in the working area, for example, ungrounded power supply, unreliable grounding of the power supply and damp/wet ground or floor.
- Find out the location of the emergency power supply switch in the room before installation. First cut off the power supply in case of an accident.

- Be sure to make a careful check before you shut down the power supply.
 - Do not place the equipment in a damp/wet location. Do not let any liquid enter the chassis
-

**Caution**

Any nonstandard and inaccurate electrical operation can cause an accident such as fire or electrical attack, thus causing severe even fatal damages to human bodies and equipment.

**Caution**

Direct or indirect touch through a wet object on high-voltage and mains supply can bring a fatal danger.

Static Discharge Damage Prevention

Although much has been done in RG-N18000 to prevent static electricity, great damage may be caused to the circuitry and equipment when the static electricity exceeds a certain limit. In the communication network of the RG-N18000, electrostatic induction may come from the following sources: External electric field produced by the high-voltage supply cable, lightning, etc; internal systems such as the indoor floor and the entire structure.

To prevent damage from static electricity, you must pay attention to the following:

- Properly ground the equipment.
 - Take dust prevention measures in the room.
 - Maintain an appropriate humidity.
 - Always wear an anti-static wrist strap when you touch any circuit board.
 - Try to hold a circuit board by its edges. Do not touch any components or the PCB.
 - Use an anti-static shielding bag to properly store the board.
 - Do not let any clothes touch a circuit board. An antistatic wrist strap can only prevent human static electricity from damaging the circuit board, but cannot prevent any static electricity on clothes.
-

**Caution**

The N18000 series switches are equipped with an anti-static wrist strap. For the RG-N18014 and RG-N18010 switches, the anti-static wrist strap socket locates at the lower-right corners of the front and back panels.

Wearing an Anti-Static Wrist Strap

The N18000 series switches are equipped with an anti-static wrist strap. To protect electronic components against static electricity, wear an anti-static wrist strap close to your skin and keep it properly grounded while installing swappable modules.

Use an anti-static wrist strap as follows:

- 1) Ensure that the switch is properly grounded.
 - 2) Put your hand in the anti-static wrist strap.
 - 3) Tighten the buckle till the trap is closely attached to your skin.
-

**Caution**

For safety, use a multimeter to measure the resistance between yourself and the ground, which should be within the range from 1 to 10 Ω .

**Caution**

Make sure that the switch is properly grounded when the anti-static wrist strap is connected to the ground through the chassis jack.


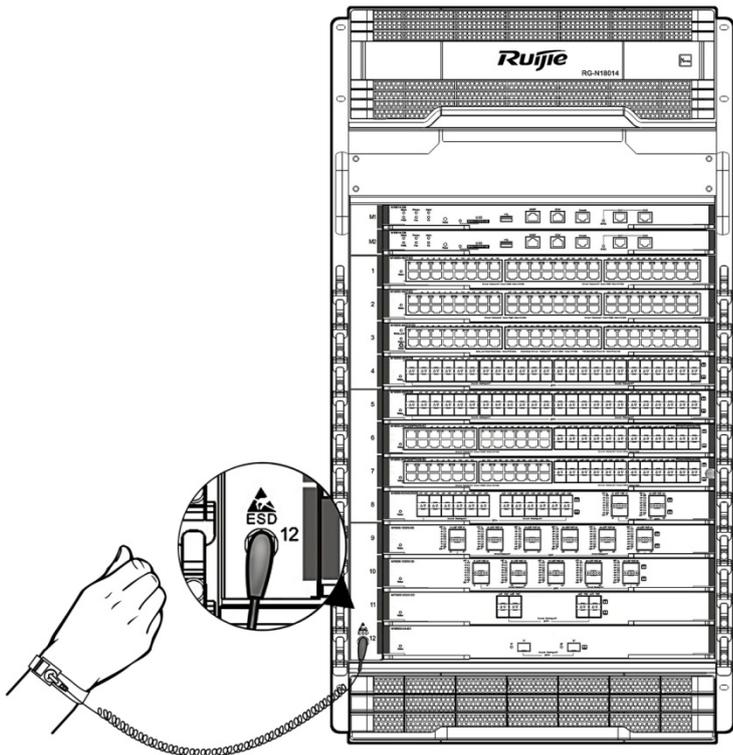


Figure 2-2 Preventing EMI on RG-N18010

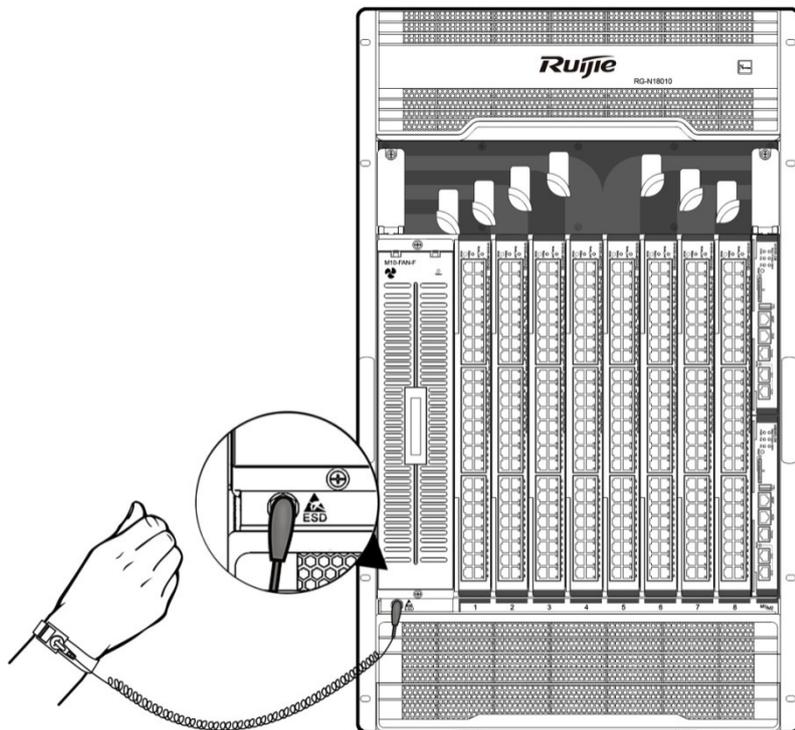

Laser Safety

Among the modules supported by RG-N18000, there are a great number of optical modules that are Class I laser products.

Precautions:

- When a fiber transceiver works, ensure that the port has been connected with a fiber or is covered with a dust cap so as to keep out dust and avoid burning your eyes.
- Do not stare into any fiber port.



Caution Do not stare into any fiber port under any circumstances, as this may cause permanent damage to your eyes.

Installation Site Requirements

RG-N18000 must be used in the room. To ensure normal operation and a prolonged useful life of the equipment, the installation site must meet the following requirements.

Load Bearing Requirements

Evaluate the load bearing requirements for the ground according to the weight of the switch and its components (such as the cabinet, chassis, single board and power supply). Make sure the installation site meet the requirements.

Space Requirements

- It is recommended that the width of the machine room corridor be greater than 0.8m to ensure enough space for moving of chassis and plugging and removing of modules.
- Please do not install the switch against the wall. Instead, please leave some space around the switch for heat dissipation and switch maintenance.

Ventilation Requirements

See *RG-N18014* and *RG-N18010* in *Product Overview* for their heat dissipation and ventilation respectively. Sufficient space (10 cm at least) must be reserved at the air intakes and exhaust vents for ventilation. After connecting various cables, you should bundle the cables or place them in the cable management bracket to avoid blocking air intakes.



Caution Remove all foam packaging materials and protective plastics before you power on RG-N18014/RG-N18010.

Temperature Requirements

To ensure the normal operation and a prolonged useful life of the RG-N18000, you must maintain an appropriate temperature in the equipment room. Too high or low temperature for a long period of time may damage the equipment.

- In an environment with high temperature, the equipment is subjected to even greater harm, as its performance may degrade significantly and its useful life may be shortened in the case of long-term exposure that expedites the aging process.

Temperature Requirements of the RG-N18000

Operating Temperature	Storage Temperature
0°C–50°C	-40°C to 70°C



Note The ambient temperature is measured at the point that is 1.5m above the floor and 0.4m before the equipment when there is no protective plate in front or back of the equipment rack.

Humidity Requirements

To ensure the normal operation and a prolonged use life of the RG-N18000, you must maintain an appropriate humidity in the equipment room. Too high or low humidity for a long period of time may damage the equipment.

- In an environment with high relative humidity, the insulating material may have bad insulation or even leak electricity, and sometimes the materials may suffer from mechanical performance change and metallic parts may get rusted.

- On the other hand, in an environment with low relative humidity, the insulating strip may dry and shrink, and static electricity may occur easily and endanger the circuit on the equipment.

Humidity Requirements of the RG-N18000

Operating Humidity	Storage Humidity
10% to 90% (non-condensing)	5% to 95% (non-condensing)



Note The ambient humidity is measured at the point that is 1.5m above the floor and 0.4m before the equipment when there is no protective plate in front or back of the equipment rack.

Cleanness Requirements

Dust poses the top threat to the running of the equipment. The indoor dust falling on the equipment may be adhered by the static electricity, causing bad contact of the metallic joint. Such electrostatic adherence may occur more easily when the relative humidity is low, not only affecting the use life of the equipment, but also causing communication faults. The following table shows the requirements for the dust content and granularity in the equipment room.

Substance	Concentration Limit (particles/m ³)
Dust particles (diameter $\geq 0.5 \mu\text{m}$)	$\leq 3.5 \times 10^6$
Dust particles (diameter $\geq 5 \mu\text{m}$)	$\leq 3 \times 10^4$



Note The air filter of the RG-N18010/N18014 must be cleaned at interval to ensure good ventilation and dust prevention.

Apart from dust, the salt, acid and sulfide in the air in the equipment room must also meet strict requirements; as such poisonous substances may accelerate the corrosion of the metal and the aging of some parts. The equipment room should be protected from the intrusion of harmful gases (for example, SO₂, H₂S, NO₂ and Cl₂), whose requirements are listed in the following table.

Gas	Average (mg/m ³)	Maximum (mg/m ³)
SO ₂	0.3	1.0
H ₂ S	0.1	0.5
NO ₂	0.5	1.0
Cl ₂	0.1	0.3



Note The **Average** refers to the average limit of harmful gas in one week. The **Maximum** value is the upper limit of the harmful gas measured in one week for up to 30 minutes every day.

Dusting Cycle Suggestions:

1. Clean the air filters every three months.
2. Dust the air intakes and exhaust vents of all modules every three months.
3. Dust the modules every one or two years.
4. Dust the fan shelves yearly.
5. Dust the chassis, including the backboard, every one or two years.



Note If the device is in a poor dust prevention environment, please increase the dusting times.

Power Requirements

When the RG-N18000 can use the following power supplies:

- RG-PA1600I and RG-PA600I power modules adopt 90 to 264 VAC/ 47 to 63 Hz input.
- RG-PD1600I and RG-PD600I power modules adopt -40.5 to -75V DC input.



Note

Input power shall be larger than the actual power consumption of entire system. For example, the N18014 chassis is installed with two M18014-CM , two M18000-48XS-DB and two M18014-FE-D I modules, the total power consumption of the device would be: 2 x 44W (M18014-CM)+ 2 x 232W (M18000-48XS-DB) + 5 x 174W(M14-FAN) + 2 x 160W (M18014-FE-D I) = 1742W. It is recommended that you adopt two RG-PA1600I or two RG-PD1600I modules.

The following table lists the power consumption of each module:

RG-N18000 Series Modules	Maximum Power Consumption (W)
M18014-CM	44
M18014-CM II	102
M18010-CM	40
M18010-CM II	102
M18000-24GT20SFP4XS-ED	100
M18000-48GT-ED	95
M18000-48GT-EF	125
M18000-48GT-P-ED	No PoE or PoE+ supply: <95W; PoE supply: <95W+15.4W x N (N stands for the number of PoE ports in use, no greater than 48); PoE+ supply: <95W+30W x N (N stands for the number of PoE+ ports in use, no greater than 48)
M18000-44SFP4XS-ED	135
M18000-44SFP4XS-EF	175
M18000-08XS-ED	85
M18000-08XS-EF	120
M18000-48XS-DB	232
M18000-24QXS-DB	374
M18000-12QXS-DB	200
M18000-24XS4QXS-DB	208
M18000-44SFP4XS-CB	267
M18000-16XS-CB	156
M18000-40XS-CB	296
M18000-16XT-CB	250
M18000-10QXS-CB	257
RG-WALL 1600-B-ED	190
M18010-FE-C I	90
M18010-FE-D I	107
M18010-FE-D III	314
M18014-FE-C I	90
M18014-FE-C II	150
M18014-FE-D I	160
M18014-FE-D III	500
M10-FAN-F	219
M10-FAN-R	174
M14-FAN	174

**Caution**

The RG-N18000 provides N+M redundancy of power supply. You are recommended to use multiple power supplies for the equipment to ensure its continuous and stable operation by avoiding the impact of unexpected power failures on the equipment.

**Caution**

When the dual power supply is applied, the type of the power supply should be identical.

System Grounding Requirements

A good grounding system is the basis for the stable and reliable operation of the RG-N18000. It is the key to prevent lightning stroke and resist interference. Please carefully check the grounding conditions on the installation site according to the grounding requirements, and perform grounding properly as needed.

Safety Grounding

The equipment using AC power supply must be grounded by using the yellow/green safety grounding cable. Otherwise, when the insulating resistance decreases the power supply and the enclosure in the equipment, electric shock may occur.

**Caution**

The building installation shall provide a means for connection to protective earth, and the equipment is to be connected to that means.

Lightning Grounding

The lightning protection system of the facility is a separate system that consists of the lightning rod, down lead conductor and the connector to the grounding system, which usually shares the power reference ground and yellow/green safety cable ground. The lightning discharge ground is for the facility only, irrelevant to the equipment.

**Note**

For lightning protection, see Appendix C.

EMC Grounding

The ground required for EMC design includes shielding ground, filter ground, noise and interference suppression, and level reference. All the above constitute the comprehensive grounding requirements. The grounding resistance should be less than 1Ω. One grounding point is reserved at the left back of the chassis. The grounding point is pasted with a conspicuous warning label.

EMI Consideration

Various interference sources, from either outside or inside the equipment or application system, affect the system in the conductive ways such as capacitive coupling, inductive coupling, and electromagnetic radiation. There are two types of electromagnetic interferences: radiated interference and conducted interference, depending on the type of the propagation path. When the energy, often RF energy, from a component arrives at a sensitive component via the space, the energy is known as radiated interference. The interference source can be both a part of the interfered system and a completely electrically isolated unit. Conducted interference results from the electromagnetic wire or signal cable connection between the source and the sensitive component, along the cable the interference conducts from one unit to another. Conducted interference often affects the power supply of the equipment, but can be controlled by a filter. Radiated interference may affect any signal path in the equipment, and is difficult to shield.


- Effective measures should be taken for the power system to prevent the interference from the electric grid.
- The working ground of the routers should be properly separated and kept as far as possible from the grounding device of the power equipment or the anti-lightning grounding device.
- Keep the equipment away from high-power radio transmitter, radar transmitting station, and high-frequency large-current device.
- Measures must be taken to isolate static electricity.

Cabinet Mounting

Make sure the cabinet complies with the following conditions:


- Install the switch in a 19-inch cabinet in 4-port form hold.
- Be sure the distance between two square hole strips, one on each side, is 465 mm.

Figure 2-3 19-inch Cabinet

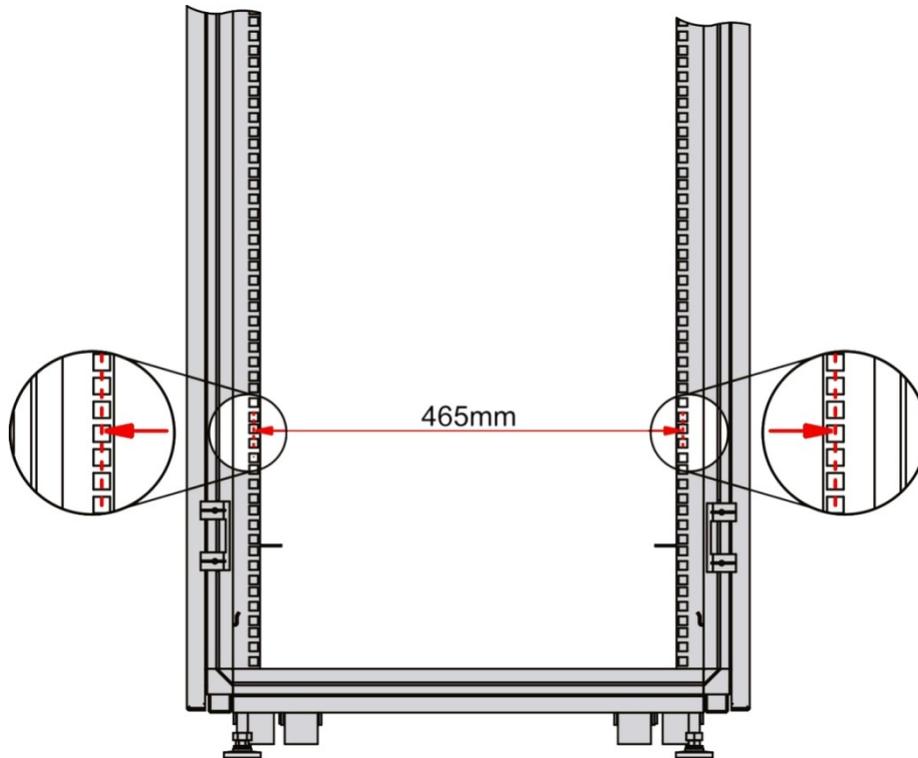

- Be sure that the square hold strip is at least 180 mm far from the outboard front door and the door is at most 25 mm thick to ensure a minimum available distance of 155 mm. The front door is at least 1000 mm far from the back door,

Figure 2-4 Cabinet Dimensions

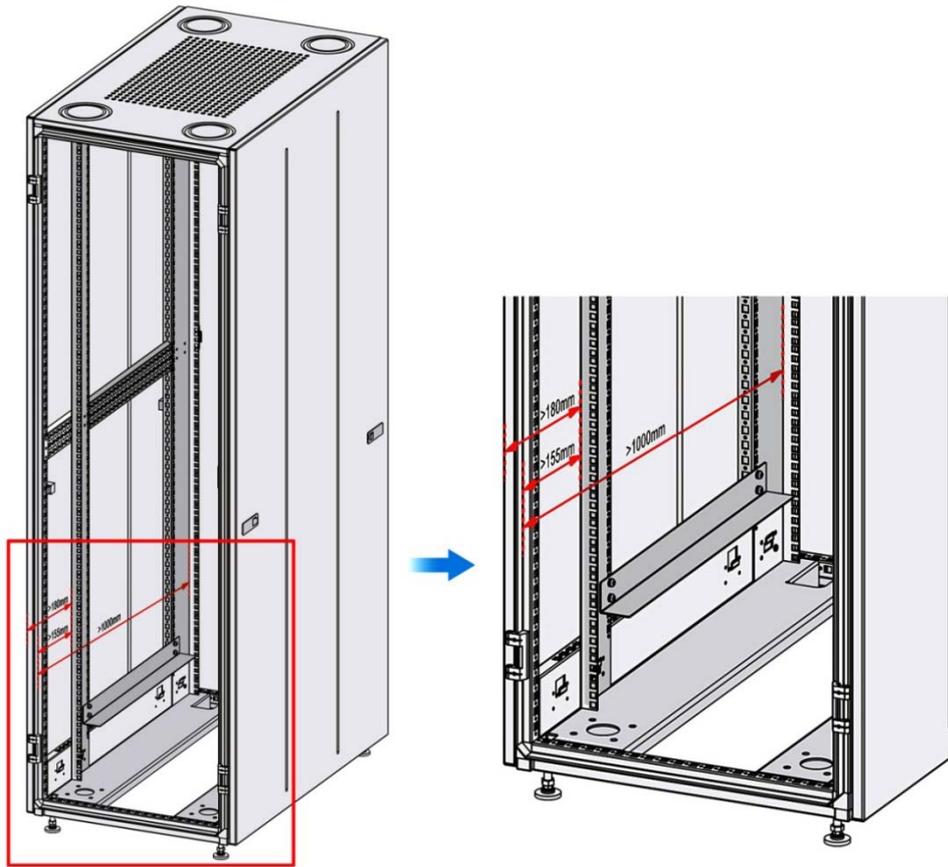

- Be sure that the slide rail in the cabinet is enough to bear the weight of a RG-N18000 and its installation accessories.
- Be sure that the cabinet provides an earthing terminal for the switch to be grounded.
- Be sure that the front and back doors of the cabinet have porosities greater than 50% for good ventilation and heat dissipation.

Installation Tools

Common Tools	Cross screwdriver, straight screwdriver, related electric and optical cables Bolts, diagonal pliers, straps
Special Tools	Anti-static glove, stripping pliers, crimping pliers, crimping pliers for the crystal head, wire cutter
Fiber Optic Cleaning Tools	Air-laid paper, optical fiber microscope
Meter	Multimeter, bit error rate tester (BERT), optical power meter



Note The tool kit is customer supplied.

Precaution for Fiber Connection

Before connecting fiber cables, make sure the model of the optical transceiver and fiber type match the optical port. The transmit port on the local device should be connected to the receive port on the peer device and vice versa.

Unpacking Requirements

Goods Checklist

Chassis Carton	Device panels are installed and operational. Fans, screwdriver, anti-static wrist strap, yellow/green grounding wires, quick installation guide, packing list
Module Carton	Modules, packing list, documentation



Note

A normal delivery should contain the above mentioned items, which may differ from the actual delivery, depending on purchase contracts. Please check your goods carefully against the packing list or purchase contract. If you have any questions or there are any errors, please contact your distributor.

Product Installation


RG-N18000 series Ethernet switch must be used and fixed in the room.



Note

Make sure you have carefully read part 2 and this part, and be sure that the requirements set forth in part 2 have been met.

Installation Procedure

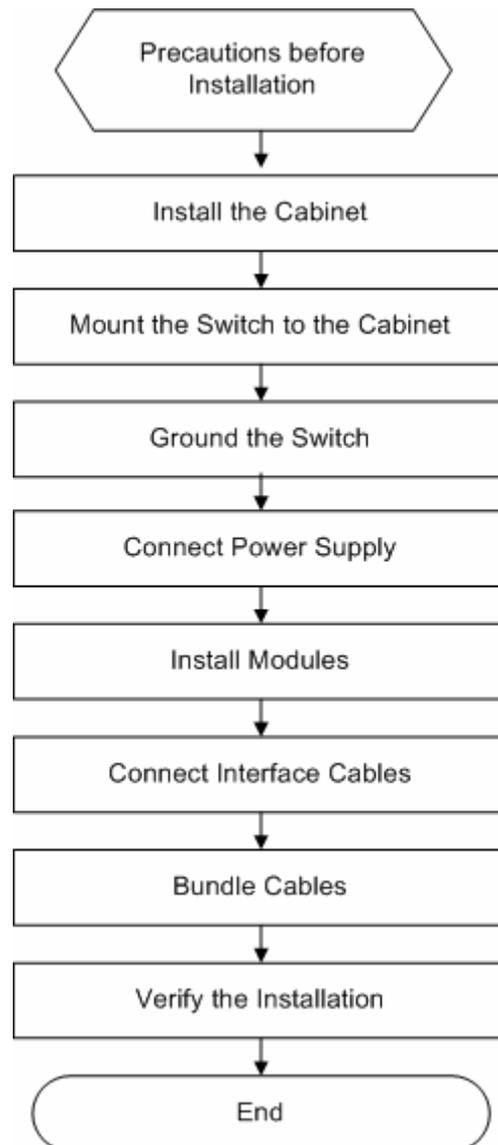

Installation Verification

The RG-N18000 is complicated equipment, so you must carefully plan and arrange the installation location, networking mode, power supply, and wiring before installation. Verify the following before installation:

- The installation location is of a good air flow.
- The installation location meets the temperature and humidity requirements of the equipment.
- The qualified power supply is available at the installation location.

- The related network cables have already been deployed at the installation location.
- The selected power supply meets the system power.

Installing the Air Filter (Optional)

Install air filters of the supervisor module, service module and switch fabric module on the RG-N18000.




Caution

If an air filter is used for a long time, dust may block its air vent, weakening system ventilation. It is recommended you wash the air filter every three months.

Installing the Air Filters of the Supervisor Module and Service Module

(1) RG-N18014

Figure 3-1 Air Filter Location of the Supervisor Module and Service Module on RG-N18014 Switch

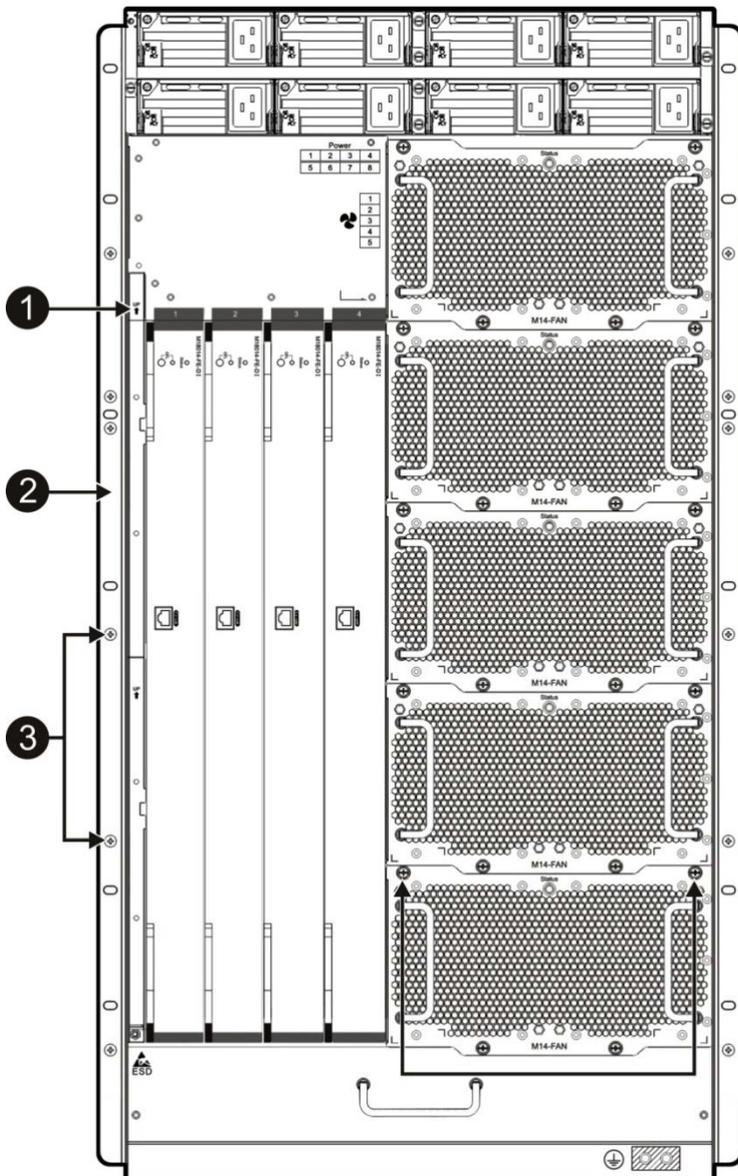


Note: ① Installation direction identifier of the air filter ② Handle of Air filter
 ② Installation location for the air filter

■ To install the air filter, follow these steps:

- 1) Pull out the filler panel of the air filter.
- 2) Insert the air filter along the slide rail. Note the direction identifier to ensure the correct direction.

Figure 3-2 Installing the Air Filter of the Supervisor Module and Service Module on the RG-N18014 Switch

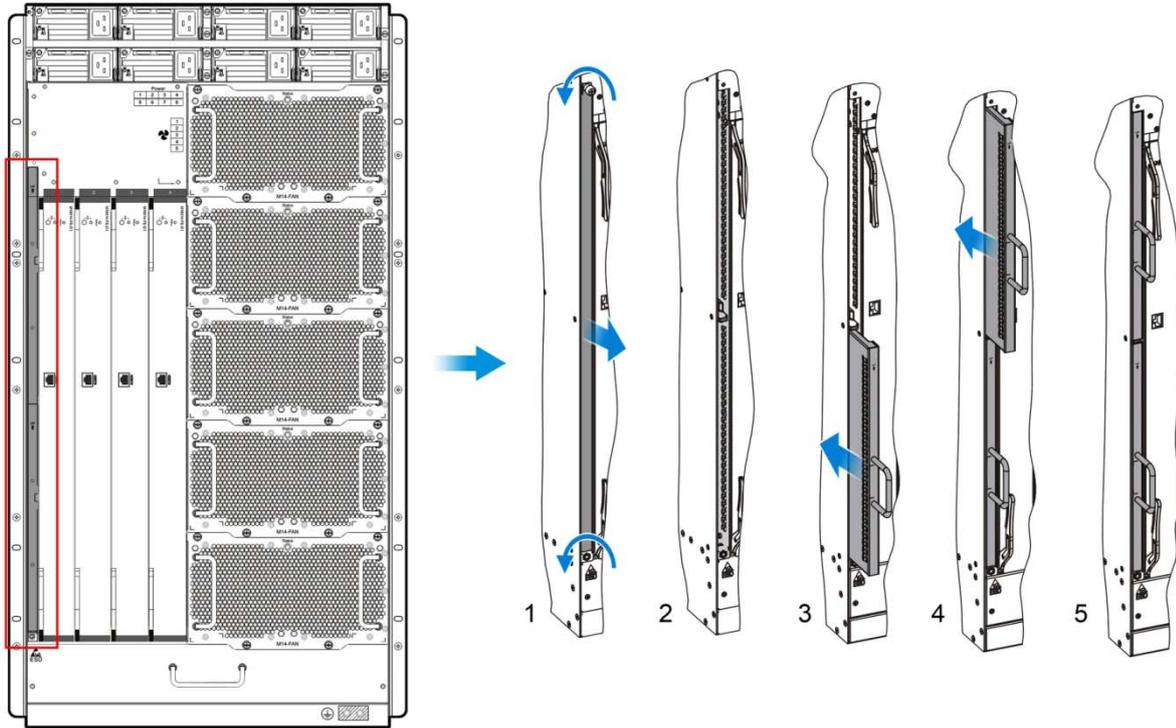


■ The following describes how to use the air filter assembly:

Air filter assembly in working state: the tab is locked in the back limits.




Caution After the air filter is inserted into the chassis, make sure the air filter is in working state.

Figure 3-3 Air Filter Assembly in Working State

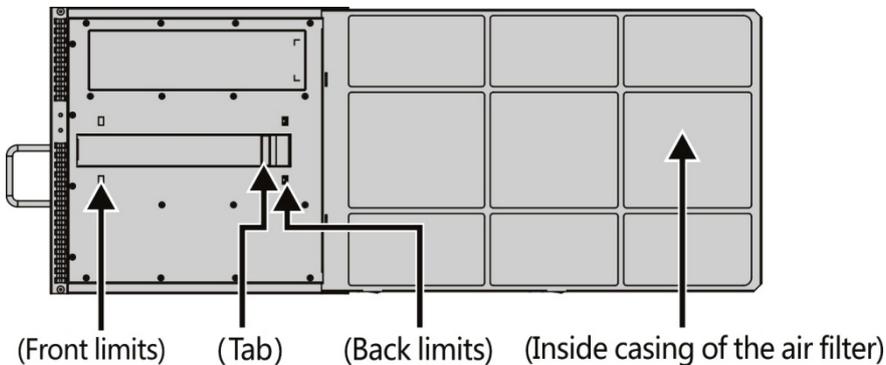


If the rack is not long enough for the air filter, push in the inside casing of the air filter to reduce the length of the assembly so that you can easily plug/unplug the air filter. To push in the inside casing, hold and press the tab and move it forward to the front limits (see Figure 3-4). Conversely, you can pull out the inside casing of the air filter. (see Figure 3-5)

Figure 3-4 Moving forward the Front Limits

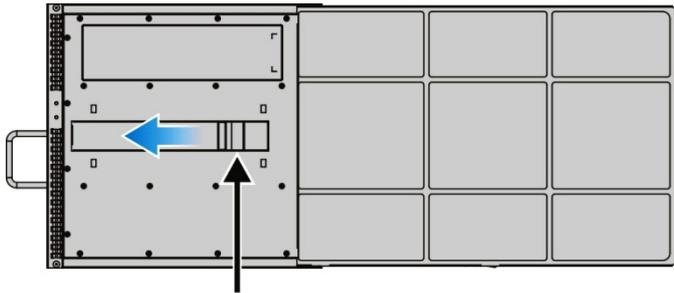

(Hold the tab to move forward to the front limits)


Figure 3-5 Moving toward the Back Limits

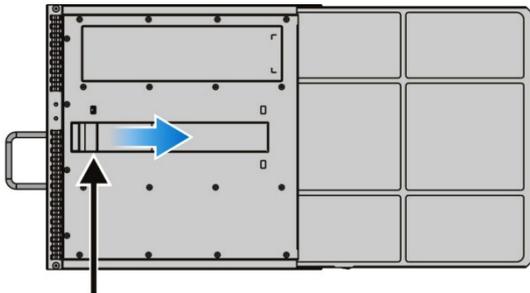

(Hold the tab to move toward the back limits)

(2) RG-N18010

Figure 3-6 Air Filter Location of the Supervisor Module and Service Module on RG-N18010 Switch

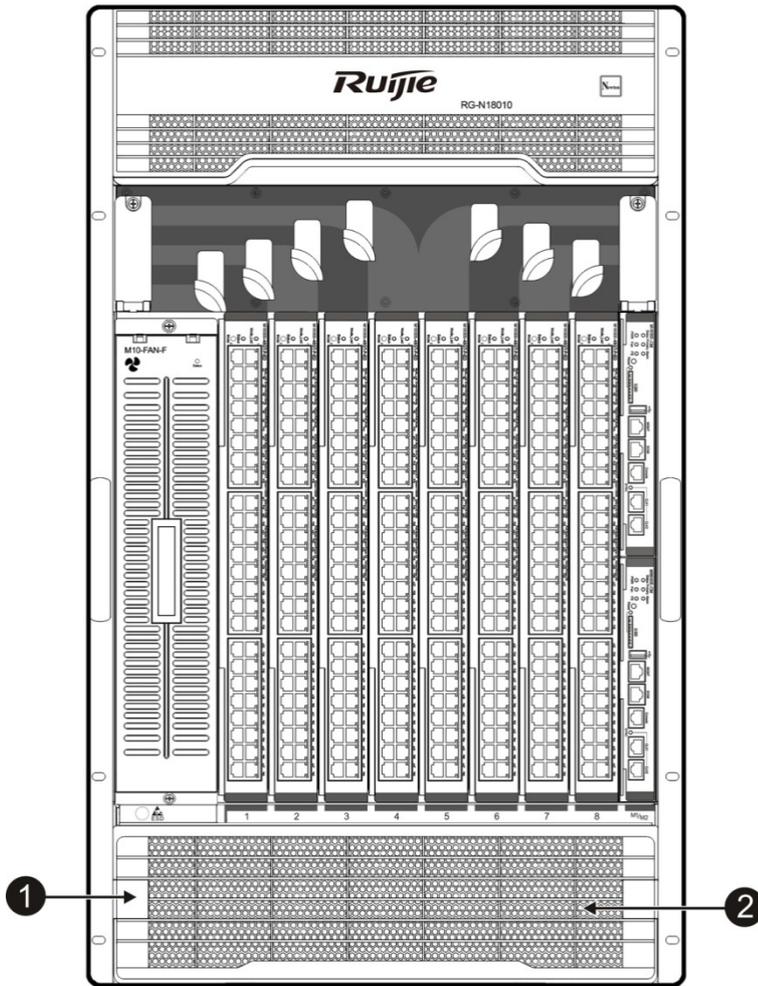


Note: ① Buttons on plastic cover ② Plastic cover over air filter

■ To install the air filter , follow these steps:

- 1) Seat the air filter in the plastic cover and tighten screws.
- 2) Install the plastic cover before the air filter by pressing firmly the two buttons on the both sides of the plastic cover.


Figure 3-7 Installing the Air Filter of the Supervisor Module and Service Module on RG-N18010 Switch

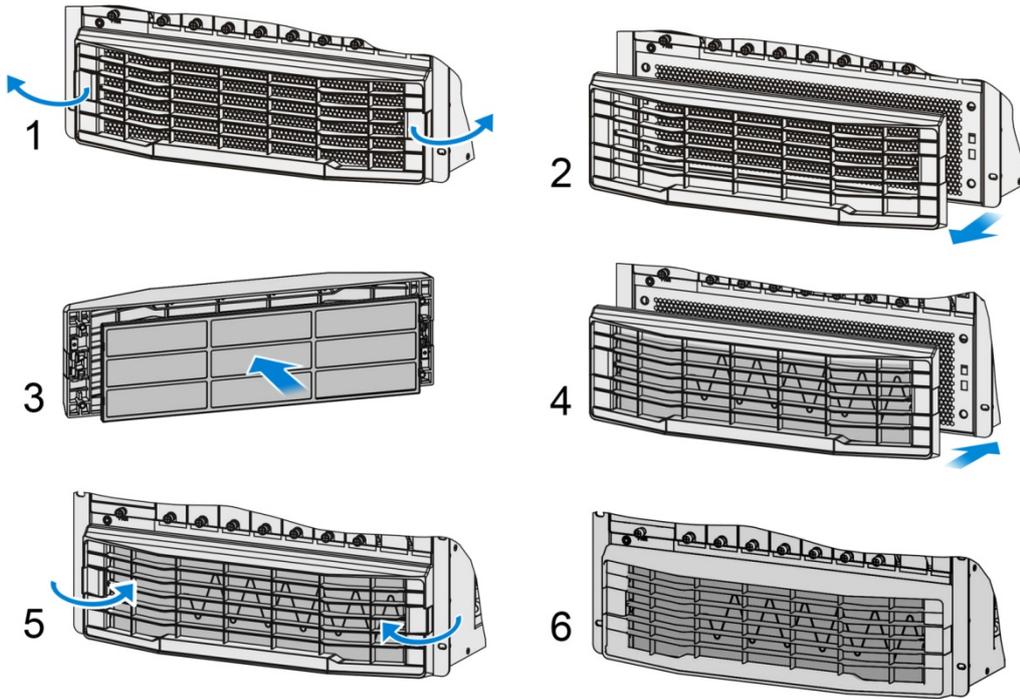

Installing the Air Filters of the Switch Fabric Module

(1) RG-N18014

Figure 3-8 Location of the Air Filter of the Switch Fabric Module on RG-N18014 Switch

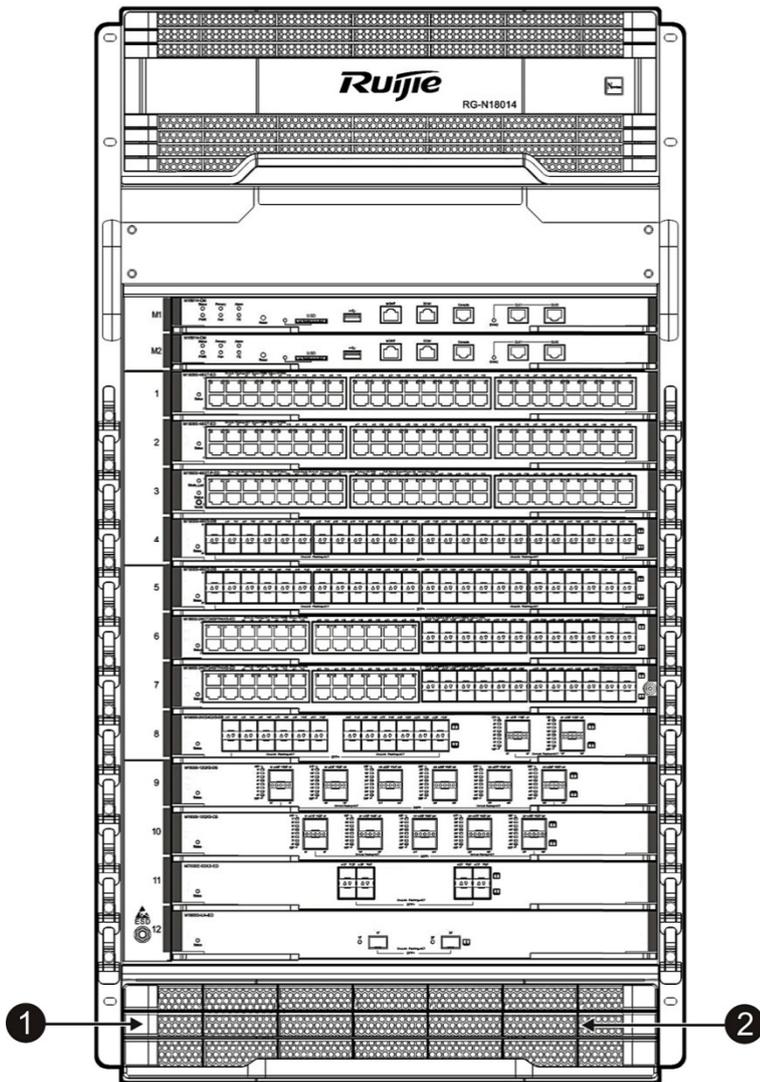


Note: ① Buttons on plastic cover ② Plastic cover over air filter

To install the air filter, follow these steps:


- 1) Seat the air filter in the plastic cover and tighten screws.
- 2) Install the plastic cover over the air filter by pressing firmly the two buttons on the both sides of the plastic cover.

Figure 3-9 Installing the Air Filter of the Switch Fabric Module on RG-N18014 Switch

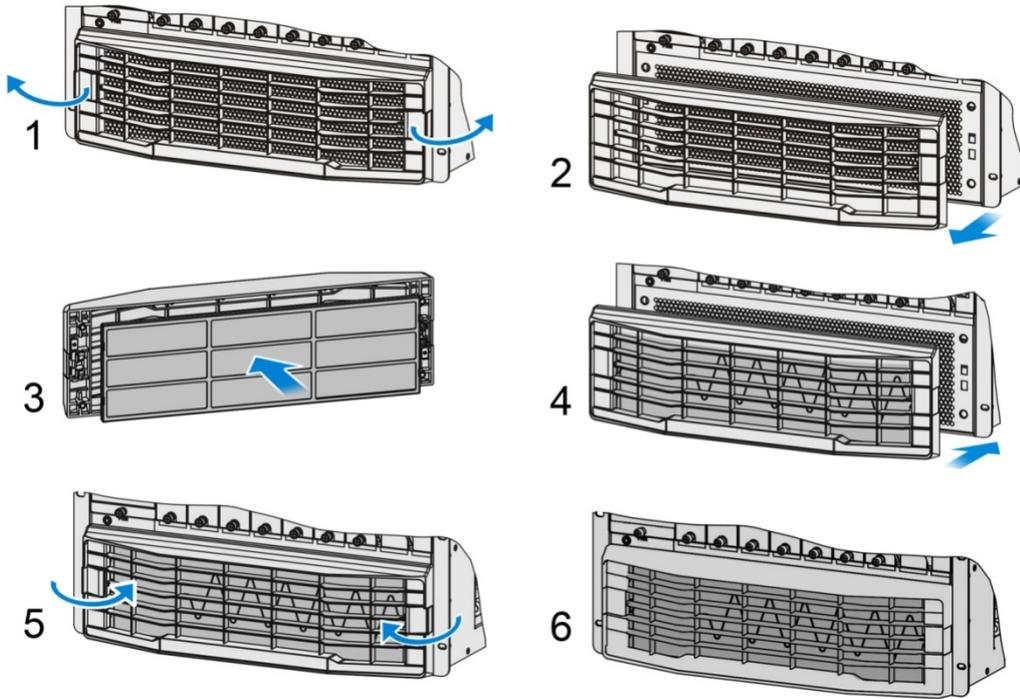

(2) RG-N18010

Figure 3-10 Location of the Air Filter of the Switch Fabric Module on RG-N18010

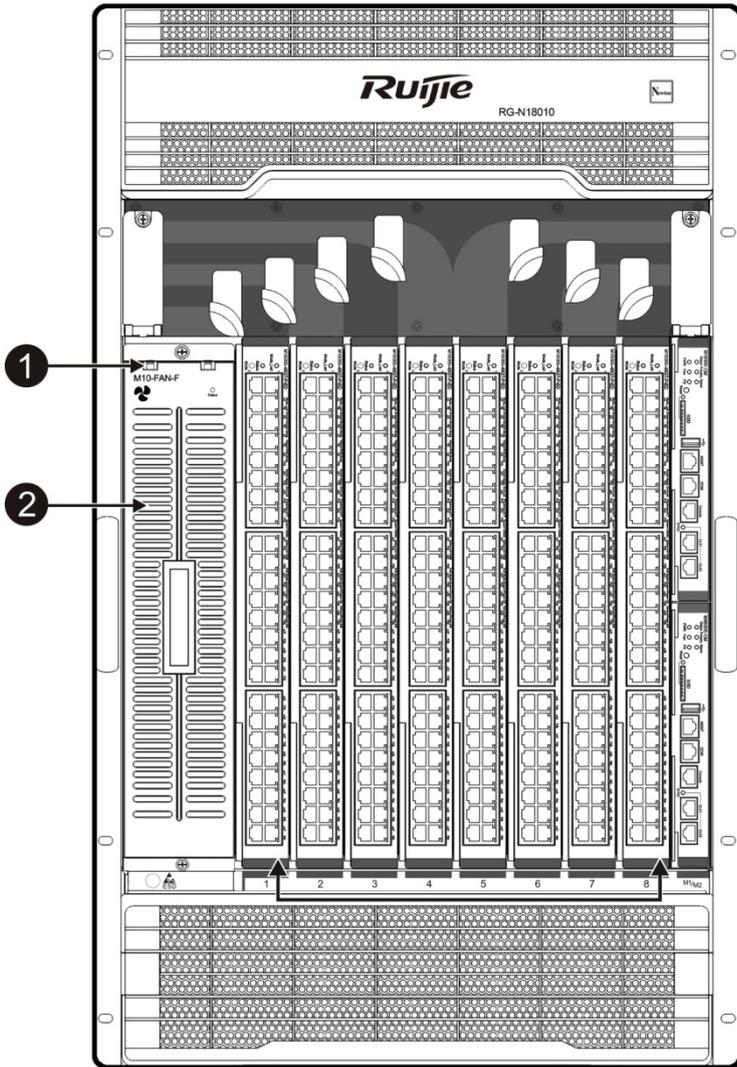


Note: ① Buttons on plastic cover ② Plastic cover over air filter

To install the air filter, follow these steps:

- 1) Seat the air filter in the plastic cover and tighten screws.
- 2) Install the plastic cover over the air filter by pressing firmly the two buttons on the both sides of the plastic cover.

Figure 3-11 Installing the Air Filter of the Switch Fabric Module on RG-N18010 Switch

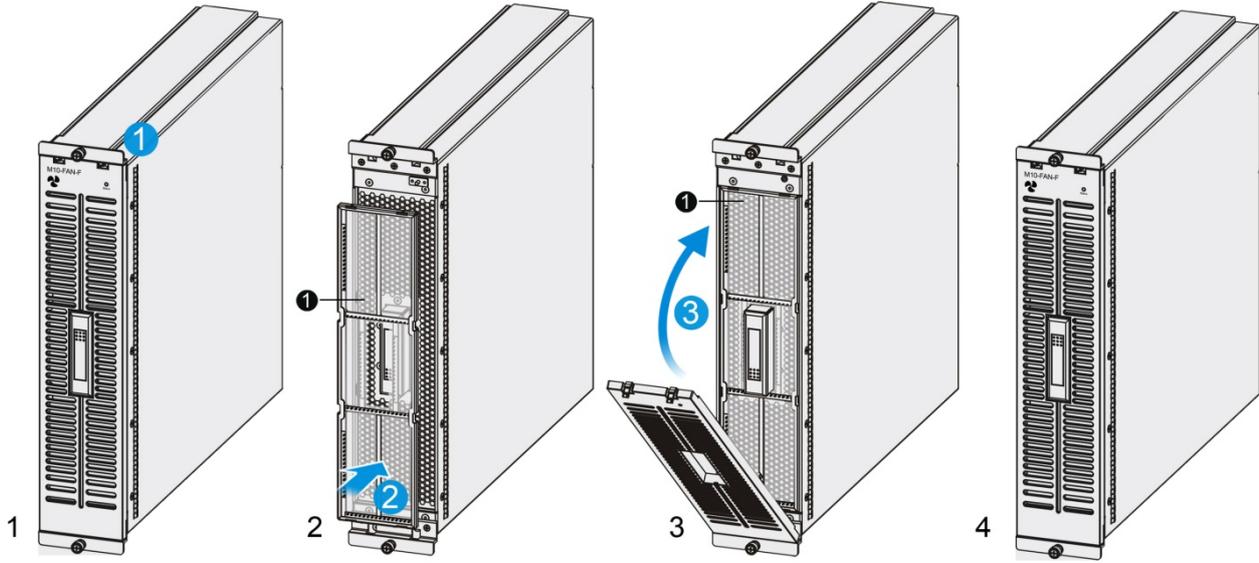

Note: ① Air filter

Installing Brackets



Note Wear the antistatic wrist strap and make sure the antistatic wrist strap is grounded well.




Note The brackets of RG-N18010 and RG-N18014 are installed before delivery, as shown in figure 3-12 and 3-13). If you want to adjust the location of the bracket, see figure 3-14 and 3-15.


- Install the bracket to the front chassis side

(1) RG-N18014 bracket (installed before delivery)

Figure 3-12 Installing Brackets to Front Chassis Side

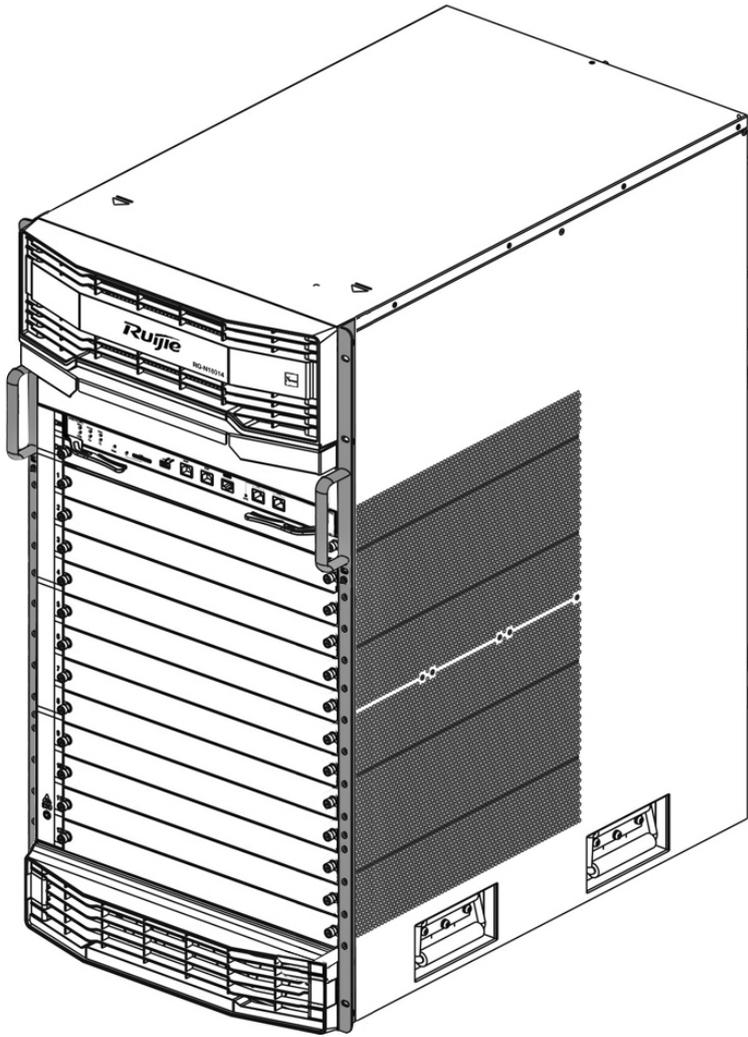

(2) RG-N18010 bracket (installed before delivery)
Figure 3-13 Installing Bracket to Front Chassis Side

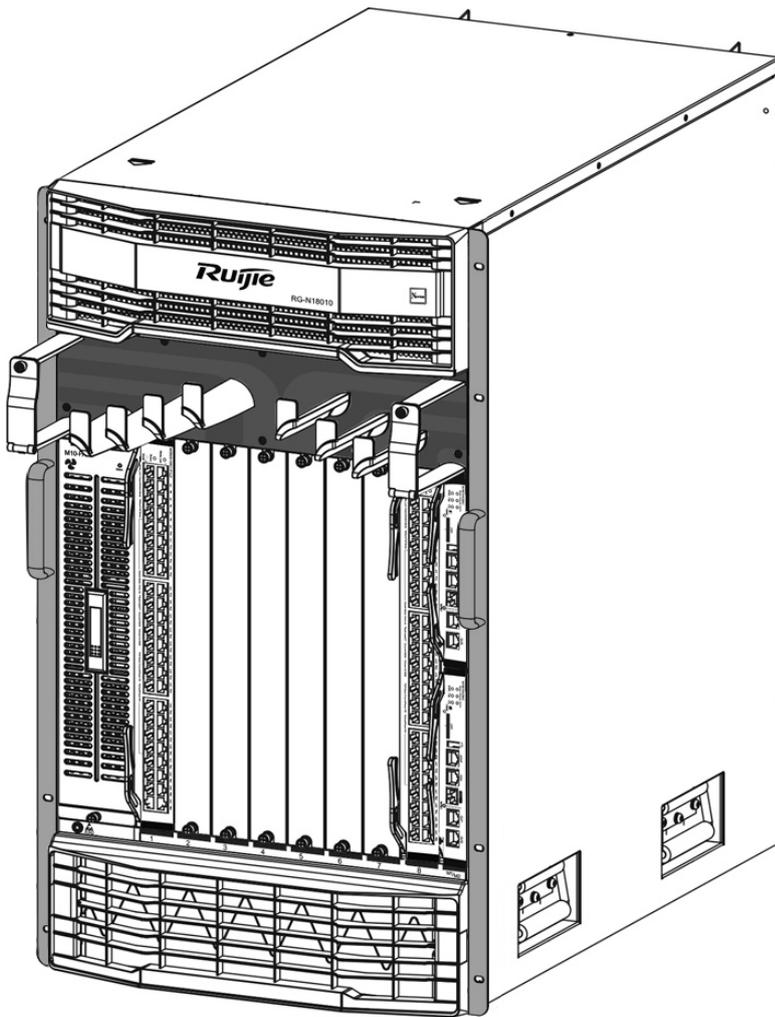


- Move the bracket backward

(1) RG-N18014 bracket

1) Remove the bracket from the front chassis side.

2) Install the bracket at a backward location, as shown in figure 3-14:

Figure 3-14 RG-N18014 Bracket

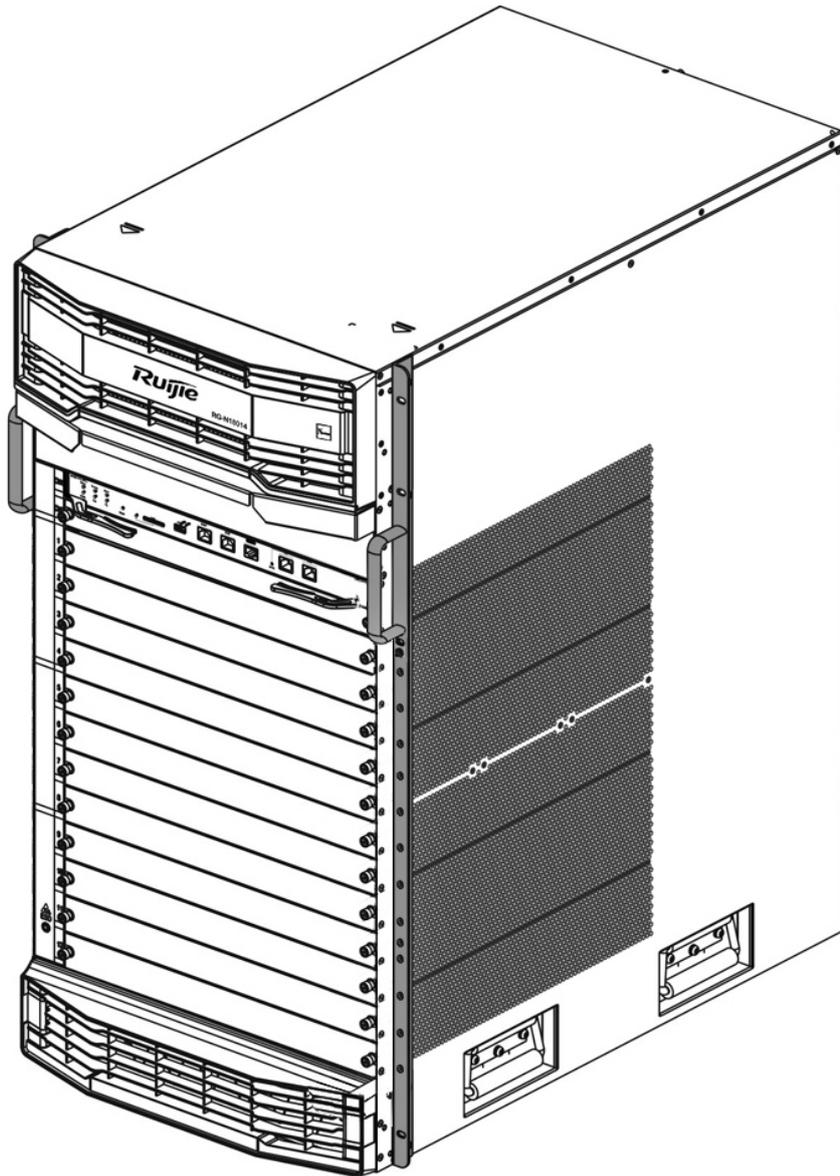


(2) RG-N18010 bracket

1) Remove the bracket from the front chassis side.

2) Install the bracket at a backward location, as shown in figure 3-15:

Figure 3-15 RG-N18010 Bracket

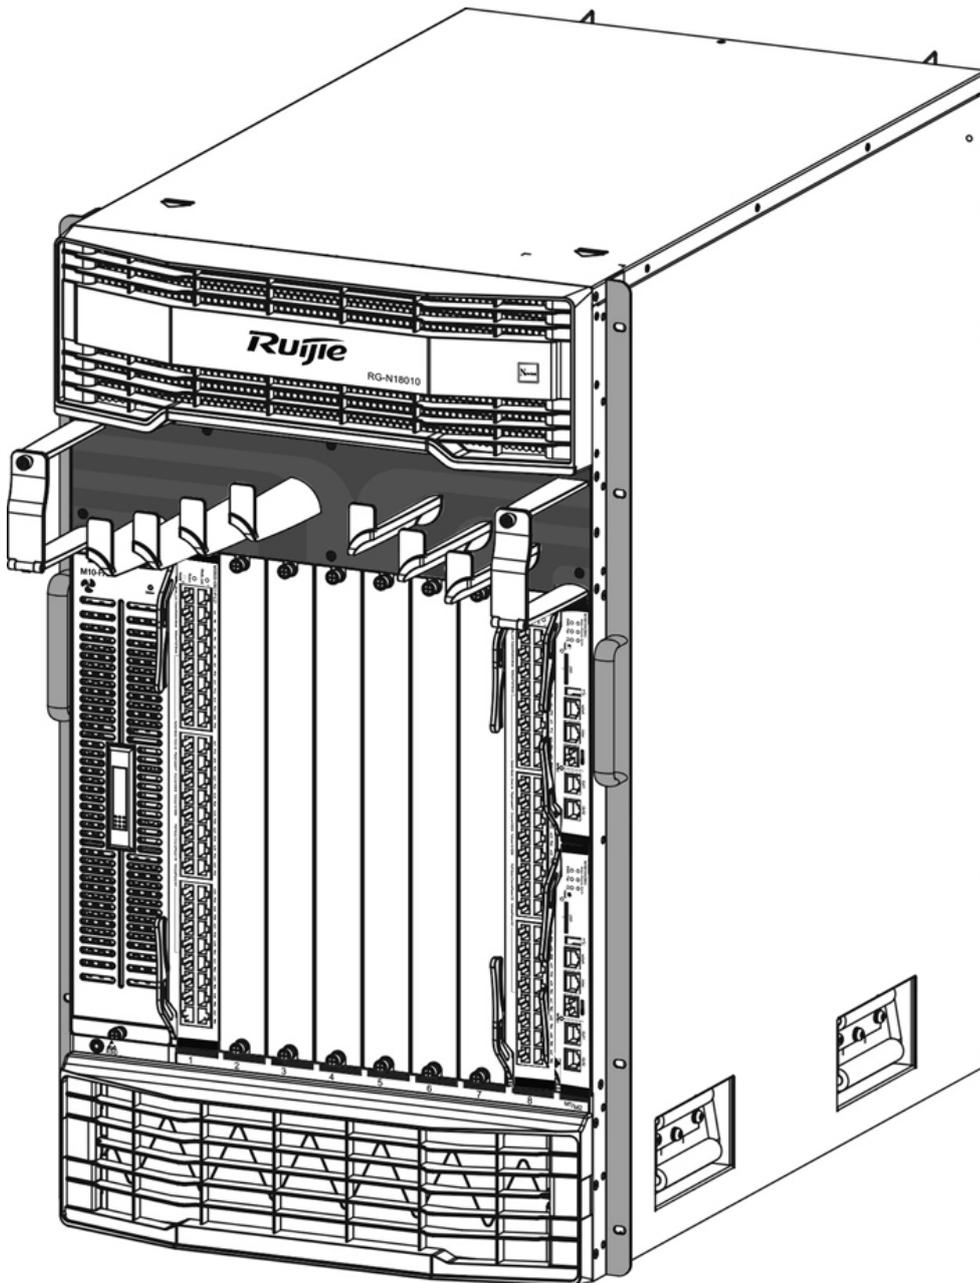

Mounting Cable Management Brackets




Note Make sure the antistatic wrist strap is grounded well and wear the antistatic wrist strap.



Note The RG-N18010 cable management bracket is mounted before delivery while RG-N18014 not. See the following steps and figures for installation.


- Mount the cable management bracket for RG-N18014
- 1) Take out cable management brackets.
- 2) There three cable management brackets on each side respectively. Pay attention to the direction to mount cable management brackets, as shown in figure 3-16.
- 3) Align the screw holes on the cable management bracket with those on the chassis and tighten the screws, as shown in figure 3-16.

Figure 3-16 Mounting the Cable Management Bracket for RG-N18014

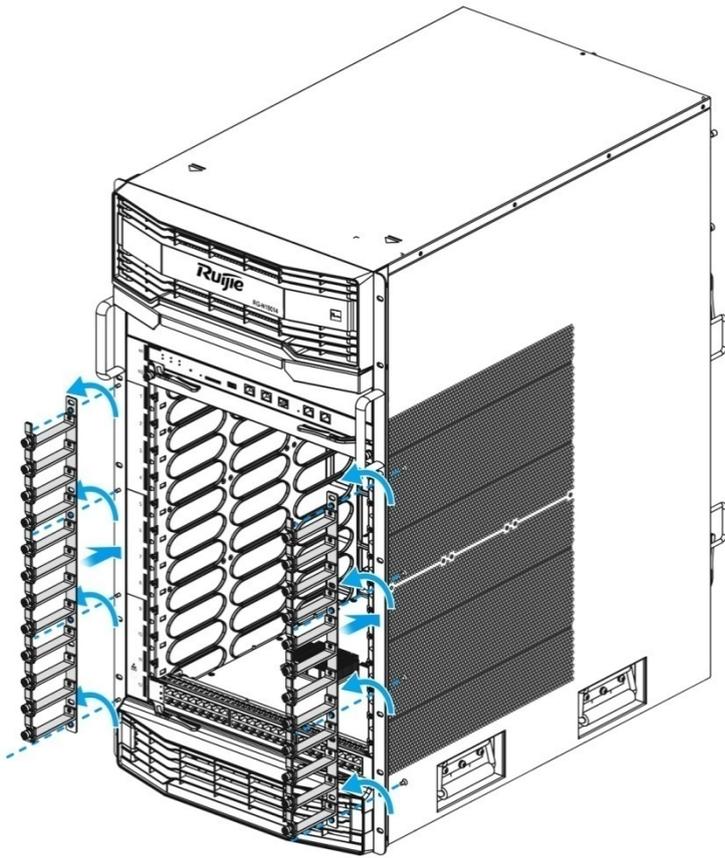

- Mount the cable management bracket for RG-N18010
- 1) Take out cable management brackets.
- 2) Align the screw holes on the cable management bracket (① in figure 3-17) with those on the chassis (② in figure 3-17).
- 3) Tighten the screws to fasten the cable management bracket, as shown in figure 3-17.

Figure 3-17 Mounting the Cable Management Bracket for RG-N18010

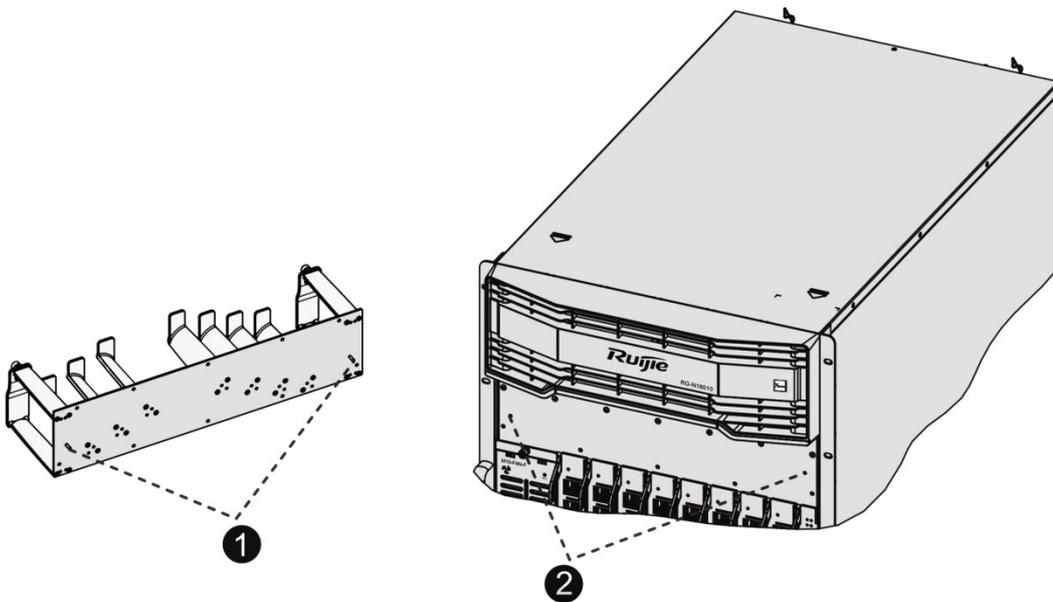

Mounting the Cabinet

Precautions

When you install the cabinet, pay attention to the following:

- All expansion bolts for fastening the cabinet base to the ground should be installed and tightened in sequence from bottom up (large plain washer, spring washer, and nut), and the installation holes on the base and the expansion bolts should be well aligned.
- After the cabinet is installed, it should be stable and still.
- After the cabinet is installed, it should be vertical to the ground.
- When multiple cabinets are put side by side in the room, they should be aligned in a straight line, with an error less than 5 mm.
- The front/back doors of the cabinet should be properly installed. You can open and close them smoothly. The locks should work normally, and all keys should be complete.
- There should be no unnecessary formal labels inside the cabinet and on various boards.
- Blank panels should be installed completely.
- Fastening screws of various devices in the cabinet of the same model should be ready and tightened.
- Various boards of the equipment should be installed securely, and the fastening screws on the panel should be tightened.
- All wiring inlets at the top and bottom of the cabinet should be installed with rodent-resistant nets where the seams should be no more than 1.5 cm in diameter, to prevent rodents and other small animals from entering the cabinet.
- Antistatic wrist straps should be provided in the cabinet.


Installation Steps

- 1) Reserve sufficient space for front and back doors of the cabinet for maintenance.
- 2) Mount the cabinet at the designed location as planned.
- 3) Install the appropriate cable management bracket and cables.
- 4) Install the tray and wiring layer on the rack according to the configuration of one rack with one cabinet installed or one rack with multiple cabinets installed.

Installing Slide Rails

Before installing a slide rail, you need to have some knowledge of standard 19-inch cabinets of IEC60297. The height of standard cabinets is measured in Rack Unit (RU, 1 RU = 44.45 mm (1.75 inch)). 1 RU is equal to the height of three holes (see Figure 3-1). The hole in the middle is an auxiliary installation hole, and the other holes are standard installation holes. Note that the space between neighboring standard installation holes is a little smaller than that between an auxiliary installation hole and its neighboring standard installation hole. When installing a slide rail for the RG-N18000 series, ensure that the plane to carry the chassis should be installed on the plane of delimiters (entire-U delimiter) of the two neighboring RUs, as shown in Figure 3-18.

Figure 0-18 Slide Rail

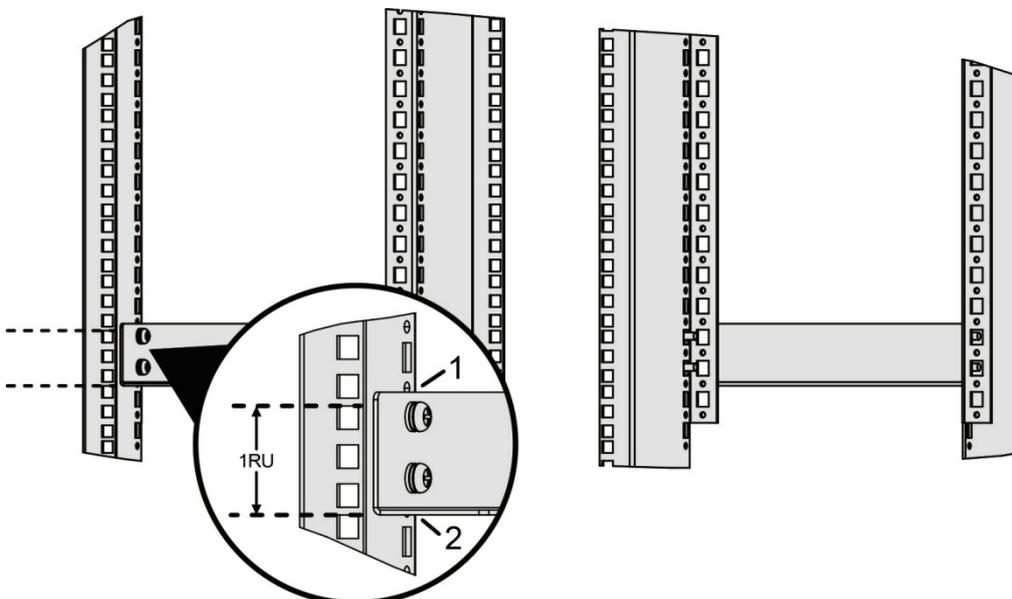

Note: ① and ② representing entire-U delimiters



Caution Before installing a slide rail, make sure that the weight capacity of the slide rail meets requirements.



Caution The RG-N18000 series switch is available in two models with different heights.



Caution There are variable kinds of slide rails. The rail appearance and installation is subject to actual conditions.



Caution In order to keep the cabinet balanced, please install the slide rail to as low a position as possible in the cabinet if only one RG-N18000 switch is installed. If you are mounting multiple device to the cabinet, mount the heaviest device in the lowest position of the cabinet first and proceed to mount the rest of the devices from bottom to top.



Caution It is recommended to install the power socket after planning on available space properly. Otherwise, there may be problems for operation.

Mounting the Switch to a Cabinet

Precautions

Before mounting RG-N18000 into the cabinet, first verify that the front and back brackets of the cabinet are at the right locations. If the bracket is too far forward, the front panel of the equipment may be too close to the front door, so that the front door cannot be closed when network cables and pigtail fibers are connected. Usually, you should reserve at least 10mm between the front panel of the equipment and that of the cabinet after installation. Before mounting into a cabinet, you need to address the following conditions:

- Fasten the cabinet.
 - Insert various modules in the frame properly.
 - Remove any obstacle in the frame and the surrounding environment.
 - Prepare the equipment and move it to the place near the cabinet where you can handle it easily.
-




Note Five people are recommended to carry or lift the switch. One is responsible for directing and the other four carrying or lifting the switch.

Installation Steps


Measure the cabinet height and locate the position on the bracket for installing the slide rail. Then locate the position on the other bracket through the carrying plane and mark the locations. Install seven cage nuts on the marked square holes on each bracket as shown in figure 3-19.

Figure 3-19 Slide Rail Installation Positions

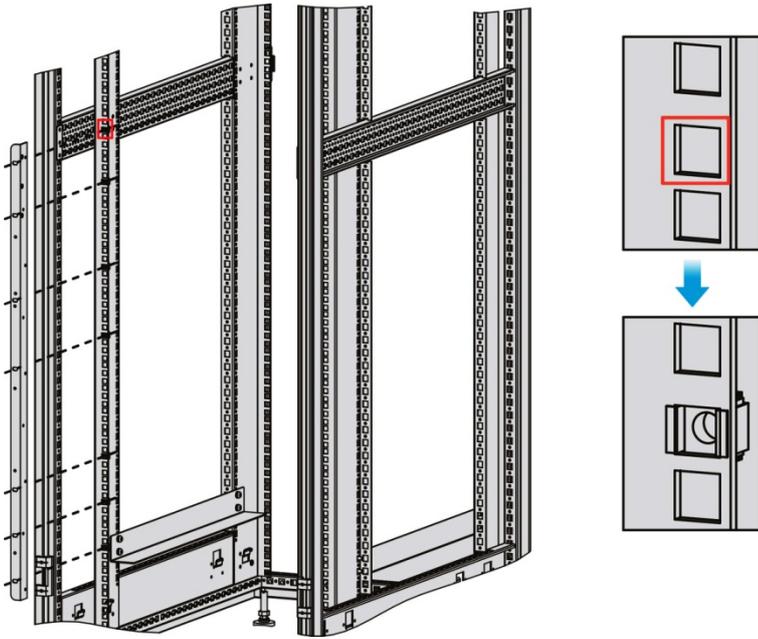

Place the switch on the slide rail, and drive it smoothly into the cabinet until the front bracket reaches the square hole strip. Align the installation holes on the bracket with the cage nuts on the square hole strip, and mount them with screws.

Figure 3-20 Mounting the Switch into the Cabinet

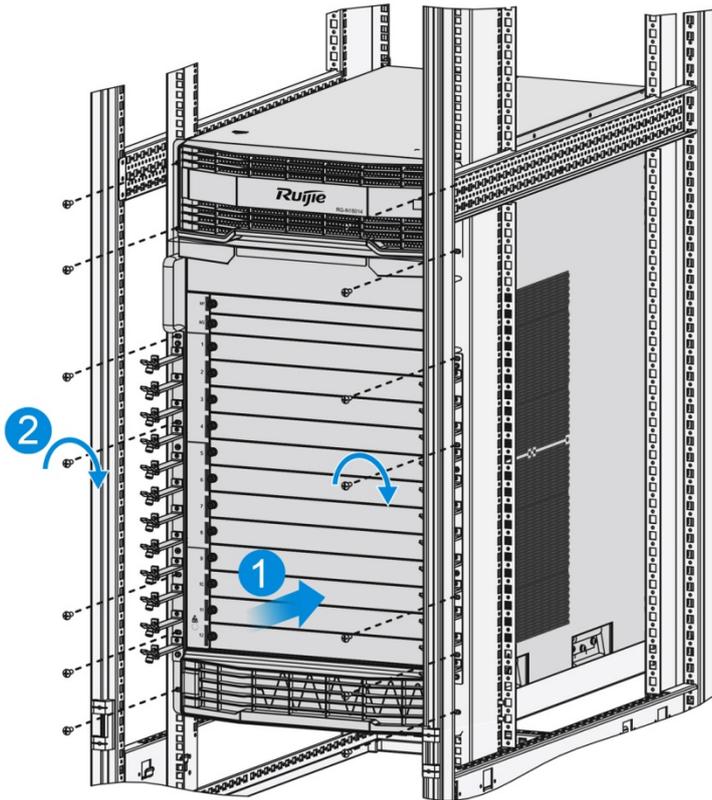

Connecting the System Ground



Note A good grounding system protects your switch against lightning strikes and interferences and ensures its normal operation and reliability.

Precaution

- The sectional area of the grounding wire should be determined according to the possible maximum current. Cables of good conductor should be used.
- Do not use bare wire.
- The grounding resistance for combined grounding should be less than 1Ω .

Connecting the System Ground

To connect the system ground, follow these steps:

- 1) Remove the two screws on the rear of the switch.
- 2) Attach the one end of the grounding wire to the switch with the two screws. Connect the other end of the grounding wire to the grounding wire of the cabinet.

Figure 3-21 Grounding Point on the Rear of the RG-N18014 Switch


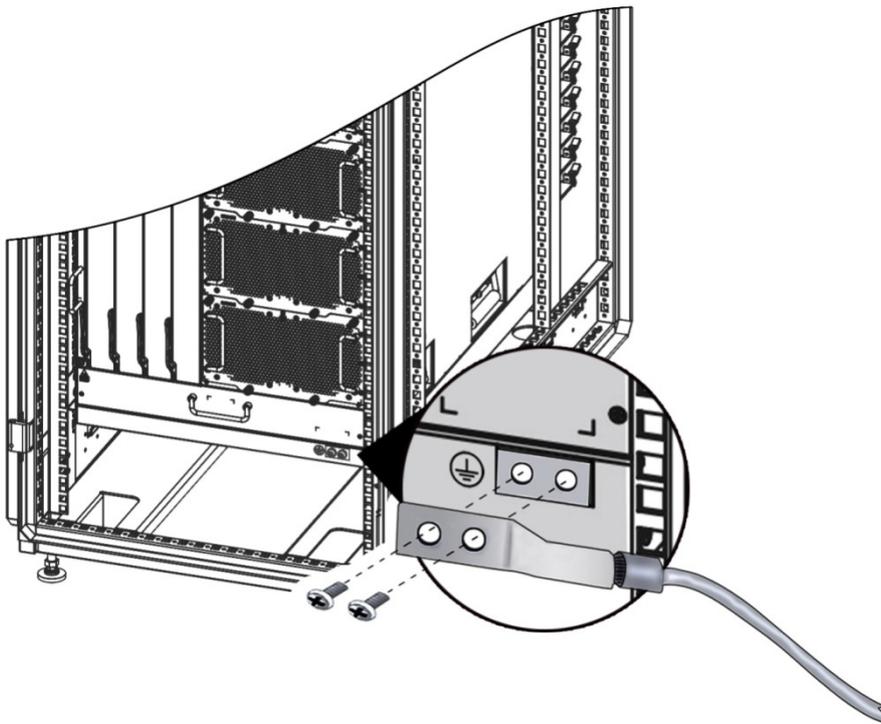


Figure 3-22 Grounding Point on the Rear of the RG-N18010 Switch



Caution

To guarantee the security of the person and the device, the RG-N18000 must be well-grounded. The grounding resistance shall be less than 1Ω .

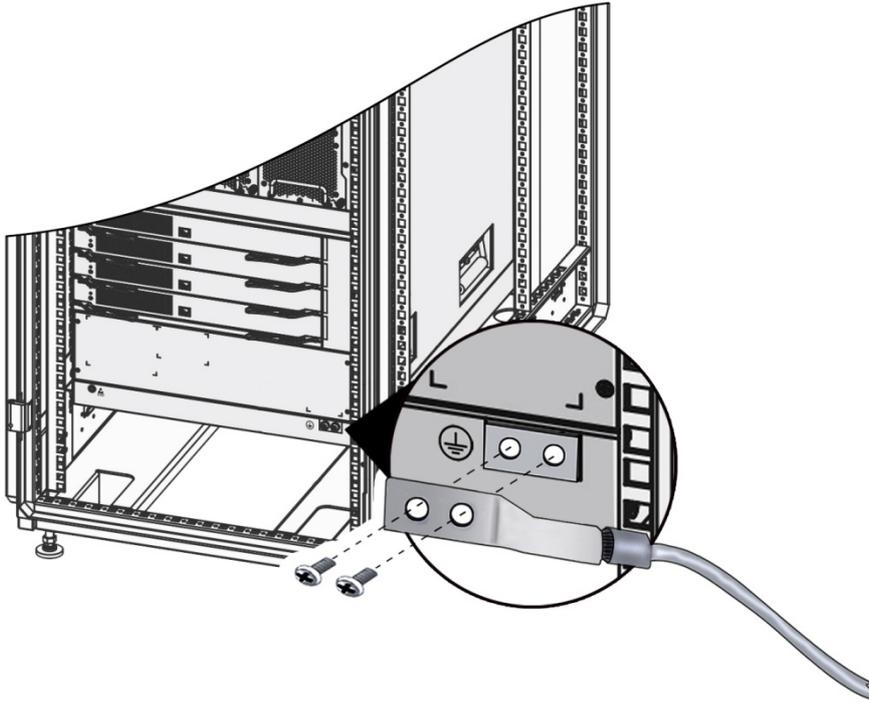

Caution

A service person shall check whether or not the socket-outlet from which the equipment is to be powered provides a connection to the building protective earth. If not, the service person shall arrange for the installation of a protective earthing conductor from the separate protective earthing terminal to the protective earth wire in the building.



Caution

The socket-outlet shall be installed near the equipment and shall be easily accessible.



Caution

When installing the unit, always make the ground connection first and disconnect it last.



Caution

The cross-sectional area of protective earthing conductor shall be at least 2.5 mm^2 (12AWG).

Installing Power Supplies

The RG-N18000 series switches provide AC power supplies, including RG-PA1600, RG-PA600I and RG-PA1600I-P, and DC power supplies, including RG-PD1600I and RG-PD600I. Before performing the following procedures, wear an anti-static wrist strap close to your kin and keep it grounded well.



Note The RG-N18014 power system provides eight power supply slots. It is recommended that you configure N+M power supply redundancy.



Note The RG-N18010 power system provides eight power supply slots, which support N+M redundancy. The power system also provides two PoE ports, which support 1+1 redundancy. It is recommended that you configure power supply redundancy.



Note When RG-N18014/RG-N18010 is powered up by more than one source, the power must be in the same model.



Note If you want to carry or lift the power module, please hold the bottom of the module with your hand instead of carrying the module by the handle. Otherwise, the module may be damaged.



Note Before inserting or removing the power module, please verify whether the switch is well mounted. The switch is high, avoid switch tumble when you are inserting or removing the power module.



Note If you want to hot swap a power supply, please make sure that the interval between two operation is greater than 30 seconds.




Note Please do not touch the connecting finger part of the power supply which is removed after power off in case that capacitor discharge is not full.

■ Install the AC power system

- 1) Loosen the captive screws on the filler panel covering the power slot at the rear of the chassis.
- 2) Insert the power module into the slot along the rail until the rear connector of the power module stays in good contact with the rear panel.
- 3) Tighten the captive screws on the power module to fix it.

Figure 3-23 Installing Power Supplies

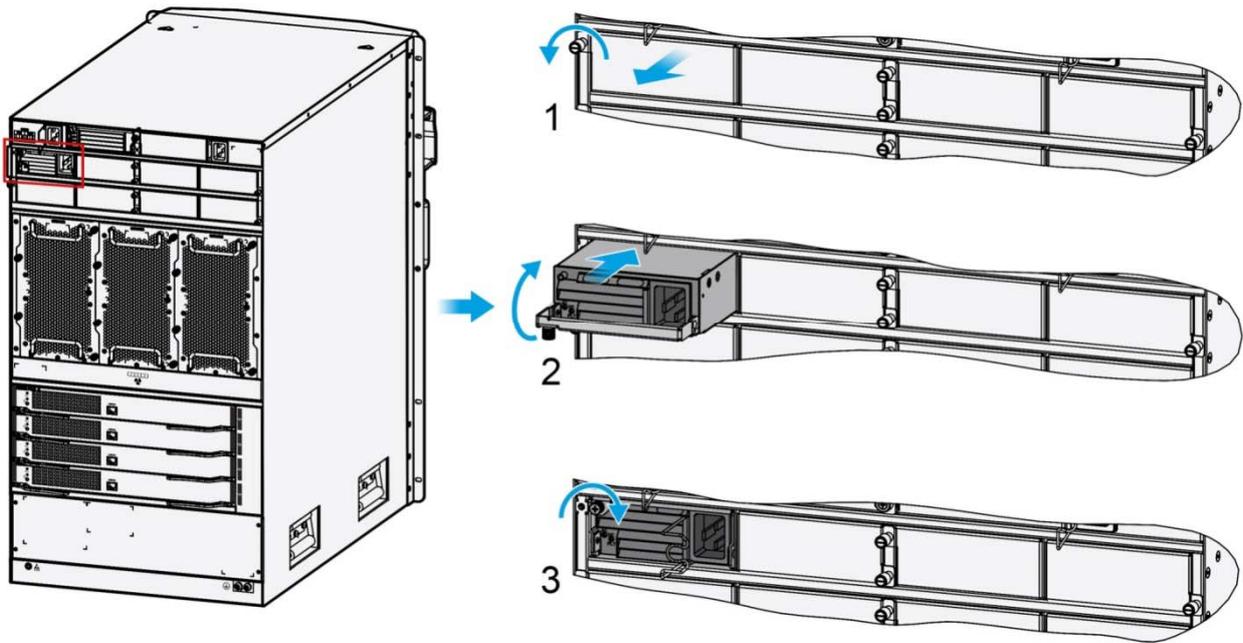

■ Install the PoE power system

The PoE power system and the DC power system share the same installation steps with the AC power system.



Caution

The total power of power supplies of the RG-N18000 must be greater than the working power of the host. Otherwise, some modules may fail to start.



Note

The host power is the summation of the power of all working modules, including the supervisor module, service module and fan. For the power consumption of each module, see the module specifications.


Installing Fans

RG-N18014 adopts five M14-FAN fans for heat dissipation. RG-N18010 adopts three M10-FAN-R fans and one M10-FAN-F fan for heat dissipation. The fans of RG-N18014 and RG-N18010 are installed before delivery. If you want to replace the fan, see Replacing Fan in RG-N18000 Series Switches Hardware Installation and Reference Guide. Before the following procedures, wear an anti-static wrist strap close to your skin and have it properly grounded.

■ Steps for installing the M14-FAN fan tray:

- 1) Install the fan tray into the fan slot in the rear panel of RG-N18014. Note the direction identifier of the fan tray's name to ensure the correct direction.
- 2) Tighten the captive screws on the fan tray with a screwdriver.

Figure 3-24 Installing M14-FAN Fan Tray

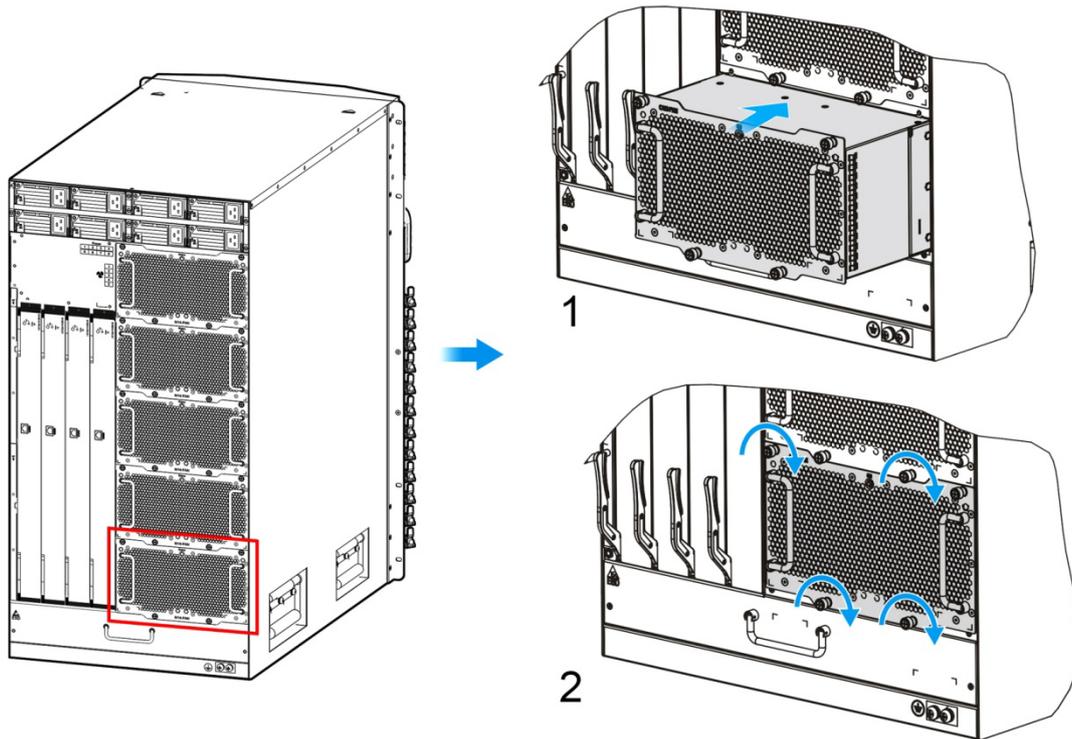

■ Steps for installing the M10-FAN-R fan tray:

- 1) Install the fan tray into the fan slot in the rear panel of RG-N18010. Note the direction identifier of the fan tray's name to ensure the correct direction.
- 2) Tighten the captive screws on the fan tray with a screwdriver.




Note The figure of M10-FAN-R fan tray installation is similar to that of M14-FAN fan tray installation.

■ Steps for installing the M10-FAN-F fan tray:

- 1) Install the fan tray into the fan slot in the front panel of RG-N18010. Note the direction identifier of the fan tray's name to ensure the correct direction.
- 2) Tighten the captive screws on the fan tray with a screwdriver.

Figure 3-25 Installing M10-FAN-F Fan Tray

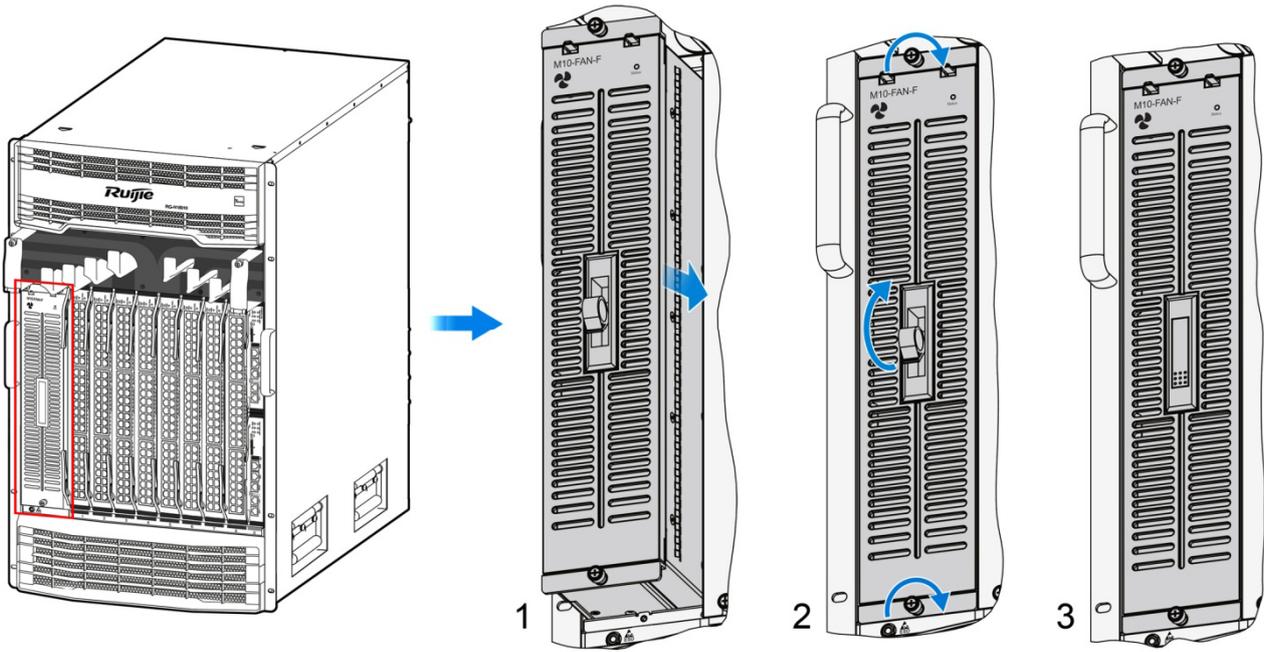

Caution

Do not remove the fan tray forcibly. You can use the fan handle. Otherwise, component damage may occur, which causes deformation of the fan tray, and the fan tray cannot be removed.

Installing Modules

Always wear an anti-static wrist strap when installing the module and the metallic part of the anti-static wrist strap should be fully touched with the skin. Besides, for the sake of security, please not touch any component of the module.



Caution

Do not hold the edge of the PCB or collide the components on the PCB.



Caution

Do not plug/unplug a supervisor module , service module or switch fabric module forcedly, use the ejector.

■ Select Slots



Note

For the slot location of the supervisor module, service module and switch fabric module, please see figure 3-26 and 3-28.

- 1) Select slots (RG-N18014)

Figure 3-26 RG-N18014 Chassis

Hold down the button on the lever (1 in figure 3-28) and then pull out the lever (2 in figure 3-28).

Figure 3-28 Pulling out the Lever


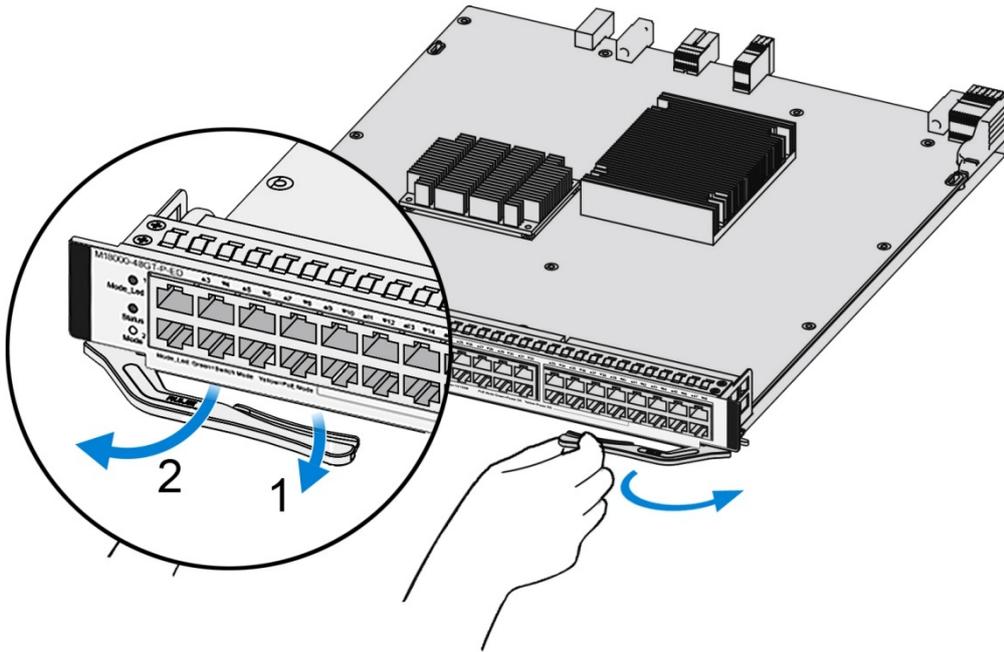



Figure 3-29 Pulling out the Levers with Both Hands

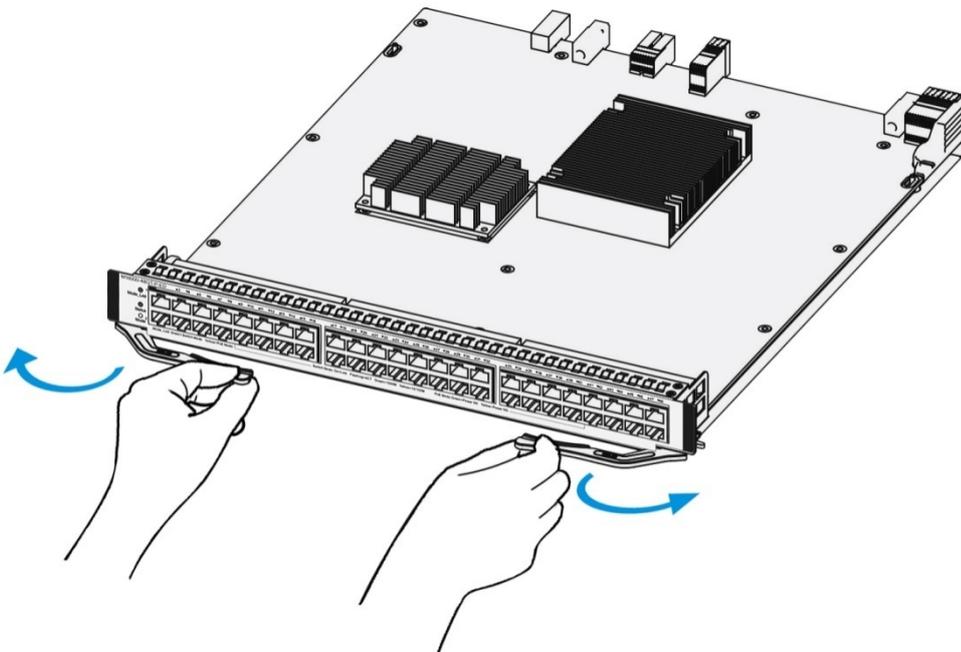

(2) Install modules into slots (RG-N18014)

- 1) Pull out both levers (① in figure 3-30).
- 2) Insert the module into the slot along the slide rail and drive it ahead smoothly (② in figure 3-30).
- 3) Push both levers toward the slot (③ in figure 3-30).


Figure 3-30 RG-N18014 Chassis

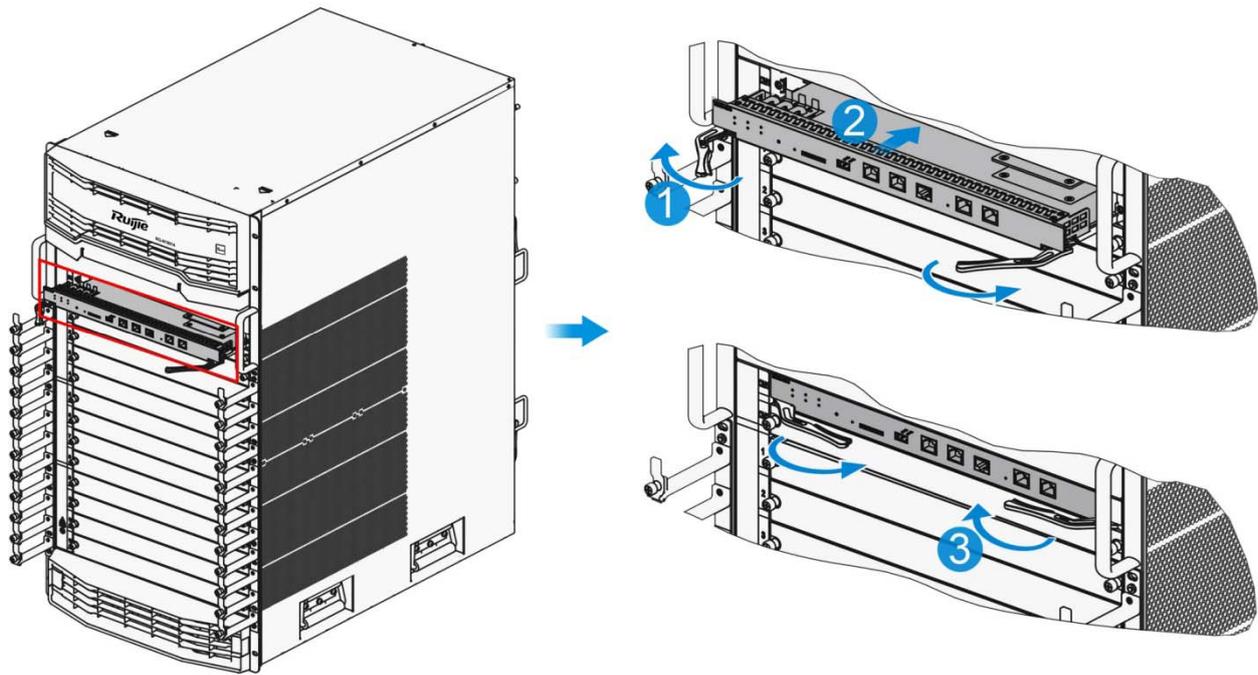

(3) Install modules into slots (RG-N18010)

- 1) Pull out both levers (① in figure 3-31).
- 2) Insert the module into the slot along the slide rail and drive it ahead smoothly (② in figure 3-31).
- 3) Push both levers toward the slot (③ in figure 3-31).

Figure 3-31 RG-N18010 Chassis

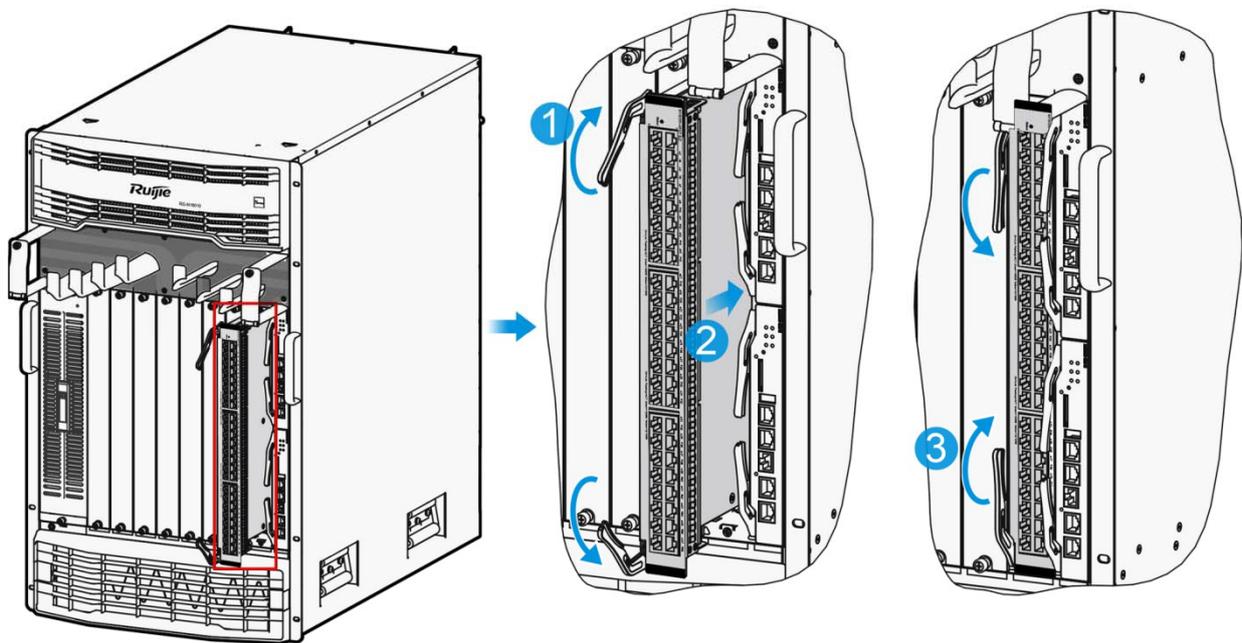

Note If any module slot is unoccupied, install a filler panel to enable proper airflow and heat dissipation.

Installing Swappable Interface Modules (Optional)




Caution Make sure the optical modules connected to both ends of a fiber are the same type while replacing swappable optical modules.

Preparation

- 1) Wear an anti-static wrist strap to your wrist and tighten the lock. Make sure it is properly grounded.
- 2) Take out the SFP+/SFP/QSFP+ module you want to install from packing bag. Do not touch the connecting finger on the module.

Figure 0-32 Wearing an Anti-Static Wrist Strap

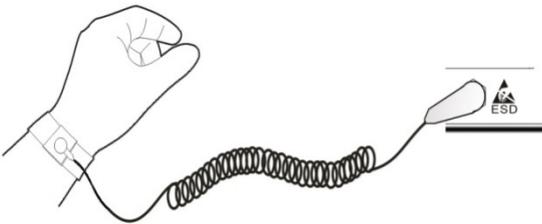

Installing SFP+/SFP Modules




Caution To avoid damaging components due to operation errors, read this section carefully before installing SFP+/SFP modules.

To install the SFP/SFP+ module, do as follows:

- 1) Turn up the handle of the module into the top bail-clasp latch. Hold both sides of the module and push the module into place (You can feel that the module is placed in position with a click sound).

Figure 3-33 Installing the SFP/SFP+ Module

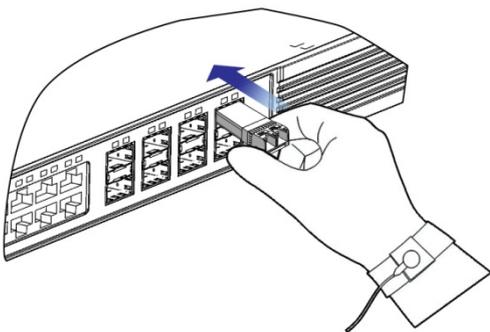

- 2) Use the fiber optical patch cord to connect the SFP/SFP+ module to the fiber optical network. Select the patch cord with the connector corresponding to the port.
- 3) After the patch cord is connected, the Link/ACT Status LED is on. Otherwise, please check connection of the patch cord.

Precaution

- If the SFP/SFP+ module cannot be inserted to the end, do not push it forcefully. Please try the other end of the module.
- Do not touch the connecting finger on the module.
- Do not squeeze, bend or fold the optical fiber, which may cause system performance degradation or data loss.
- Do not remove the protective rubber plug from SFP+/SFP module before connecting fibers.

- Do not insert the SFP+/SFP module with a fiber into a slot. Unplug the fiber before installing the module.


Installing SFP+ Cables



Caution To avoid damaging components due to operation errors, read this section carefully before installing SFP+ cables.

- 1) To install the SFP+ copper module, do as follows: You can install the SFP+ copper module with power on. Hold the connector of a copper cable module with one hand and carry the cable to the front panel of the switch with the other. Push the module gently into the SFP+ module slot until you hear a click, indicating the module is correctly installed.

Figure 3-34 Installing SFP+ Copper Module

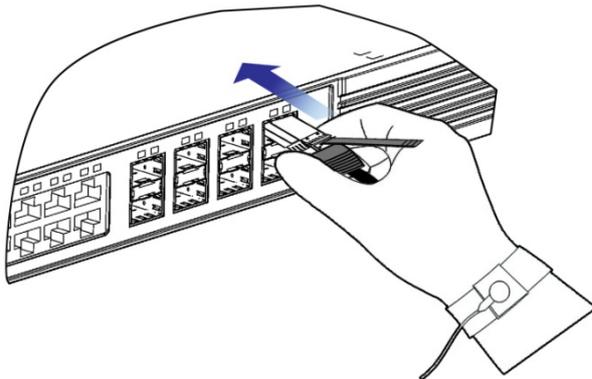

- 2) After you connect the copper module to the Ethernet network through the connector, the Link/ACT status is on. Otherwise, please check the connector.


Precaution

- If the SFP+ copper module cannot be inserted to the end, do not push it forcefully. Please try the other end of the module.
- Do not touch the connecting finger on the module.
- Do not squeeze, bend or fold the copper cable, which may cause system performance degradation or data loss.



Caution After the cable is plugged, make sure that the bending radius is greater than 5 times of the cable diameter. Too small bending radius may cause damage to the copper cable. For example, if the cable diameter is 4.9mm, the bending radius should be 24.5mm at least, as shown in figure 3-35:

Figure 3-35 Bending Radius and Cable Diameter

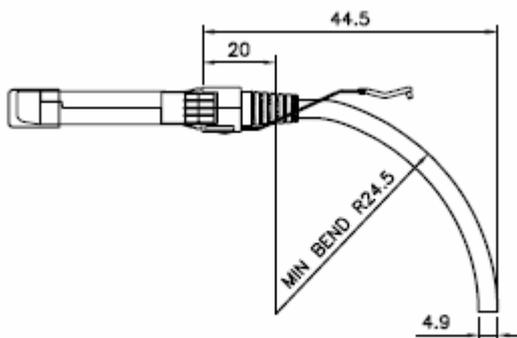

Use an SFP+ cable to connect two SFP+ ports close to each other. Take the following steps to install the SFP+ module:

- 1) Wear an anti-static wrist strap close to your skin and have it properly grounded.

- 2) Take out the SFP+ module you want to install from the packing bag.
- 3) Plug the SFP+ cable to the SFP+ port through the connector. Pay attention to the proper end for connection.



Caution During the operation, make sure that the cable's bending radius is no less than eight times as much as its diameter.

Installing 40-Gigabit QSFP+ Modules



Note To avoid damaging components due to operation errors, read this section carefully before installing 40-Gigabit QSFP+ modules.

Take the following steps to install 40-Gigabit QSFP+ modules:

- 1) Turn up the handle of the module into the top bail-clasp latch. Hold both sides of the module and push the module into place (You can feel that the module is placed in position with a click sound), as shown in figure 3-36
- 2) Push the module gently into the QSFP+ module slot until you hear a click, indicating the module is correctly installed, as shown in figure 3-37.

Figure 3-36 Installing the QSFP+ Module Equipped with a Bail- clasp Latch


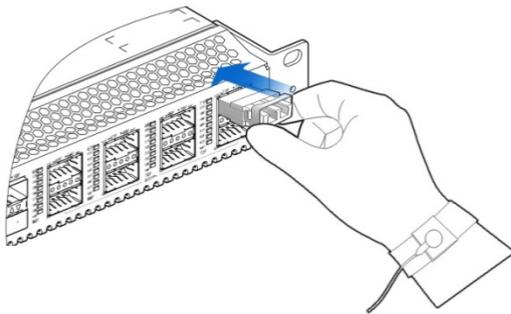


Figure 3-37 Installing the QSFP+ Module Equipped with a Pull Tap

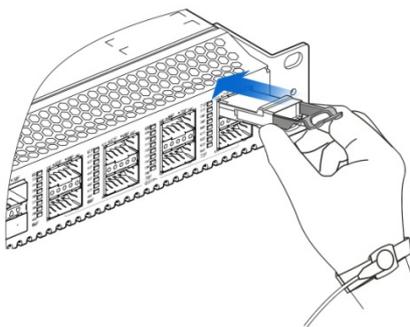

- 3) Use the fiber optical patch cord to connect the 40G QSFP+ module to the fiber optical network. Select the patch cord with the connector corresponding to the port.
- 4) After the patch cord is connected, the Link/ACT Status LED is on. Otherwise, please check connection of the patch cord.

Precaution

- Pay attention to the proper end of the QSFP+ module for installation. If the QSFP+ module cannot be inserted to the end, do not push it forcefully. Please try the other end of the module.
- It is recommended that you do not remove the protective rubber plug from QSFP+ module before connecting fibers.

- It is recommended that you do not insert the QSFP+ module with a fiber into the slot. Unplug the fiber before installing the module.
- Do not touch the connecting finger on the module.
- Do not squeeze, bend or fold the optical fiber, which may cause system performance degradation or data loss.

Installing 40-Gigabit QSFP+ Cables




Caution To avoid damaging components due to operation errors, read this section carefully before installing 40-Gigabit QSFP+ copper cables.

Take the following steps to install 40-Gigabit QSFP+ copper modules:

- 1) You can install the QSFP+ copper module with power on. Hold the connector of a copper cable module with one hand and carry the cable to the front panel of the switch with the other. Push the module gently into the QSFP+ module slot until you hear a click, indicating the module is correctly installed.

Figure 3-38 Installing the QSFP+ Copper Module

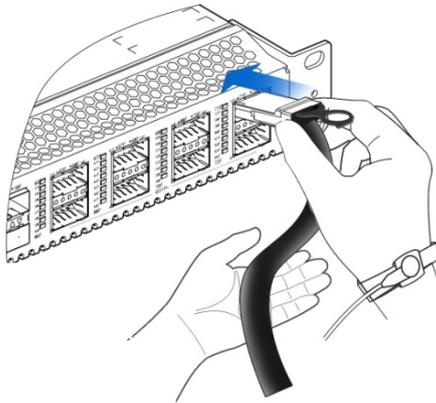

- 2) After the cable is connected, the Link/ACT Status LED is on. Otherwise, please check the connector.


Precaution

- If the QSFP+ copper module cannot be inserted to hit the back panel, do not push it forcefully. Please try the other end of the module.
- Do not touch the connecting finger on the module.
- Do not squeeze, bend or fold the copper cable, which may cause system performance degradation or data loss.



Caution After the cable is plugged, make sure that the bending radius is greater than 5 times of the cable diameter. Too small bending radius may cause damage to the copper cable. For example. If the cable diameter is 7.4mm, the bending radius should be 35mm at least, as shown in figure 3-39:

Figure 3-39 Bending Radius and Cable Diameter

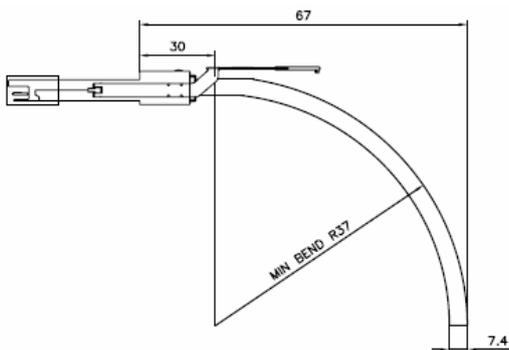

Connecting the Power Cord


Connect the power cord to the location as required according to the identification on the AC power module panel, including RG-PA1600I, RG-PA600I and RG-PA1600I-P.



Note Make sure the socket is powered off before the power cord is connected.

- Connect the AC power cord
- 1) Insert the AC power plug into the power module socket.
- 2) Take out the anti-loose buckle.
- 3) Install the anti-loose buckle on the front panel of the power module
- 4) Fasten the anti-loose buckle to the power cord.
- 5) Connect the other end of the power cord to an external power socket.

Figure 4-34 Connecting the Power Cord

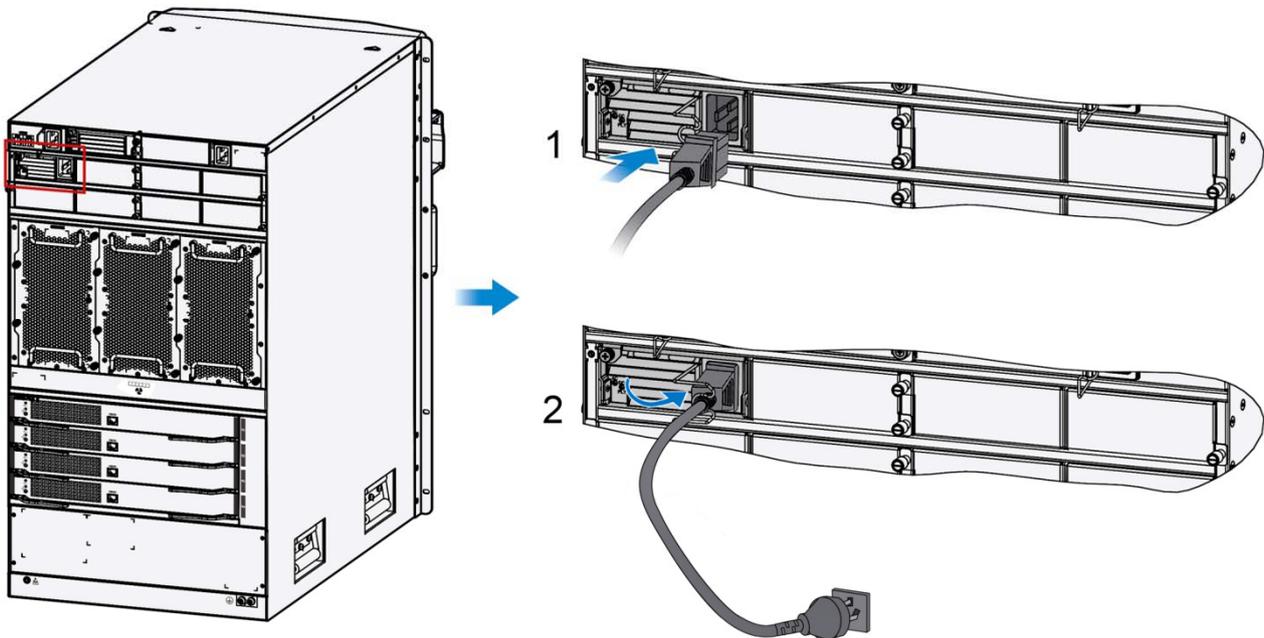

Caution Please use the 3-pin power cord. The cross-sectional area of each pin is 1.5 mm^2 or 14 AWG minimum.




Caution 16A and 10A power cords are available for the RG-N18014 and RG-N18010 AC power supply. Adopt the proper socket and verify the AC power supply capacity in the machine room.

- Connect the power cord to the location as required according to the identification on the DC power module panel, including RG-PD1600I and RG-PD600I.

- 1) Take out the DC power module and power cord. Insert the DC power plug into the power module socket.
- 2) Remove the screws on the grounding terminal of the DC power supply with the screwdriver.

- 3) Connect the DC power cords according to the instructions on the panel, which are green with yellow strip (ground wire), blue (-) and red (+) from left to right, as shown in figure 3-41.
- 4) Fasten the OT terminal of the DC power cord to the connecting terminal with the screwdriver.

Figure 3-41 Power Cord Instruction on Chassis

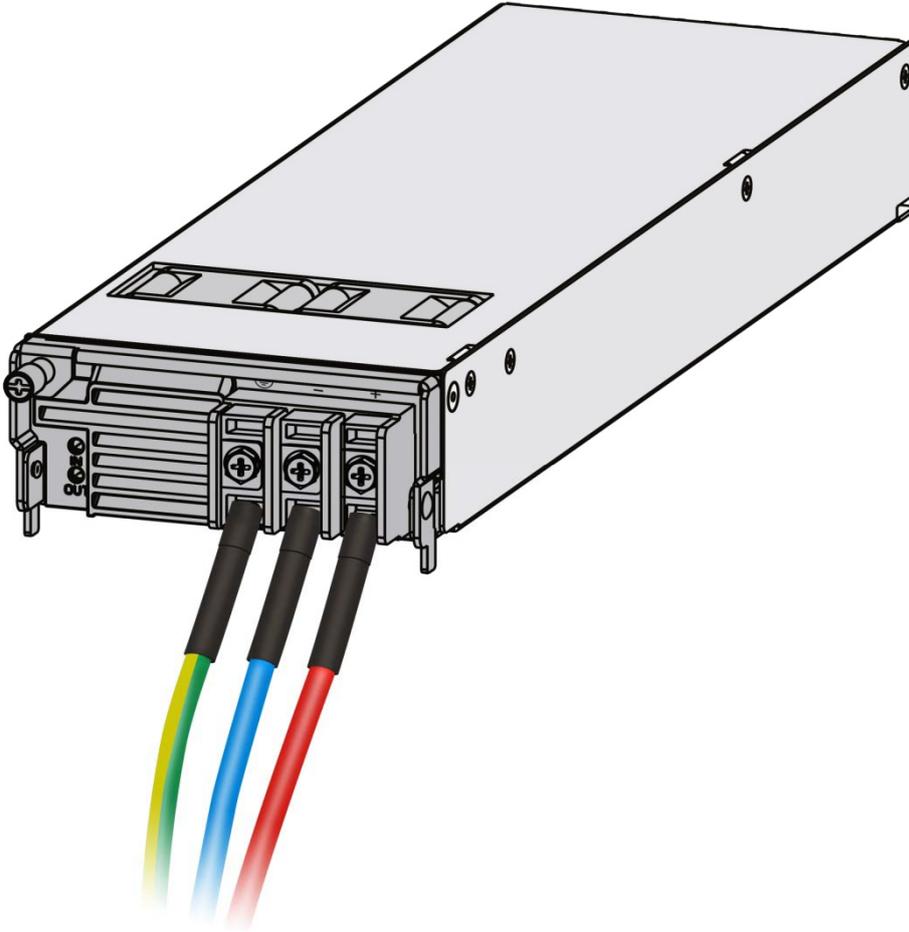

Caution

Before connecting the power supply, make sure the external power supply matches the power module inside the unit.
Before connecting the DC power cord to the terminal, make sure the other end of power cord is not plugged in.
Make sure the power supply is properly connected.

Installation Verification

- Verify if the external power supply matches the distribution panel of the cabinet.
- After installing the equipment, verify if the front/back cabinet doors can be closed.
- Verify that the cabinet has been fastened completely, and does not move or tilt.
- Verify that the equipment has been installed in the cabinet, and all the cables have been fastened to the cabinet.
- Verify that the fan meets the requirement.
- Verify that the power supply is properly selected.
- Verify that the power module is inserted properly and the screws are fastened tightly.
- Please do not power up the switch by yourself and do not perform live-line maintenance.

- Verify that there is no potential danger in the working area, for example, the power supply is not grounded well, or the ground is wet.
- Please do not place the switch at a damp place to prevent the moisture from entering the switch.
- Be sure of the location of the emergency power switch. If an emergency occurs, cut off the power first.
- Verify that all power supplies are turned off if you want to turn off the power.
- Verify that the power cord is connected properly.
- Verify that the power cord is long enough to avoid being stretched.
- Verify that the rated current of the external power socket is greater 16A and that the socket is grounded well.
- Verify that each power module is connected to a power socket.
- Verify that the vacant slot is covered with a filler panel for ventilation and heat dissipation.

System Debugging

Establishing the Configuration Environment

Establishing the Configuration Environment




Note If you log in to the switch for the first time, please use the Console port.

Connecting the Console Cable

- 1) Connect one end of the DB-9 jack of the console cable to the serial port of the PC.
- 2) Connect one end of the console cable RJ45 to the Console port of the switch.

Figure 4-1 Connecting Switch and PC through Console Port

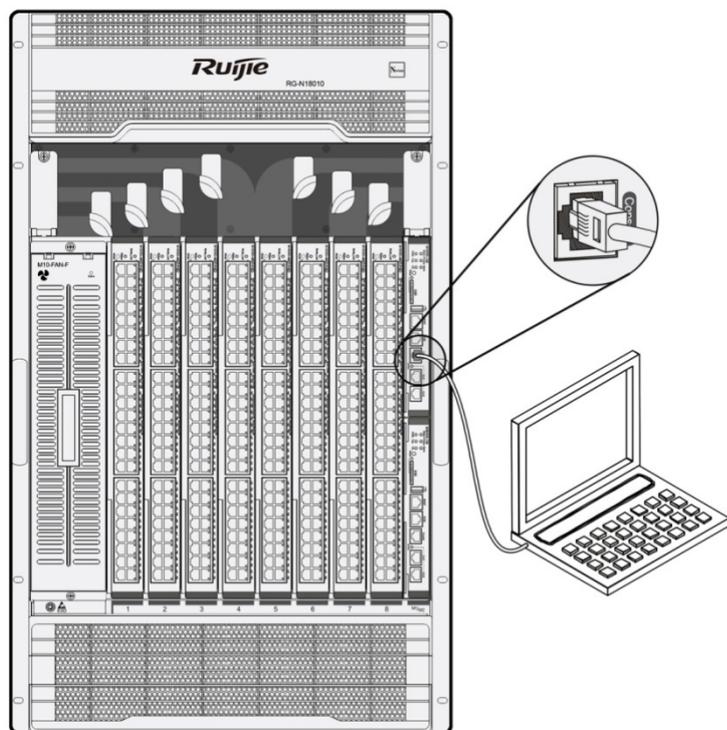

Setting Terminal Parameters

- Start the PC and run the terminal simulation program on the PC, such as Terminal on Windows 3.1 or HyperTerminal on Windows 95/98/NT/2000/XP.
- Set terminal parameters. The parameters are as follows: baud rate 9600, data bit 8, parity check none, stop bit 1, and flow control as none. Details are as follows:
 - 1) Choose **Start > Programs > Accessories > Communications > Hyperterminal**. The hyperterminal window appears.
 - 2) Click **Cancel**. A window appears as shown in Figure 4-2.

Figure 0-2




- 3) In the Connectivity Note window, type the name of the new connection and click OK. A window appears as shown in Figure 4-3. In the Connect Using field, select the serial port you want to use.

Figure 0-3



- 4) After selecting the serial port, click OK. The Serial Port Parameter Setting window is displayed, as shown in Figure 4-4. Set the baud rate to 9600, data bit to 8, parity check to none, stop bit to 1, and flow control to none.

Figure 0-4

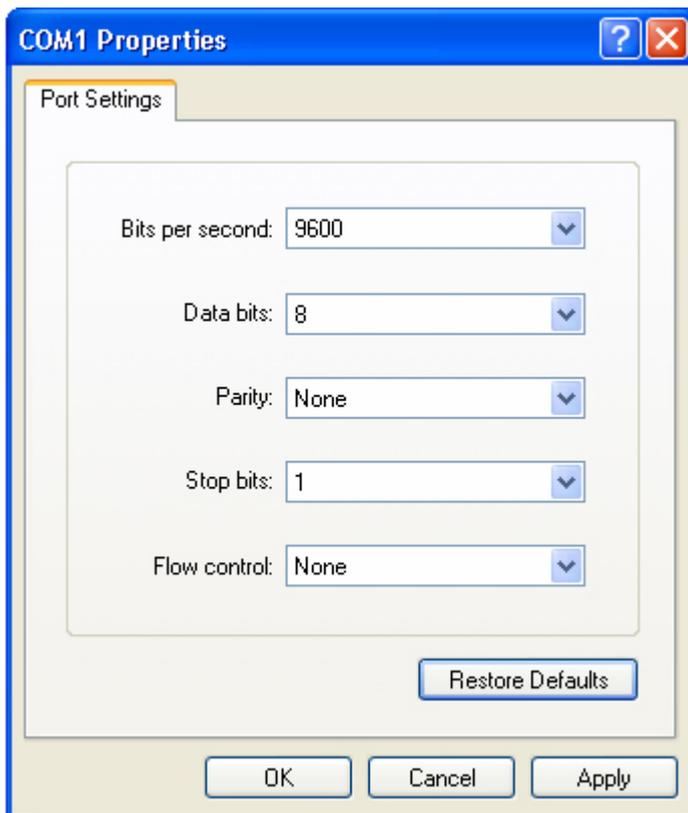

5) After setting the serial port parameters, click OK. The Hyperterminal window appears..

Power-on Startup

Checking Before Power-on

- The switch is fully grounded.
- The power cable is correctly connected.
- The power supply voltage complies with the requirement of the switch.
- The console cable is correctly connected; the terminal (can be a PC) used for configuration is already started; the parameters are already configured.

Checking After Power-on (Recommended)

After power-on, you are recommended to perform the following checks to ensure the normal operation of follow-up configurations.

- Check that information appears on the terminal interface.
- Check that the device indicator is normal.

Monitoring and Maintenance

RG-N18000 Monitoring

Indicators

When the RG-N18000 is running, you can monitor the status of each module by inspecting the status LED of the appropriate module.

- When the Alarm LED of the master supervisor module is red, it means the system has a fault, in which case you can log in to the management software to perform troubleshooting.
- When the Alarm LED of the master supervisor module is yellow, it means the system temperature exceeds the alarm temperature, affecting the system operation performance. However, the system can continue running. In this case, you can log in to the management software to perform troubleshooting.
- When the Status LED of the fan tray is red, it means that the fan tray is not power-on or the fan tray is faulty, you can log in to the management software to perform troubleshooting.
- When the Status LED of a module is OFF, RED, or blinking, it means that the module is faulty, in which case you need to find out the cause, and turn off the power when necessary.

CLI Commands

The RG-N18000 allows you to monitor various system statuses by executing the appropriate CLI commands, including:

- Module in-position status
- Port configuration information and status
- Fan and power supply working status
- Temperature status



Note

For the monitoring commands, see RG-N18000 series Software Configuration Guide.



Note

RG-N18000 supports remote maintenance. If RG-N18000 and the Internet are connected, the user can log in to the RG-N18000 via Telnet and maintain RG-N18000 remotely through various monitoring commands.

Hardware Maintenance

Module Maintenance

To replace a module, do replacement according to the instructions provided in Sections of Installing Modules and Removing Modules.

Cooling System Maintenance

- The fan in the equipment is provided with the fault monitoring signals. When the fan fails, an appropriate alarm will occur.
- To replace the fan, first loosen the captive screw on the fan tray.
- Replace the failed fan with a good one.
- Tighten the captive screws of the fan tray.



Caution

Complete fan replacement within 30 seconds when the device is electrified.

**Caution**

The air filter for the RG-N18000 shall be cleaned periodically (generally once every three months) by dry cleaning or washing. Do not rub during the cleaning or washing and flat dry after the cleaning or washing.

Power Supply Maintenance

When the power supply fails, you only need to disconnect the power cable, loosen the two panel screws on the power module, unplug the power module, replace it with a good one, and tighten the panel screws, and then connect the power cables.


Replacing Fuses

To replace the old fuse wire with the correspondent new one, please contact the technical support representatives of Ruijie Networks. The following table lists the specifications for the module fuses.

Module	Fuse Slot Number	Fuse Specification
M18014-CM	F1	F 10A/125V
	F2	F 5A/125V
M18010-CM	F1	F 10A/125V
	F2	F 5A/125V
M18014-CM II	F2	F 15A/65V
M18010-CM II	F1	F 15A/65V
M18000-24GT20SFP4XS-ED	F1	F 30A/125V
M18000-48GT-ED	F2	F 30A/125V
M18000-48GT-EF	F2	F 30A/125V
M18000-48GT-P-ED	F2, F3, F4	F 30A/125V
M18000-44SFP4XS-ED	F1	F 30A/125V
M18000-44SFP4XS-EF	F1	F 30A/125V
M18000-08XS-ED	F1	F 30A/125V
M18000-08XS-EF	F1	F 30A/125V
M18000-48XS-DB	F1	F 40A/60V
M18000-24QXS-DB	F1, F2	F 30A/125V
M18000-12QXS-DB	F1	F 30A/125V
M18000-24XS4QXS-DB	F1	F 40A/60V
M18000-44SFP4XS-CB	F1, F2	F 30A/125V
M18000-16XS-CB	F1	F 30A/125V
M18000-40XS-CB	F1, F2	F 30A/125V
M18000-16XT-CB	F1	F 30A/125V
M18000-10QXS-CB	F1, F2	F 30A/125V
RG-WALL 1600-B-ED	F1, F2	F 30A/125V
M18010-FE-CI	F1	F 15A/65V
M18010-FE-D I	F1	F 30A/125V
M18010-FE-D III	F1	F 40A/60V
M18014-FE-CI	F1	F 15A/65V
M18014-FE-C II	F1	F 30A/125V
M18014-FE-D I	F1	F 30A/125V
M18014-FE-D III	F1	F 30A/125V
M14-FAN	F3, F4, F5, F6	F 5A/125V
	F15	F 30A/125V
M10-FAN-R	F3, F4, F5, F6	F 5A/125V
	F15	F 30A/125V
M10-FAN-F	F1	F 40A/60V
	F3, F4, F5, F6, F7, F8	F 5A/125V

Troubleshooting

General Installation Troubleshooting Flow

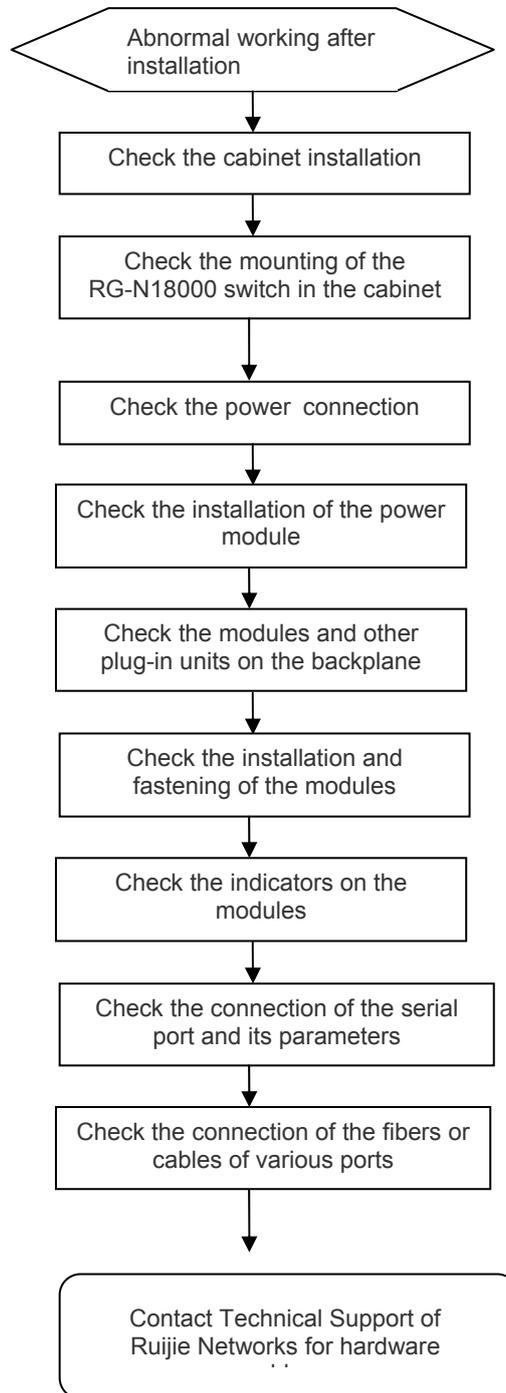

Common Troubleshooting Procedures

Fault 1: The AC power module does not work.

Fault Description:

The Status LED of each service module is OFF, the Power LED of the fan tray is OFF, and the fan does not work.

The LED on the panel of the power module is OFF. The fan does not work.

Troubleshooting:

First place the switches of all the power modules to OFF. Check if the cables of the cabinet have been correctly connected. Check whether the power cables are tightly connected to the cabinet power sockets and power modules. Check whether the power modules are installed correctly. If necessary, pull out the power modules and check whether the connectors on the backboard of the power system are tightened.

Fault 2: An exception occurs to the LEDs when service modules are powered on.

Fault Description:

The Status LED of the service module is OFF, blinking, or RED. The Link/ACT LED of the service module is solid ON when no network cable or fiber is plugged.

Troubleshooting:

Check if the service module is firmly inserted. If so, install the service module again and ensure that it is inserted into place before you tighten the fastening screws. If the service module still does not work, check if the connector of the slot on the backplane is loose. If yes, insert the service module to another slot for a try. If the slot and connection are not the cause, return the service module for repair.

Fault 3: The LED is abnormal after a service module works for some time.

Fault Description:

The Status LED of the service module is OFF or RED. The Link/ACT LED of the service module is solid ON when no network cable or fiber is plugged. The fault remains after restart.

Troubleshooting:

Check if the service module gets loose. If so, install the service module again and ensure that it is inserted into place before you tighten the fastening screws. If the module still does not work, check if the connector of the slot on the backplane is loose and check if the slide rail of the slot is deformed. If so, insert the service module to another slot for a try. If the slot and connection are not the cause, return the service module for repair.

Fault 4: The LED of the supervisor module is abnormal.

Fault Description:

The LED of the supervisor module becomes abnormal after the supervisor module is powered on or works for some time. For example, the Status LED is blinking or OFF, and the Alarm LED is red.

Troubleshooting:

Check if the supervisor module gets loose. If so, install the supervisor module again and ensure that it is inserted into place, before you tighten the fastening screws. If the supervisor module still does not work, check if the connector of the slot on the backplane is loose and check if the slide rail of the slot is deformed. If yes, insert the module to another slot for a try. If the slot and connection are not the cause, return the supervisor module for repair.

When the Alarm LED is red, the cause may be the fault of another module in the system, in which case you can check other modules (for example, service module, fan, power, and overheating) for any alarm. If yes, you should first handle the faults of other modules. You can also identify the faults by logging in to the management software.

Fault 5: The fan tray does not work or the LED is abnormal.

Fault Description:

After the system starts, the fans in the fan tray do not work or the status LED is OFF.

Troubleshooting:

Check if the connection between the fan tray and the backplane is secure and if the connector gets loose. If the connection is secure, you need to replace the fan tray.

Fault 6: The serial port console has no output.

Fault Description:

After the system is started, the serial port console does not display any information.

Troubleshooting:

Check whether serial port cables are connected correctly and whether the connected serial port is identical with that configured on the super terminal. Check whether the configuration of the serial port on the super terminal is the same as that described in *RG-N18000 Software Configuration Guide*. If not, modify the serial port configuration parameters. If there is still no serial port printed information, please contact Ruijie Customer Service Department for technical support.

Fault 7: The serial port console outputs illegible characters.

Fault Description:

The serial port console outputs illegible characters.

Troubleshooting:

Such problem is related to the settings of the serial port. Check if the settings of such parameters as the baud rate match those in *RG-N18000 series Software Configuration Guide*.

Fault 8: The newly-inserted service module fails to be powered on.

Fault Description:

The system is running, yet all LEDs on the panel of the newly-inserted service modules are OFF, and the port is faulty.

Troubleshooting:

Check whether the service module is connected correctly and whether the summary power of the newly-inserted service module and other modules in the system exceeds the maximum power. If so, please add more power modules to provide the enough power for the power supply. If all checkings are OK, but the newly-inserted service module still cannot be powered on, please contact Ruijie Customer Service Department for technical support.

Fault 9: The link cannot be set up between fiber interfaces

Fault Description:

The system runs normally. After the fiber interface is inserted into the optical module and the optical fiber is properly connected, the link cannot be set up.

Troubleshooting:

First confirm whether the interface is a copper/fiber combo interface. If yes, it should be configured in fiber mode. Then, do as follows:

- 1) Check whether the receiving and sending ends are wrongly connected. The sending end of the fiber interface needs to be connected to the receiving end of the other fiber interface. You can check by changing the sequence in which the two optical fibers are connected on the optical module.
- 2) Check whether the optical module wavelength of the two sides are consistent. For example, an optical module of 1310nm wavelength cannot be connected to an optical module of 1550nm wavelength.
- 3) Check whether the distance between the two sides exceeds the length indicated on the optical module.
- 4) Check whether the rates of the two sides match and whether the optical fiber type meets requirements. In addition, for ports supporting different rates, check whether rate modes are configured correctly.



Note

If above mentioned methods do not take effect, please contact Ruijie Networks for technology assistance.

Replacing Modules

Removing, Cleaning and Installing Air Filter




Caution After the air filter is used for a long time, the dust may block the holes on the air filter, affecting heat dissipation and ventilation. It is recommended that the air filter be cleaned every three months.

Removing, Cleaning and Installing Air Filters for Supervisor and Service Modules


- Install and remove the air filter of RG-N18014 supervisor and service modules:
 - 1) Loosen the captive screws on the air filter.
 - 2) Remove the air filter.
 - 3) Insert the air filter along the slide rail. Pay attention to the direction instruction on the air filter.
 - 4) Tighten the screws on the air filter with a screwdriver.

Figure 7-1 Installing and Removing the Air Filter of RG-N18014 Supervisor and Service Modules

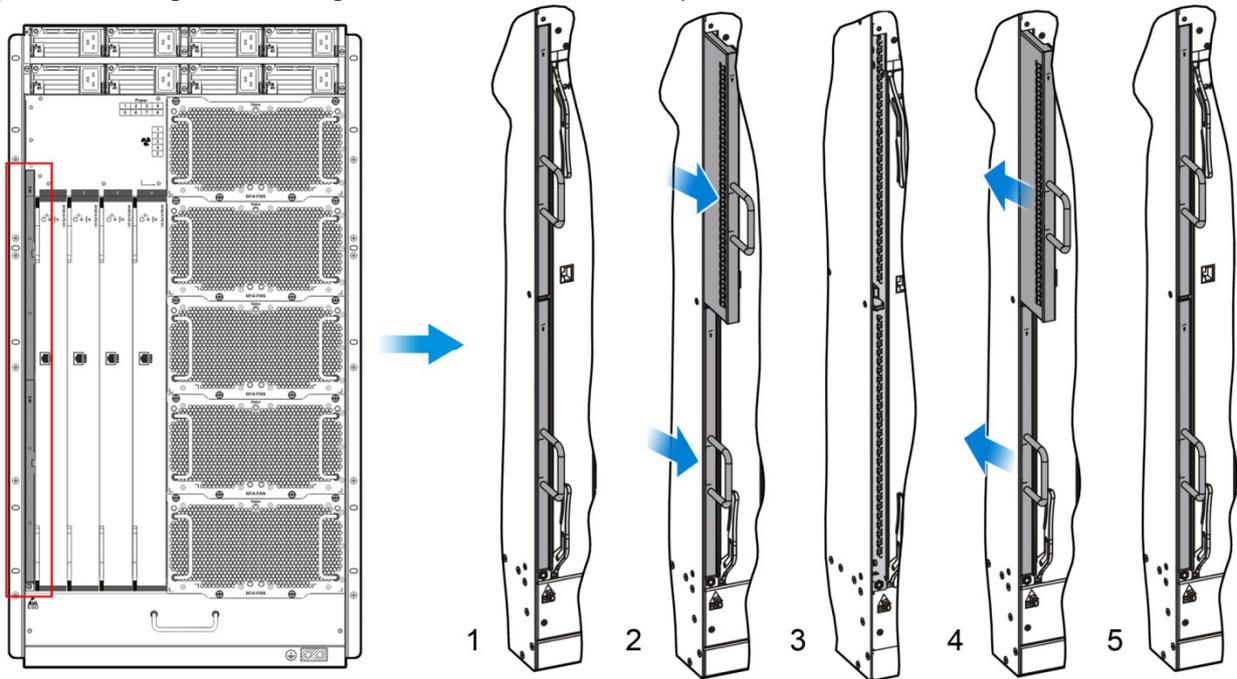

- Install and remove the air filter of RG-N18010 supervisor and service modules:
 - 1) Hold down the buttons on both sides of the plastic cover and remove the plastic cover.
 - 2) Loosen the screws on the air filter.
 - 3) Remove the air filter.
 - 4) Install air filter and tighten the screws.
 - 5) Install the plastic cover of the air filter by pressing the buttons on both sides of the plastic cover,

Figure 7-2 Installing and Removing the Air Filter of RG-N18010 Supervisor and Service Modules

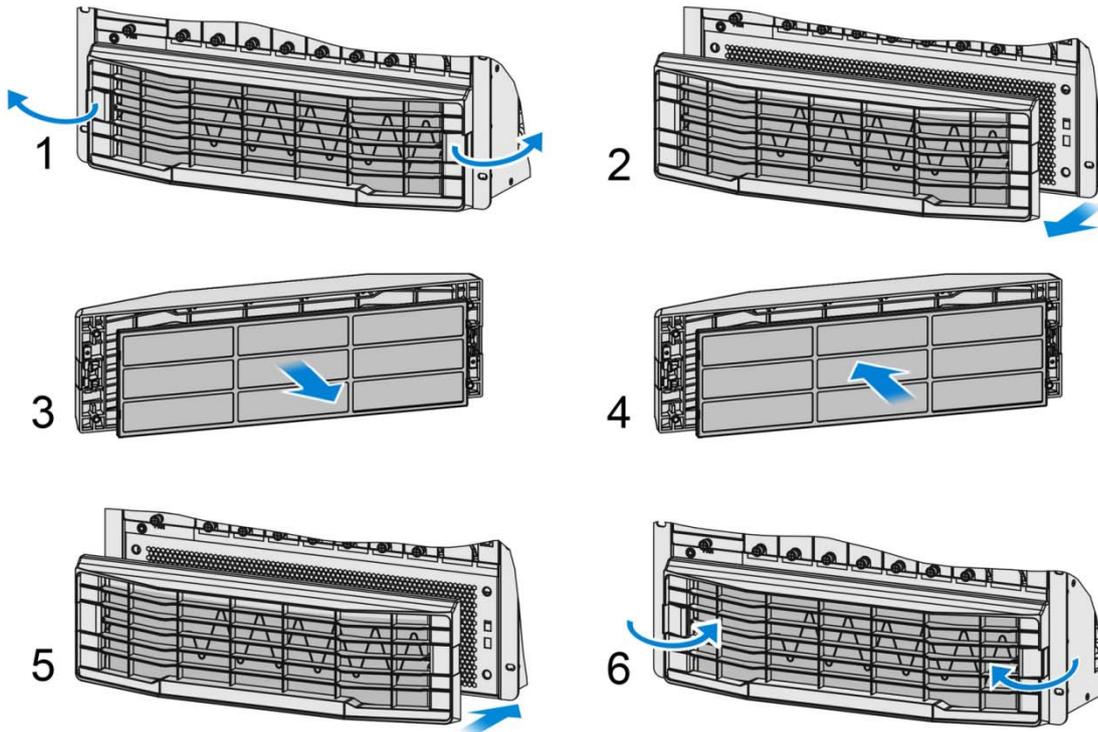

Removing, Cleaning and Installing Air Filter for Switch Fabric Module


- Install and remove the air filter of RG-N18014 switch fabric module:
 - 1) Hold down the buttons on both sides of the plastic cover and remove the plastic cover.
 - 2) Loosen the screws on the air filter.
 - 3) Remove the air filter.
 - 4) Install air filter and tighten the screws.
 - 5) Install the plastic cover of the air filter by pressing the buttons on both sides of the plastic cover,



Note The figure of Installing and removing the air filter of RG-N18014 switch fabric module is similar to figure 7-2.

- Install and remove the air filter of RG-N18010 switch fabric module:
 - 1) Hold down the buttons on both sides of the plastic cover and remove the plastic cover.
 - 2) Loosen the screws on the air filter.
 - 3) Remove the air filter.
 - 4) Install air filter and tighten the screws.
 - 5) Install the plastic cover of the air filter by pressing the buttons on both sides of the plastic cover,

Figure 7-3 Installing and Removing the Air Filter of RG-N18010 Switch Fabric Module

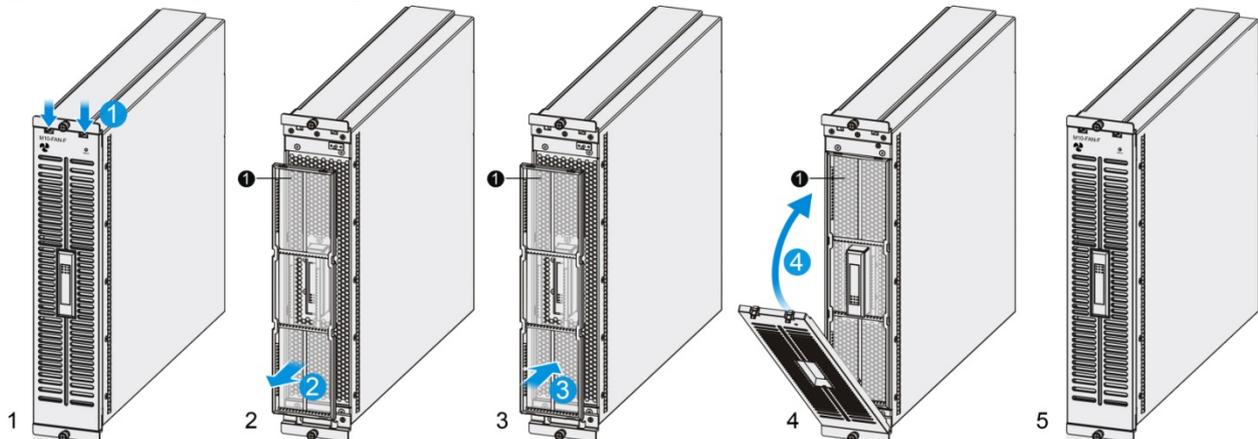


Removing Swappable Interface Modules (Optional)

Removing SFP+/SFP Modules

Take the following steps to remove SFP/SFP+ modules:

- 1) Unplug the optical fiber.
- 2) Turn down the handle of the module until it is horizontal. Pull the tab to take out the SFP/SFP+ module, as shown in figure 7-4.

Figure 7-4 Removing the SFP/SFP+ Module

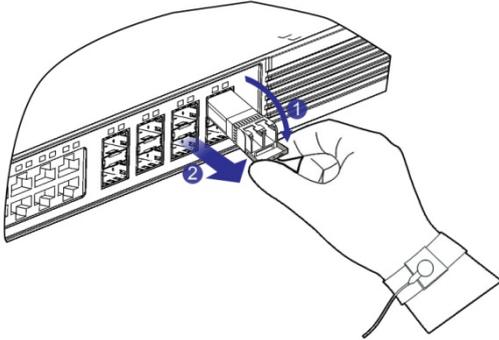


Precaution

- Unplug the optical fiber before removing the module.
- Do not pull out the module forcefully without turning down the handle of the module.
- Immediately install the dust plug to the module port and the switch fiber port.

Removing SFP+ Cables

Pull the tap out and unlock the module. Take out the SFP+ module gently, as shown in figure 7-5

Figure 7-5 Removing the SFP+ Cable

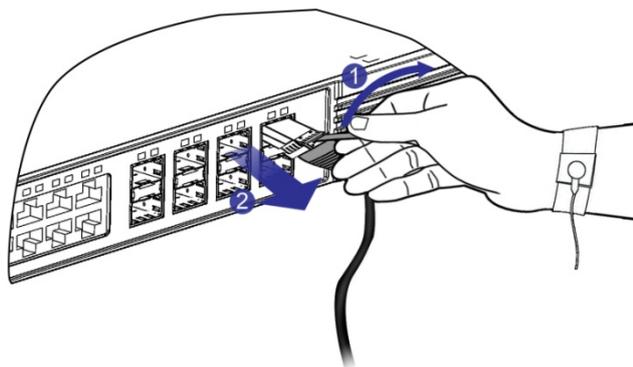

Precaution

- Pull the tab out before unplugging the cables. Otherwise, the module or the slot can be damaged.
- Immediately install the dust plug to the module port and the switch fiber port.

Removing 40-Gigabit QSFP+ Modules

- 1) Unplug the optical fiber.
- 2) If you want to remove the module equipped with a bail-clasp latch, turn down the handle of the module until it is horizontal and pull the bail-clasp latch to take out the QSFP+ module, as shown in figure 7-6. If you want to remove the module equipped with a pull tab, pull the tab to take out the QSFP+ module gently, as shown in figure 7-7:

Figure 7-6 Removing the QSFP+ Module Equipped a Bail-clasp Latch


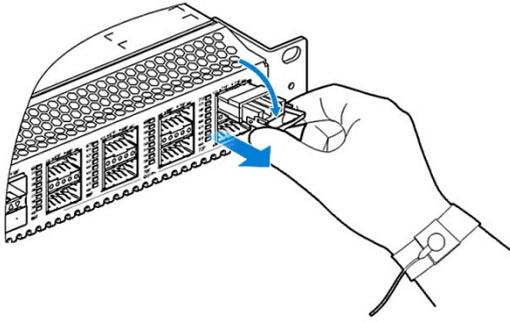


Figure 7-7 Removing the QSFP+ Module Equipped with a Pull-tab Latch

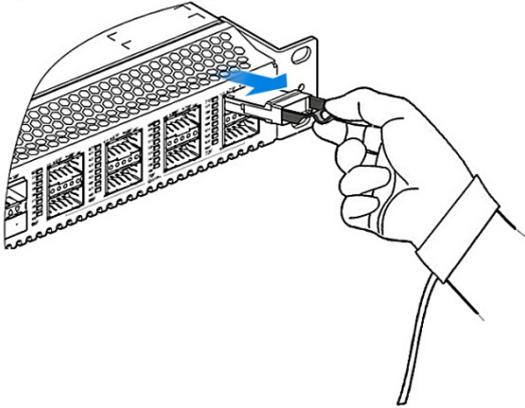


Precaution

- Unplug the optical fiber before removing the module.
- Do not pull out the module forcefully without turning down the handle of the module.
- Immediately install the dust plug to the module port and the switch fiber port.

Removing 40-Gigabit QSFP+ Cables

Hold the cable with one hand and grasp the tab to gently pull to release the module from the socket, as shown in figure 7-8:

Figure 7-8 Removing the QSFP+ Cable

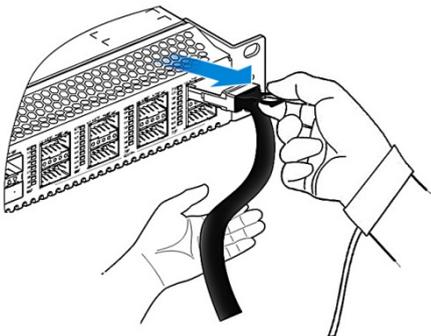

Precaution

- Pull the tab out before unplugging the cables. Otherwise, the module or the slot can be damaged.
- Immediately install the dust plug to the module port and the switch fiber port.

Replacing Modules

Preparation

- 1) Wear an anti-static wrist strap close to your skin and have it properly grounded.
- 2) Take out the module from the package.

Take the following steps to replace the module:

- 1) Unplug all cables/fibers such as fibers and RJ45 twisted pairs from the panel.

- 2) Hold down self-locking lever buttons on both sides of the panel and pull out the lever.
- 3) Drag the lever to pull the module out, Before the module is about to be removed from the chassis, support the bottom of the module with one hand and hold the module with the other hand, so as to prevent the module from falling.
- 4) Pull out the levers on both sides of the module. Support the bottom of the module with one hand and hold the module with the other hand to insert the module into the slot along the rail.
- 5) Drive the levers close to the module, and the module will hit the back panel. The module will be fastened after self-locking of levers.

Figure 7-9 Replacing the Module (for RG-N18014)


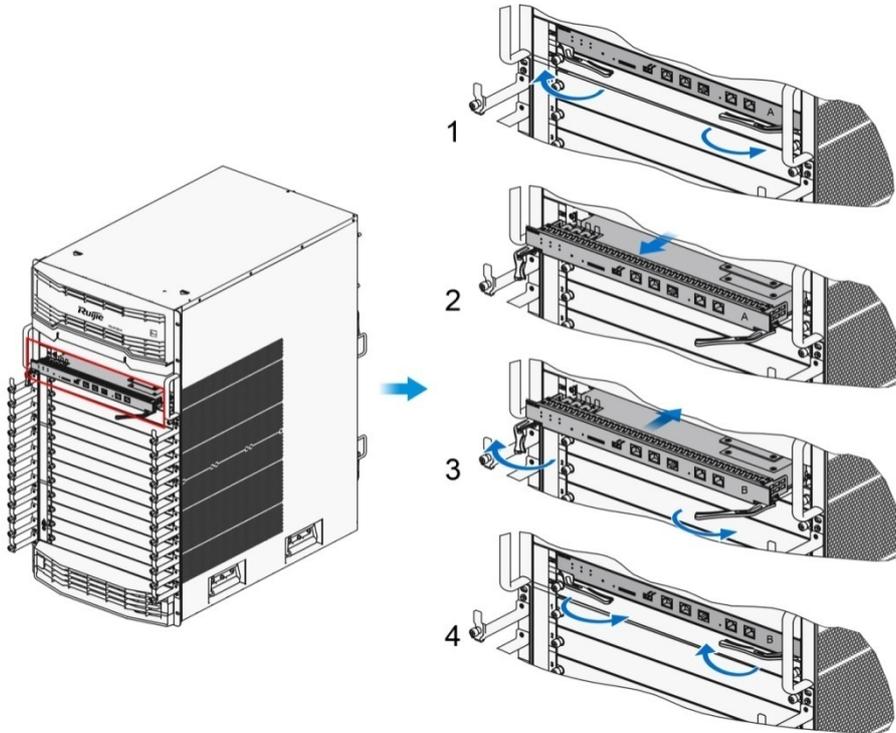


Figure 7-10 Replacing the Module (for RG-N18010)

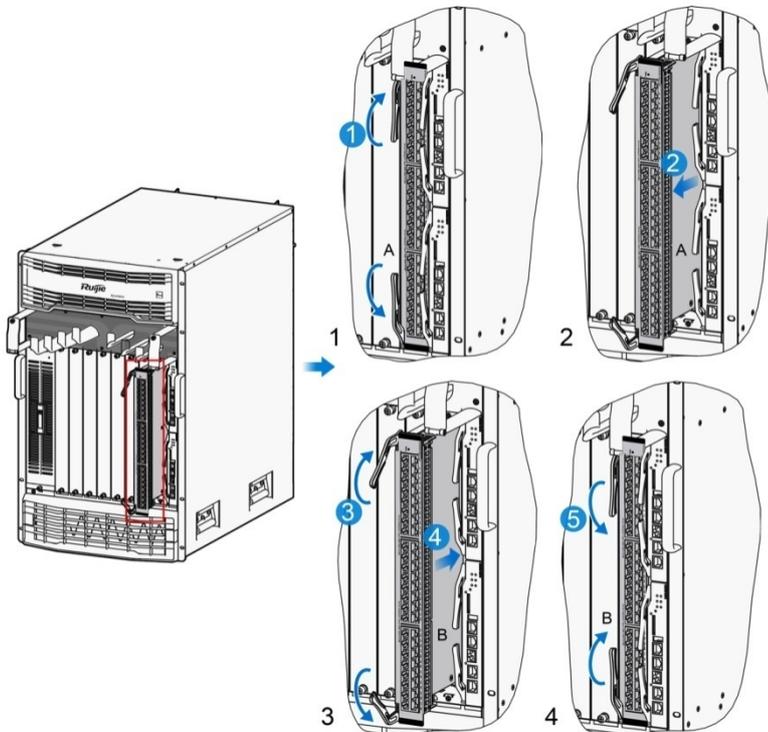

**Caution**

In order to ensure the reliability of the system ventilation and heat dissipation performance and address the requirement of the dust-filter, filler panel needs to be installed in the slot where no supervisor module or service module has been installed.

**Caution**

If you want to remove the module when the device is electrified, you need to insert the new module or install the filler panel within 10 minutes.

**Caution**

Do not hold the edge of the PCB or collide the components on the PCB

**Caution**

Do not plug/unplug a supervisor module or service module forcedly, use the ejector.

Removing Power Modules

Preparation

- 1) Wear an anti-static wrist strap close to your skin and have it properly grounded.
 - 2) Take out the power module from the package.
 - 3) Please power off the module before removing it.
-

**Caution**

After hot swapping a module, please wait for at least 30 seconds for the next operation.

**Caution**

Before inserting or removing the power module, please verify whether the switch is well mounted. Prevent the switch from tumbling down when you are inserting or removing the power module.


**Caution**

Do not touch the connecting finger on the power module which has been removed to avoid being electrocuted in case of incomplete discharge.

Take the following steps to remove the power module:

- 1) Unplug the cable. Separate the pigtail plug of the cable from the connector of the power module.
- 2) Unloosen the captive screws on the power module with the screwdriver.
- 3) Pull out the handle to make it vertical from the power panel.
- 4) Drag the power module panel with one hand and support the bottom of the power module with the other hand to pull out the power module.
- 5) Insert the power module into the slot until it hits the back panel.
- 6) Drive the handle close to the panel.
- 7) Tighten the captive screws on the panel with the screwdriver.

Figure 7-11 Removing the Power Module

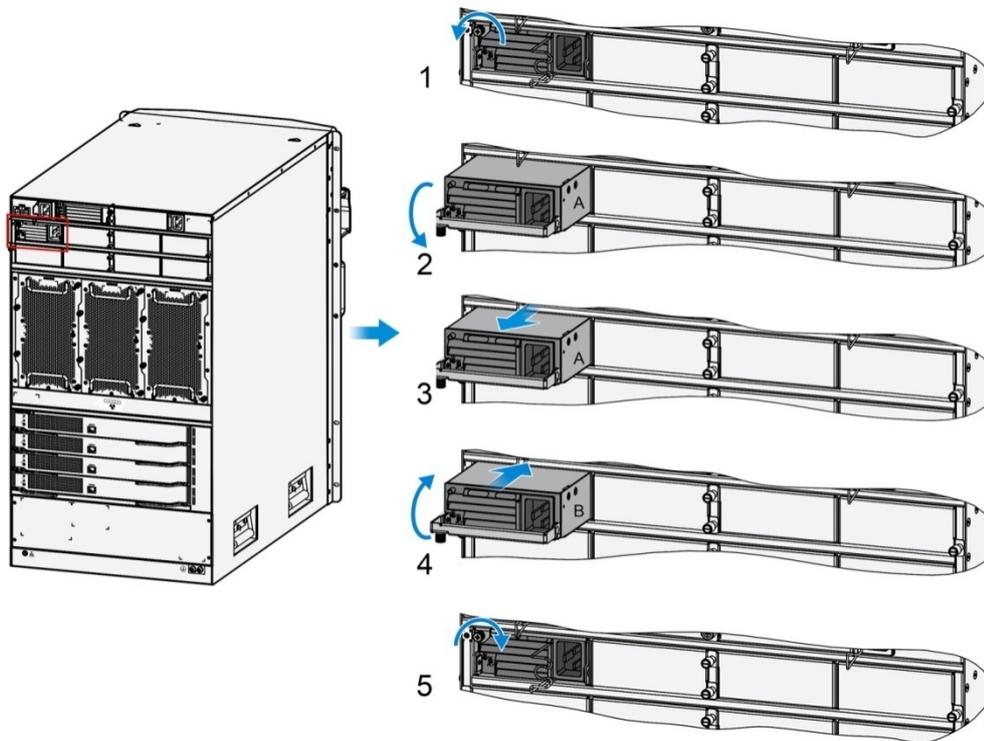

Note: A: Power modules to be removed

B: Power module to be installed

Removing Fans



Caution Do not touch any bare wire, terminal or the power instruction on the switch.



Caution The fan tray supports hot swapping. If you want to remove the fan tray when the switch is operational, do not remove the fan tray until the fan stops rotating. Besides, do not put your hands inside the fan tray.



Caution If you remove the fan tray when the switch is operational, install another fan tray quickly to ensure normal operation of the switch and avoid damage to the switch.

Preparation

- 1) Wear an anti-static wrist strap close to your skin and have it properly grounded.
- 2) Take out the fan module from the package.

Take the following steps to remove the fan module:

- 1) Unloosen the captive screws on the fan tray with the Phillips screwdriver.
- 2) Pull out the fan tray and put it in the anti-static bag.
- 3) Insert the fan tray into the slot along the slide rail until the fan tray hits the back panel.
- 4) Tighten the captive screws on the fan tray with the Phillips screwdriver.

Figure 7-12 Removing the Fan for RG-N18010 Supervisor and Service Modules

**Note**

Figures of removing fans for RG-N18014 supervisor, service and switch fabric modules are similar to figure 7-12

Cables



Note

This chapter describes the precautions and simple steps for cable connection and bundling. See *Appendix D Cabling Recommendations in Installation* for detailed cabling and bundling.

Connecting the External Port Cables

Precautions

- Correctly distinguish single-mode and multi-mode fibers and ports.
- Avoid bends of small radius at the connector.

Simple Connection Steps

- 1) Connect one end of the RJ45 connector for configuring Ethernet cables to the Ethernet interface of the device module and the other end to the NMS or a control terminal; or connect one end of the standard RJ45 serial port cable to the serial port of the device module and the other end to the NMS or a control terminal.
- 2) Insert the single-mode or multi-mode fiber into the appropriate interface according to the identification on the panel of the module. Distinguish the Rx/Tx end of the fiber.
- 3) Insert the twisted pair with the RJ45 port into the appropriate interface according to the identification on the panel of the module. Distinguish the crossover cable and straight-through cable.
- 4) Connect the cables and fibers of each module in sequence.

Bundling the Cables

Precautions

- The power cables and other cables should be bundled in a visually pleasing way.
- When you bundle fibers, make sure that the fibers at the connectors have natural bends or bends of large radius.
- Do not bundle fibers and twisted pairs too tightly, as this may press hard the fibers and affect their useful life and transmission performance.

Simple Bundling Steps

- 1) Bundle the drooping part of the fibers and twisted pairs of each module, and lead them to both sides of the chassis for convenience.
- 2) On the both sides of the chassis, fasten the fibers and twisted pairs to the cabinet cable management ring or bracket.
- 3) For the power cables, you should bundle them closely along the bottom of the chassis, in a straight line wherever possible.

Appendix A Connectors and Media


1000BASE-T/100BASE-TX/10BASE-T

The 1000BASE-T/100BASE-TX/10BASE-T is a 10/100/1000 Mbps auto-negotiation port that supports auto MDI/MDIX.

Compliant with IEEE 802.3ab, 1000BASE-T requires Category 5e 100-ohm UTP or STP (STP is recommended) with a maximum distance of 100 meters (328 feet).

1000BASE-T requires all four pairs of wires be connected for data transmission, as shown in Figure A-1

Figure A-1 1000BASE-T Connection

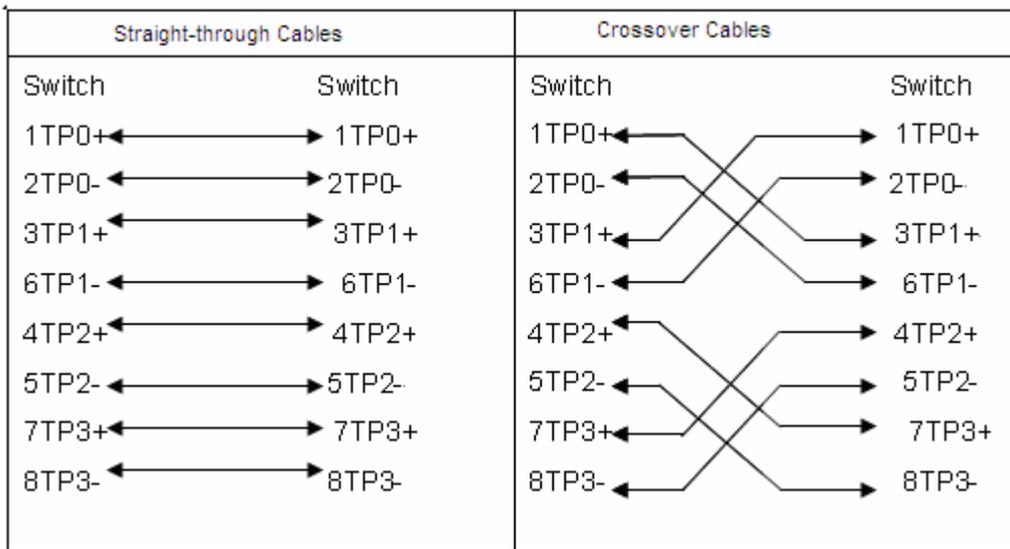


10BASE-T uses Category 3, 4, 5 100-ohm UTP/STP and 1000BASE-T uses Category 5 100-ohm UTP/STP for connections. Both support a maximum length of 100 meters. Figure A-2 shows 100BASE-TX/10BASE-T pin assignments.

Figure A-2 100BASE-TX/10BASE-T Pin Assignments.

Pin	Socket	Plug
1	Input Receive Data+	Output Transmit Data+
2	Input Receive Data-	Output Transmit Data-
3	Output Transmit Data+	Input Receive Data+
6	Output Transmit Data-	Input Receive Data-
4,5,7,8	Not Used	Not Used

Figure A-3 shows wiring of straight-through and crossover cables for 100BASE-TX/10BASE-T.


Figure A-3 100BASE-TX/10BASE-T Connection

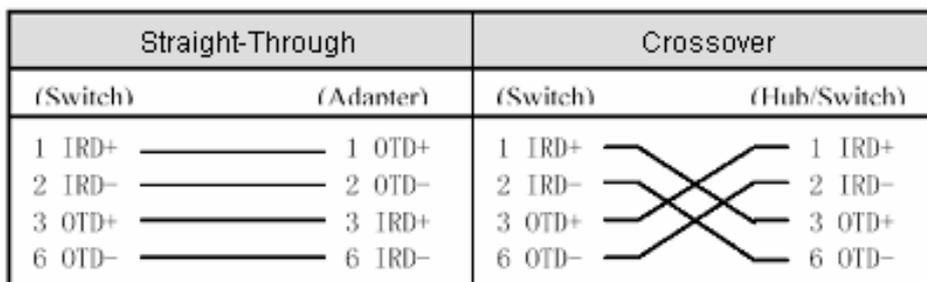

Fiber Connection

You can choose to use single mode or multimode fibers according to the transceiver module types. Figure A-4 shows connection of fiber cables.

Figure A-4 Fiber Connection

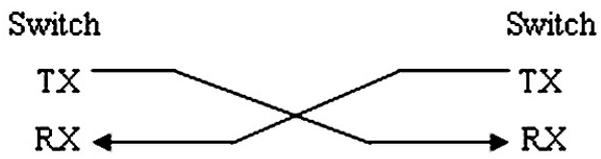

Appendix B Mini-GBIC, 10-Gigabit SFP+ and 40-Gigabit QSFP+ Modules Specifications

Ruijie provides various Gigabit SFP (Mini-GBIC modules), 10-Gigabit SFP+ and 40-Gigabit QSFP+ transceivers for interfaces of modules on the switch. You can select the most suitable SFP, SFP+ or QSFP+ transceivers as needed. This appendix describes the models and specifications of some of the Gigabit SFP, 10-Gigabit and 40-Gigabit QSFP+ transceivers for your reference.

Mini-GBIC (SFP) Models and Specifications

Table B-1 Models and Specifications of SFP Modules

Mini-GBIC(SFP)	Wavelength (nm)	Fiber type	Support DDM (Yes/No)	Transmit(dBm)		Receive(dBm)	
				MIN	MAX	MIN	MAX
FE-SFP-LX-MM1310	1310	MMF	Yes	-22	-14	-30	-14
FE-SFP-LH15-SM1310	1310	SMF	Yes	-15	-8	-28	-8
Mini-GBIC-SX	850	MMF	No	-9.5	-3	-17	0
Mini-GBIC-LX	1310	SMF	No	-9.5	-3	-20	-3
GE-eSFP-SX-MM850	850	MMF	Yes	-9.5	-3	-17	0
GE-eSFP-LX-SM1310	1310	SMF	Yes	-9.5	-3	-20	-3
Mini-GBIC-LH40	1310	SMF	Yes	-2	3	-22	-3
Mini-GBIC-ZX50	1550	SMF	Yes	-5	0	-22	-3
Mini-GBIC-ZX80	1550	SMF	Yes	0	4.7	-22	-3
Mini-GBIC-ZX100	1550	SMF	Yes	0	5	-30	-9
SDH155-SFP-SX-MM850	850	MMF	No	-10	-4	-25	0
SDH155-SFP-SX-MM1310	1310	MMF	No	-20	-14	-30	-14
SDH155-SFP-LH15-SM1310	1310	SMF	No	-15	-8	-28	-8
SDH155-SFP-LH40-SM1310	1310	SMF	No	-5	0	-34	-8
SDH155-SFP-LH80-SM1310	1310	SMF	No	-5	0	-34	-8

Table B-2 Module cabling specification

Mini-GBIC(SFP)	Wavelength (nm)	Fiber Type	Core Size(μm)	Cable Distance
FE-SFP-LX-MM1310	1310	MMF	62.5/125	2km
FE-SFP-LH15-SM1310	1310	SMF	9/125	15km
Mini-GBIC-SX	850	MMF	62.5/125	275m
			50/125	550m
Mini-GBIC-LX	1310	SMF	9/125	10km
GE-eSFP-SX-MM850	850	MMF	62.5/125	275m
			50/125	550m
GE-eSFP-LX-SM1310	1310	SMF	9/125	10km
Mini-GBIC-LH40	1310	SMF	9/125	40km
Mini-GBIC-ZX50	1550	SMF	9/125	50km
Mini-GBIC-ZX80				80km
Mini-GBIC-ZX100				100km
SDH155-SFP-SX-MM850	850	MMF	62.5/125	500m
SDH155-SFP-SX-MM1310	1310			2km
SDH155-SFP-LH15-SM1310	1310	SMF	9/125	15km
SDH155-SFP-LH40-SM1310				40km
SDH155-SFP-LH80-SM1550	1550	SMF	9/125	80km

10-Gigabit SFP+ Models and Specifications

Table B-3 Existing 10-Gigabit SFP+ Optical Cable Models

Model	Wave length (nm)	Fiber Type	Core Size (μm)	Modular Bandwidth (MHz·km)	Cable Distance	Sending Optical Density	Receiving Optical Density (dBm)
-------	------------------	------------	----------------	----------------------------	----------------	-------------------------	---------------------------------

						(dBm)		MIN	MAX
						MIN	MAX		
XG-SFP-SR-MM850	850	MMF (LC connector)	62.5	200	33m	-5	-1	-7.5	0.5
				160	26m				
			50	2000	300m				
				500	82m				
				400	66m				
XG-SFP-LR-SM1310	1310	SMF (LC connector)	9	N/A	10km	-8.2	0.5	-10.3	0.5
XG-SFP-ER-SM1550	1550	SMF (LC connector)	9	N/A	40km	-4.7	4	-11.3	-1

Table B-4 Existing 10-Gigabit SFP+ Copper Cable Models

Model	Module Type	Connector	Length(m)	Conductor diameter(AWG)	Data Rate(Gb/s)	Support DDM (Yes/No)
XG-SFP-CU1M	Passive	SFP+	1	28	10.3125	No
XG-SFP-CU3M	Passive	SFP+	3	28	10.3125	No
XG-SFP-CU5M	Passive	SFP+	5	26	10.3125	No

40-Gigabit QSFP+ Models and Specifications

Table B-5 Models and Specifications of 40-Gigabit QSFP+ Modules

Model	Wavelength (nm)	Fiber Type	Core Size (nm)	Modular Bandwidth (MHz/km)	Cable distance	Support DDM (Yes/No)	Sending Optical Density (dBm)	Receiving Optical Density (dBm)
40G-Q SFP-S R-MM8 50	850	MMF (MPO connector)	50	2000	100m(OM3)	Yes	-7.6 to 2.4 (Perlane)	-9.5 to 2.4 (Perlane)
			50	4700	150m(OM4)			

¹ MMF=Multi-mode fiber


² SMF=Single-mode fiber

Appendix C Switch Lightning Protection

Installing AC Power Arrester (lightning protection cable row)

The external lightning protection cable row shall be used on the AC power port to prevent the switch from being struck by lightning when the AC power cable is introduced from the outdoor and directly connected to the power port of the switch. The lightning protection cable row is fixed on the cabinet, operating table or the wall in the machine room using the line buttons and screws.

Figure C-1 Schematic Diagram for the Power Arrester

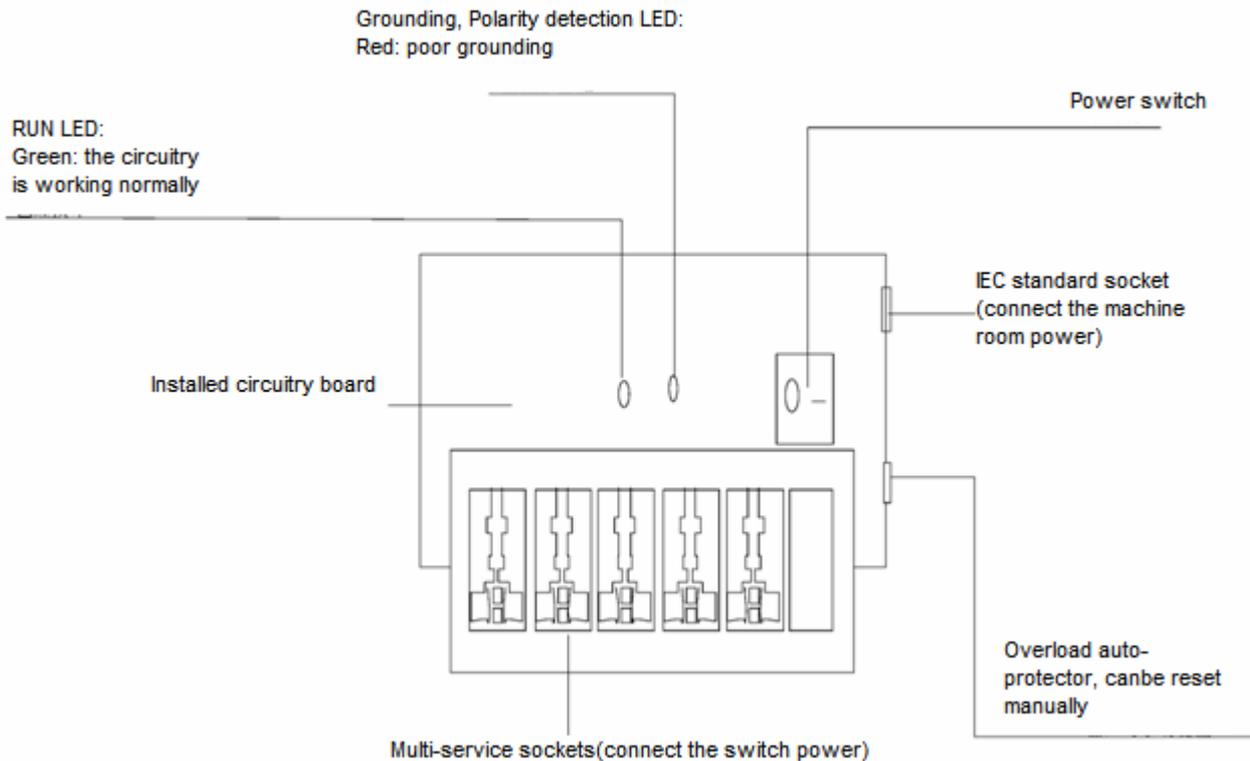

The power arrester is not provided and the user shall purchase it to address the practical requirement.

Precautions for installation:

- Make sure that the PE terminal of the power arrester has been well-grounded;
- After connecting the switch AC power plug to the socket of the power arrester (lightning protection socket), lightning protection function implements if the RUN LED is Green and the ALARM LED is OFF.
- If the ALARM LED on the power arrester is Red, you shall check what the reason is, poor grounding connection or the reversed connection of the Null and Live lines: Use the multimeter to check the polarity of the power socket for the arrester when the LED is Red, if the N line is on the left and the L line is on the right, the arrester PE terminal is not grounded; if the L line is on the left and the N line is on the right, the polarity of the arrester power cable shall be reversed; if the LED is still Red, it is confirmed that the arrester PE terminal has not been grounded.

Installing the Ethernet Port Arrester


During the switch usage, the Ethernet port arrester shall be connected to the switch to prevent the switch damage by lightning before the outdoor network cable connects to the switch.

Tools: Cross or straight screwdriver, Multimeter, Diagonal pliers

Installation Steps:

- 1) Tear one side of the protection paper for the double-sided adhesive tape and paste the tape to the framework of the Ethernet port arrester. Tear the other side of the protection paper for the double-sided adhesive tape and paste the Ethernet port arrester to the switch framework. The paste location for the Ethernet port arrester shall be as close to the grounding terminal of the switch.
- 2) Based on the distance of the switch grounding terminal, cut the grounding line for the Ethernet port arrester and firmly tighten the grounding line to the grounding terminal of the switch.
- 3) Use the multimeter to check whether the grounding line for the arrester is in good contact with the switch grounding terminal and the framework.
- 4) According to the description on the Ethernet Port Arrester Hardware Installation Guide, connect the arrester using the adapter cable (note that the external network cable is connected to the end of IN, while the adapter cable connected to the switch is connected to the end of OUT) and observe whether the LED on the board is normal or not.
- 5) Use the nylon button to bundle the power cables.

Figure C-2 Schematic Diagram for the Ethernet port Arrester Installation

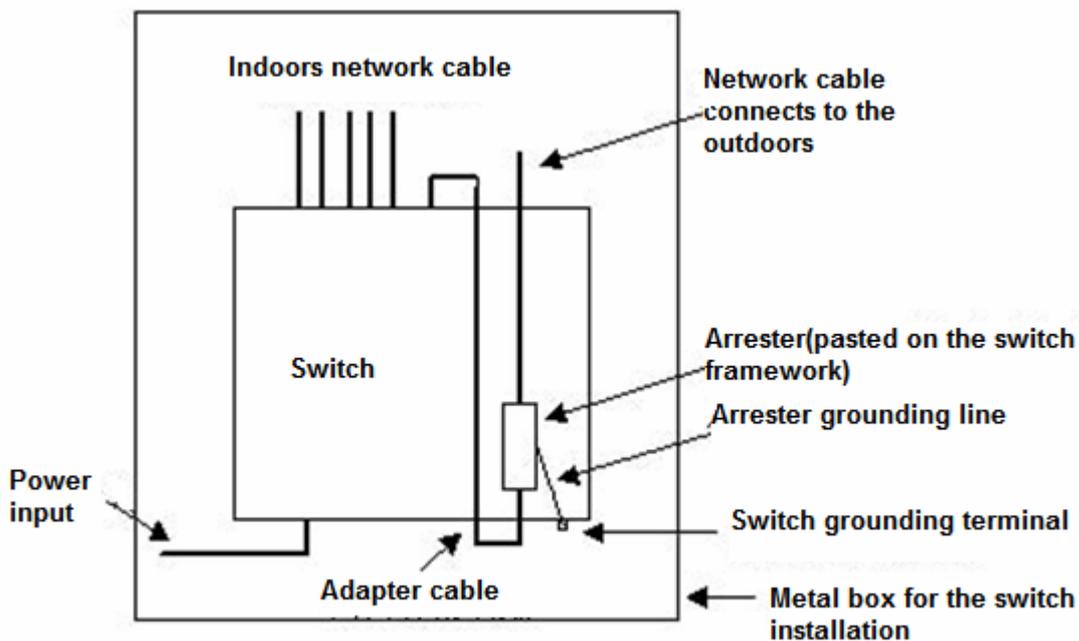

The Ethernet port arrester is only for the 10M/100M copper Ethernet ports with the RJ-45 connector;

The Ethernet port arrester is not provided, the user can purchase them to address their own practical requirements. For the detailed information during the arrester installation, please refer to Ethernet Port Arrester Hardware Installation Guide, which contains the technical specification and the maintenance and installation of the arrester.

You may pay attention to the following conditions during the actual installation to avoid influencing the performance of the Ethernet port arrester:

- Reversed direction of the arrester installation. You shall connect the external network cable to the “IN” end and connect the switch Ethernet port to the “OUT” end.
- Poor arrester grounding. The length of the grounding line should be as short as possible to ensure that it is in good contact with the switch grounding terminal. Use the multimeter to confirm the contact condition after the grounding.
- Incomplete arrester installation. If there is more than one port connected to the peer device on the switch, it needs to install the arresters on all connection ports for the purpose of the lightning protection.

Appendix D Cabling Recommendations in Installation

When RG-N18000 series switches are installed in standard 19-inch cabinets, route cable bundles upward or downward along the sides of the rack depending on the actual situation in the equipment room. All cable connectors should be placed at the bottom of the cabinet rather than be exposed outside of the cabinet. Power cords should be routed upward or downward beside the cabinet close to the location of the DC power distribution cabinet, AC power outlet, or lightning protection box.


Required Minimum Cable Bend Radius

- The minimum bend radius of a power, communication or flat cable should be 5 times the overall diameter of the cable. If the cable is constantly bent, plugged or unplugged, the bend radius should be 7 times the overall diameter.
- The minimum bend radius of a coaxial cable should be 7 times the overall diameter of the cable. If the cable is constantly bent, plugged or unplugged, the bend radius should be 10 times the overall diameter.
- The minimum bend radius of a high-speed cable, such as an SFP+ cable should be 5 times the overall diameter of the cable. If the cable is constantly bent, plugged or unplugged, the bend radius should be 10 times the overall diameter. Required minimum fiber bend radius
- The diameter of a fiber tray to hold fibers cannot be less than 25 times the diameter of the fiber.
- When moving an optical fiber, the bend radius of the fiber should be equal to or greater than 20 times the diameter of the fiber.
- During cabling of an optical fiber, the bend radius of the fiber should be equal to or greater than 10 times the diameter of the fiber.

Precautions for Cable Bundling


- Before bundling cables, correctly mark labels and stick the labels to cables where appropriate.
- Cables should be neatly and properly bundled, as shown in Figure D-1.

Figure D-1 Bundling Cables

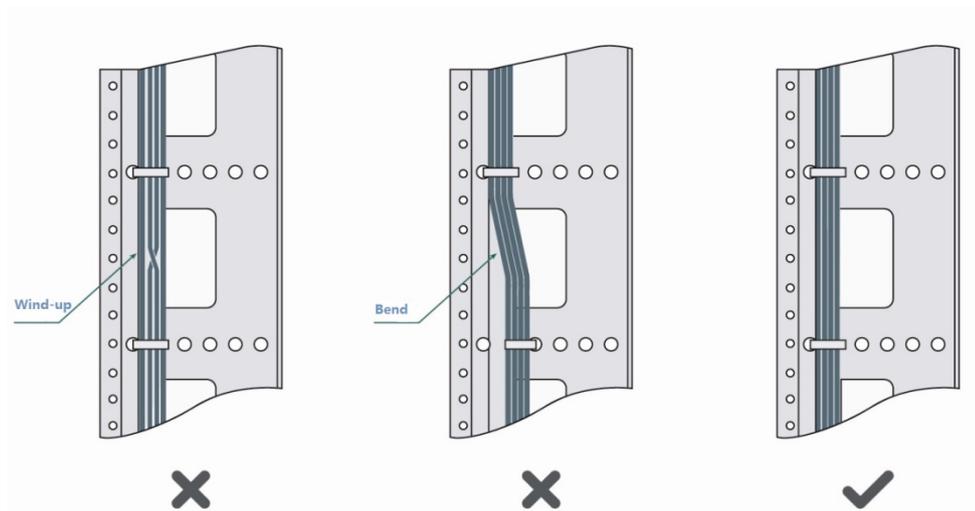


- Route and bundle power, signal, ground cables separately. When the cables are close to each other, cross them. When power cables run parallel to signal cables, the distance between them must be
- All cable trays and their accessories shall be smooth and free from sharp edges.
- Holes in metal, through which cables pass shall have smooth, well-rounded surfaces or be protected with insulating bushings.
- Use proper cable ties to bind cables together. Do not tie two or more cable ties to bind cables.
- Cut off excess cable tie cleanly with no sharp edges after bundling cables, as shown in Figure D-2.

Figure D-2 Cutting off Excess Cable Tie

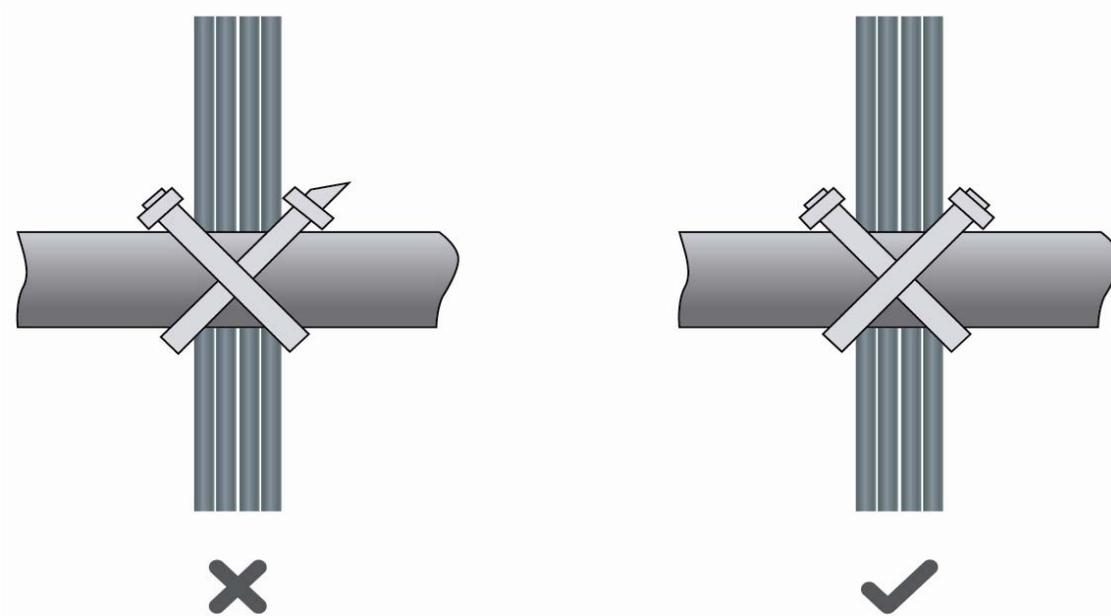


- If cables are to be bent, bind them first but do not tie cable ties within the bend to avoid stress on the cables, which may otherwise cause the wires inside to break, as shown in Figure D-3.

Figure D-3 Do Not Tie Cable Ties within the Bend

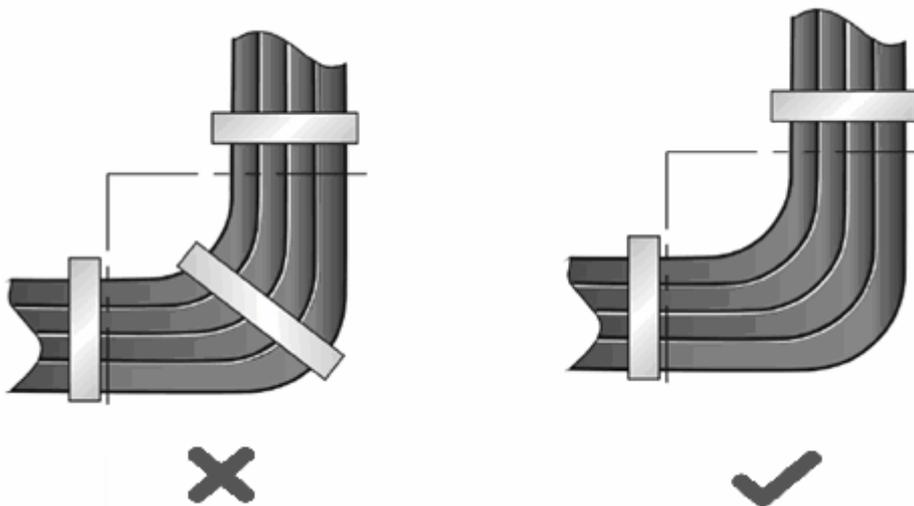

- Wrap up unnecessary or excess cables and bind them to the appropriate rack position, where device operation is not affected and no damages occur to the device and cables during debugging.
- Do not bind power cords to the rails for moving parts.
- Leave a certain length of the cable connecting moving parts, such as the ground wire of the cabinet door, to avoid stress on the cable; When moving parts are in place, ensure the excess cable length shall not contact heat sources, sharp corners or edges. If heat sources are unavoidable, use high-temperature cables instead.
- When using screws to fasten cable lugs, the bolts or nuts shall be tightened and prevented from loosening, as shown in Figure D-4.

Figure D-4 Fastening Cable Lugs

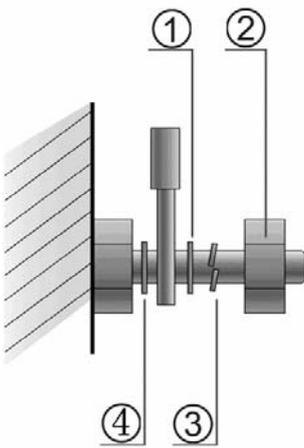

Note

1. Flat washer	3. Spring washer
2. Nut	4. Flat washer

- When using a stiff cable, fix it near the cable lug to avoid stress on the lug and cable.
- Do not use self-tapping screws to fasten terminals.
- Bundle cables of the same type and running in the same direction into groups. Keep cables clean and straight.
- Cables shall be tied according to the following table.

Diameter of Cable Bundle (mm)	Space between Bundles (mm)
10	80 to 150
10 to 30	150 to 200
30	200 to 300

- Do not tie knots for cables or cable bundles.
- The metal parts of the cold-pressed terminal blocks, such as air circuit breakers, shall not be exposed outside of the blocks.

Appendix E Site Selection

- The machine room should be at least 5km away from the heavy pollution source such as the smelter, coal mine and thermal power plant, 3.7km away from the medium pollution source such as the chemical industry, rubber industry and electroplating industry, and 2km away from the light pollution source such as the food manufacturer and leather plant. If the pollution source is unavoidable, the machine room should be located on the windward side of the pollution source perennially with advanced protection.
- The machine room should be at least 3.7km away from the sea or salt lake. Otherwise, the machine room must be sealed, with air conditioner installed for temperature control. Saline soil cannot be used for construction. Otherwise, you should select devices with advanced protection against severe environment.
- Do not build the machine room in the proximity of livestock farms. Otherwise, the machine room should be located on the windward side of the pollution source perennially. The previous livestock house or fertilizer warehouse cannot be used as the machine room.
- The machine room should be firm enough to withstand severe weather conditions such as windstorm and heavy rain as well as away from dust. If the dust is unavoidable, keep the door and window away from the pollution source.
- The machine room should be away from the residential area. Otherwise, the machine room should meet the construction standard in terms of noise.
- Make sure the air vent of the machine room is away from the sewage pipe, septic tank, and sewage treatment tank. Keep the machine room under positive pressure to prevent corrosive gas from entering the machine room to corrode components and circuit boards. Keep the machine room away from industrial boiler and heating boiler.
- The machine room had better be on the second floor or above. Otherwise, the machine room floor should be 600mm higher than the highest flood level ever recorded.
- Make sure there are no cracks or holes in the wall and floor. If there are cable entries in the wall or window, take proper sealing measures. Ensure that the wall is flat, wear-resistant, and dust-free, which should be up to the standard for flame retarding, soundproofing, heat absorption, dust reduction, and electromagnetic shielding.
- Keep the door and the window closed to make the machine room sealed.
- The steel door is recommended for soundproofing.
- Sulfur-containing materials are forbidden.
- Pay attention to the location of the air conditioner. Keep the air conditioner from blowing wind straight toward the device or blowing water drops from the window or air vent toward the device.